

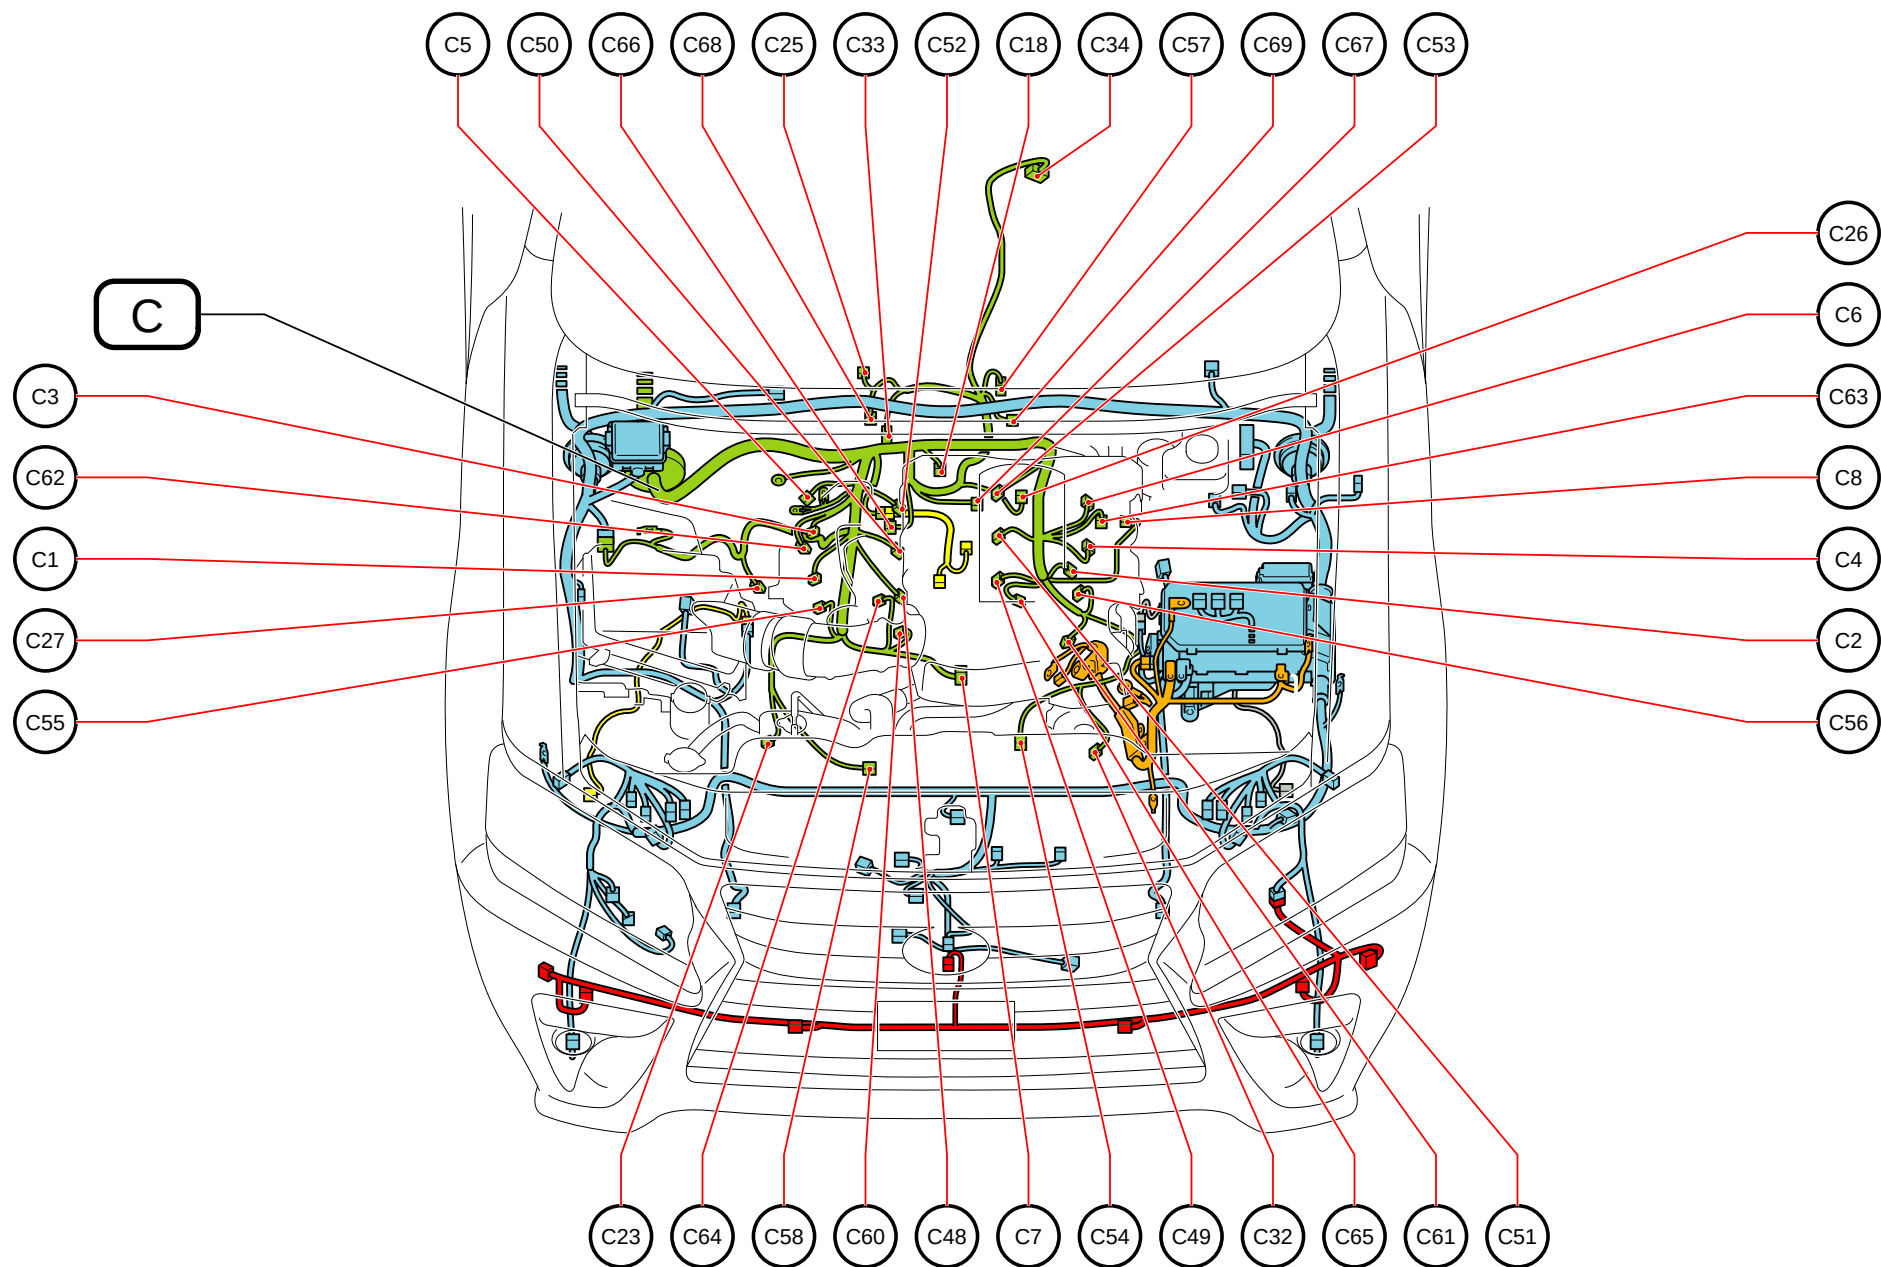
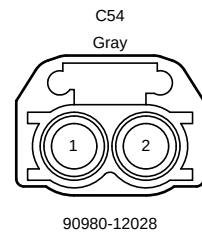
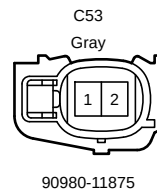
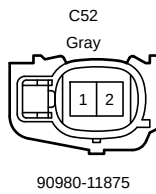
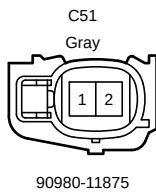
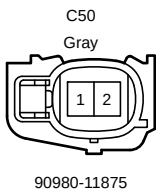
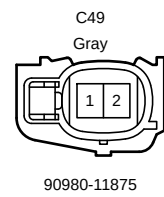
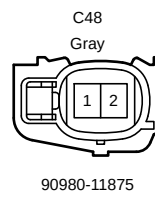
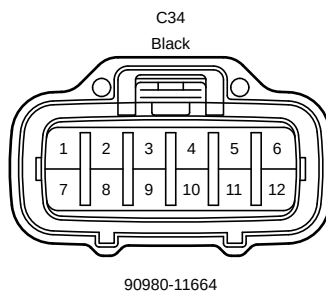
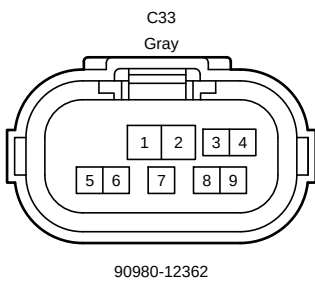
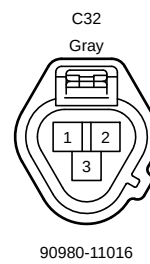
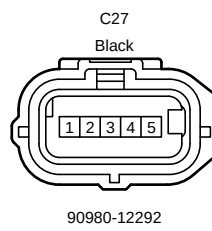
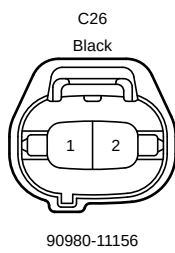
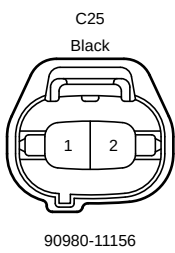
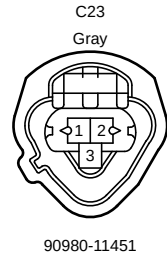
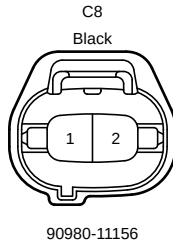
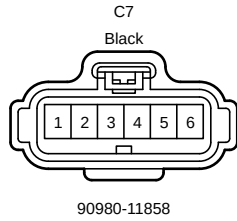
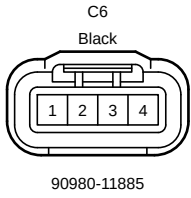
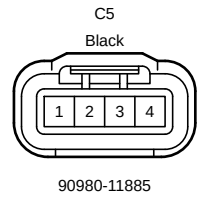
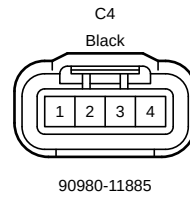
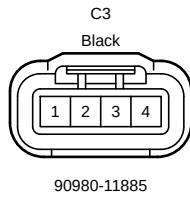


# Position of Parts in Engine Compartment (1GR-FE)

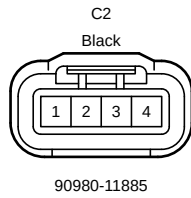

|     |                                                         |
|-----|---------------------------------------------------------|
| C1  | Ignition Coil Assembly No. 1                            |
| C2  | Ignition Coil Assembly No. 2                            |
| C3  | Ignition Coil Assembly No. 3                            |
| C4  | Ignition Coil Assembly No. 4                            |
| C5  | Ignition Coil Assembly No. 5                            |
| C6  | Ignition Coil Assembly No. 6                            |
| C7  | Throttle Body Assembly                                  |
| C8  | Purge VSV                                               |
| C18 | E.F.I. Engine Coolant Temperature Sensor                |
| C23 | Power Steering Oil Pressure Switch                      |
| C25 | Transmission Revolution Sensor (Counter Gear)           |
| C26 | Transmission Revolution Sensor (Turbine)                |
| C27 | Intake Air Flow Meter Assembly                          |
| C32 | Cooler Compressor Assembly                              |
| C33 | Park/Neutral Position Switch                            |
| C34 | Transfer Shift Actuator Assembly                        |
| C48 | Fuel Injector Assembly No. 1                            |
| C49 | Fuel Injector Assembly No. 2                            |
| C50 | Fuel Injector Assembly No. 3                            |
| C51 | Fuel Injector Assembly No. 4                            |
| C52 | Fuel Injector Assembly No. 5                            |
| C53 | Fuel Injector Assembly No. 6                            |
| C54 | Crank Position Sensor                                   |
| C55 | Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side) |
| C56 | Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side) |
| C57 | ECT Solenoid                                            |
| C58 | Engine Oil Pressure Switch Assembly                     |
| C60 | VVT Sensor (Bank 1 Intake Side)                         |
| C61 | VVT Sensor (Bank 2 Intake Side)                         |
| C62 | VVT Sensor (Bank 1 Exhaust Side)                        |
| C63 | VVT Sensor (Bank 2 Exhaust Side)                        |
| C64 | Camshaft Timing Oil Control Valve (Bank 1 Intake Side)  |
| C65 | Camshaft Timing Oil Control Valve (Bank 2 Intake Side)  |
| C66 | Air Fuel Ratio Sensor (Bank 1 Sensor 1)                 |
| C67 | Air Fuel Ratio Sensor (Bank 2 Sensor 1)                 |
| C68 | Oxygen Sensor (Bank 1 Sensor 2)                         |
| C69 | Oxygen Sensor (Bank 2 Sensor 2)                         |

## Position of Parts in Engine Compartment (1GR-FE)

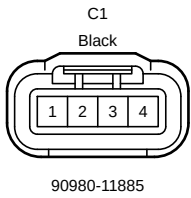

Position of Parts in Engine Compartment (1GR-FE)

