


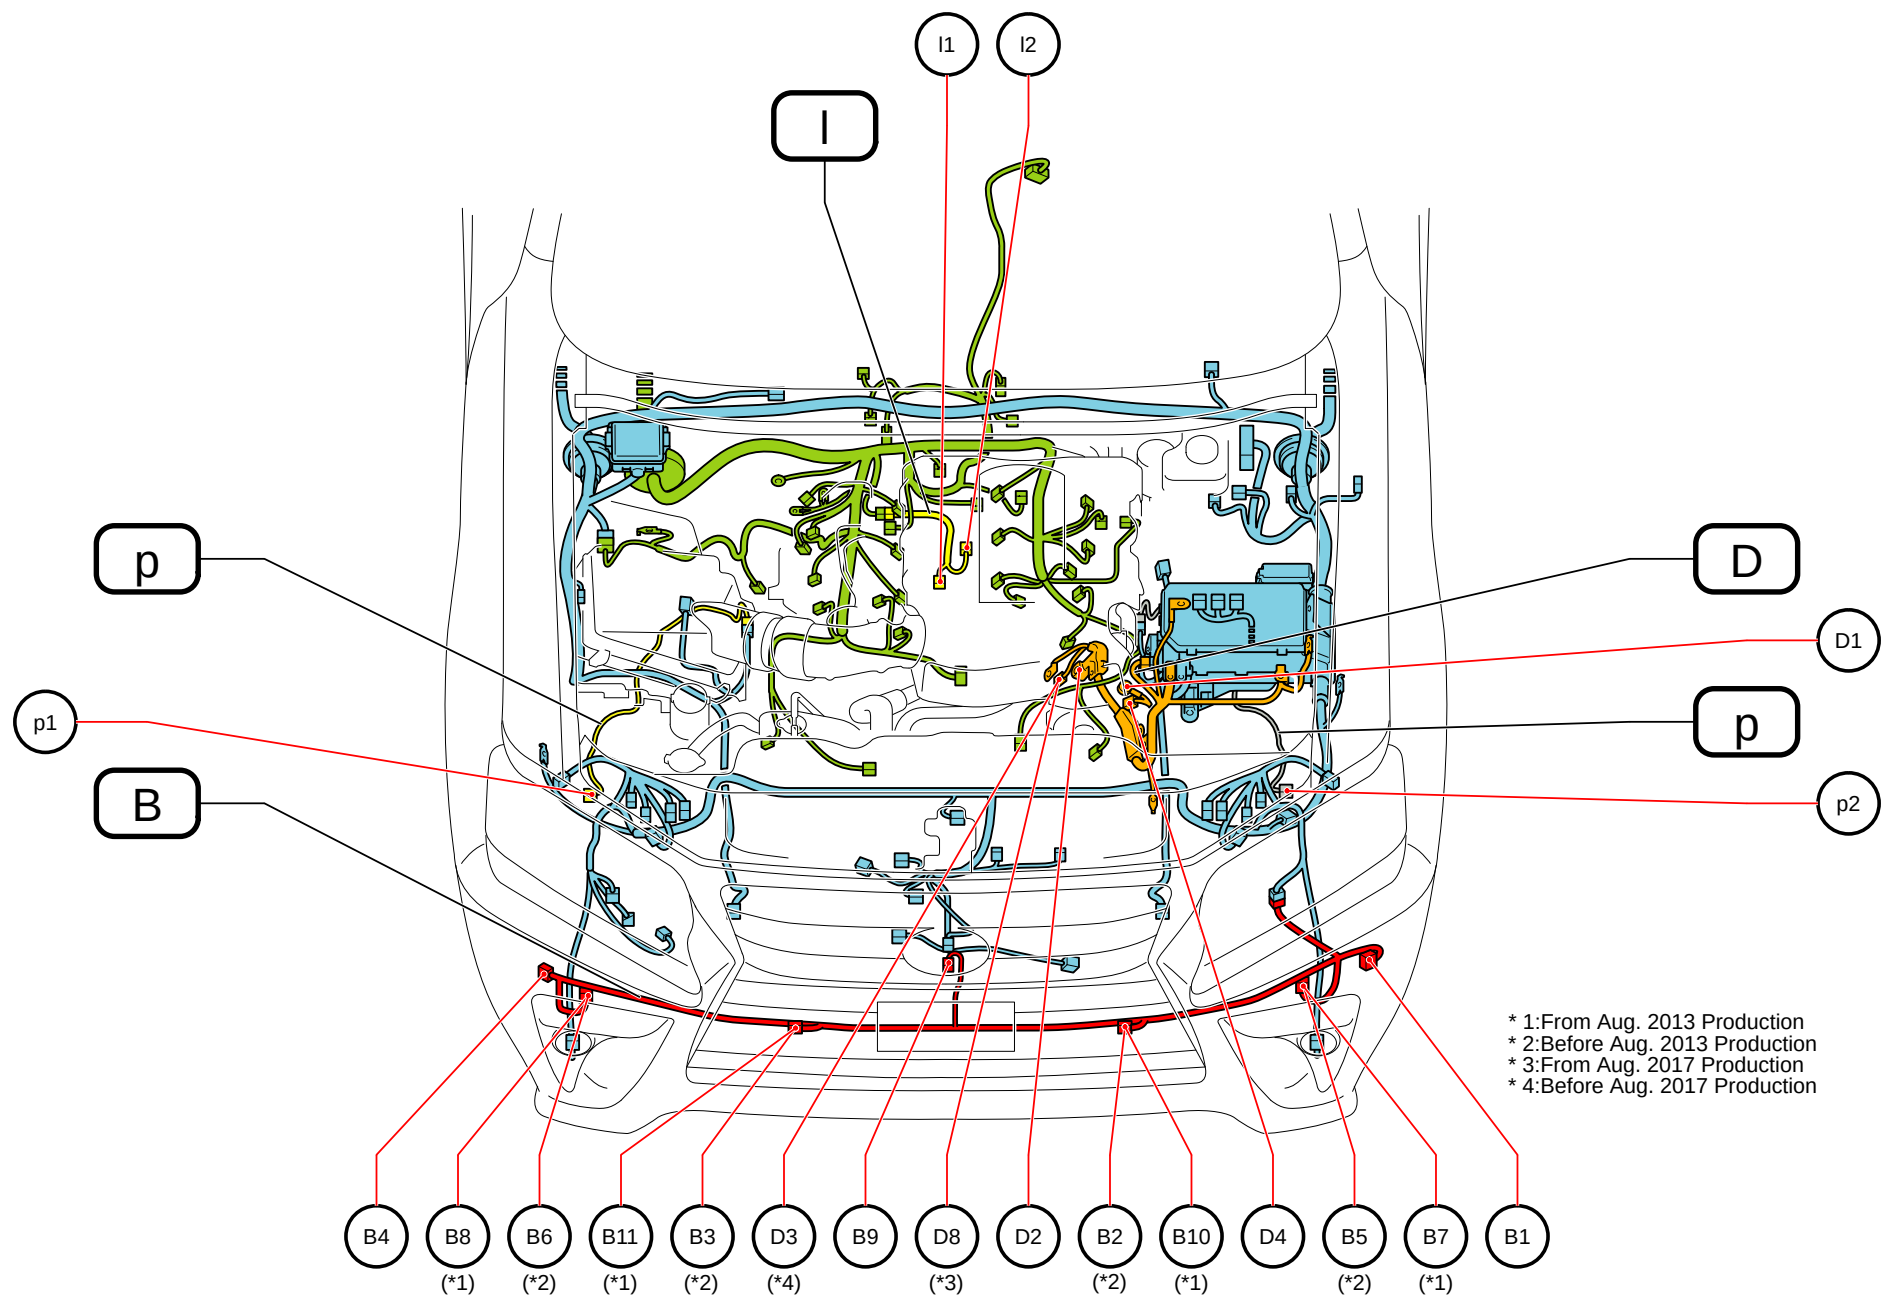

B1 Front No. 1 Ultrasonic Sensor LH
B2 Front No. 1 Ultrasonic Sensor Center LH
B3 Front No. 1 Ultrasonic Sensor Center RH
B4 Front No. 1 Ultrasonic Sensor RH
B5 Fog Light Assembly LH
B6 Fog Light Assembly RH
B7 Front Turn Signal Light Assembly LH
B8 Front Turn Signal Light Assembly RH
B9 Front Television Camera Assembly
B10 Front No. 1 Ultrasonic Sensor Center LH
B11 Front No. 1 Ultrasonic Sensor Center RH

D1 Generator Assembly
D2 Starter Assembly
D3 Starter Assembly
D4 Generator Assembly
D8 Starter Assembly

I1 Knock Control Sensor (Bank 1 Sensor 1)
I2 Knock Control Sensor (Bank 2 Sensor 1)

p1 Front Speed Sensor RH
p2 Front Speed Sensor LH

Position of Parts in Engine Compartment (1GR-FE)

