


Position of Parts in Engine Compartment <RHD 2AD-FHV, 2AD-FTV>

* 5: Before Aug. 2010 Production
 * 6: From Aug. 2010 Production

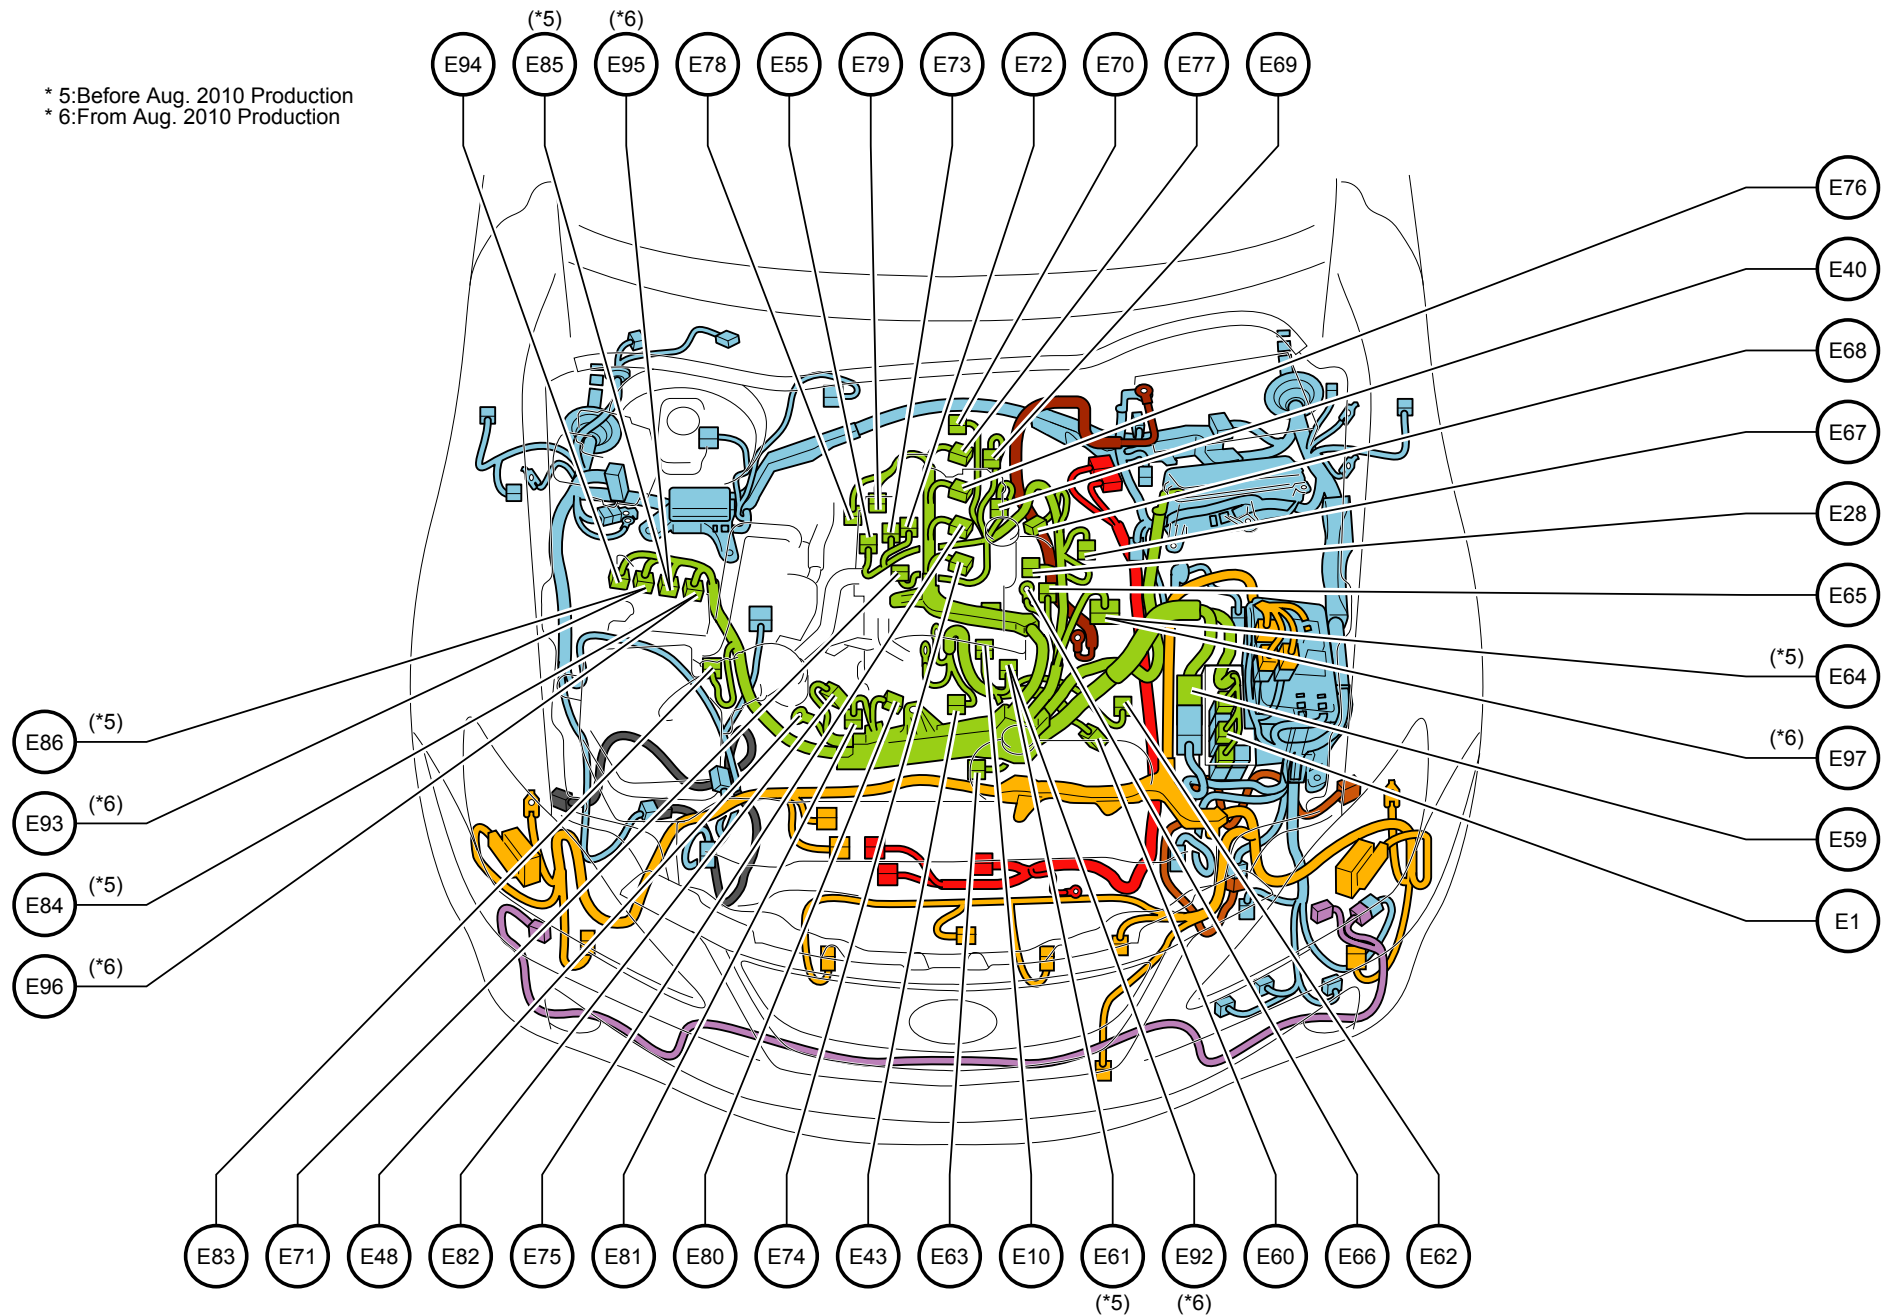


E 1	Junction Connector
E 10	Starter
E 28	Engine Oil Pressure SW
E 40	Water Temp. Sensor
E 43	Engine Oil Level Sensor
E 48	Alternator
E 55	Back-Up Lamp SW
E 59	Engine ECU
E 60	Inlet Air Temp. Sensor
E 61	Diesel Throttle Body Assembly
E 62	Diesel Throttle Body Assembly
E 63	A/C Compressor
E 64	EGR Valve Position Sensor
E 65	Fuel Pressure Sensor
E 66	Glow Plug
E 67	Turbo Pressure Sensor
E 68	Pressure Discharge Valve
E 69	Fuel Temp. Sensor
E 70	Suction Control Valve
E 71	Exhaust Fuel Addition Injector
E 72	Exhaust Gas Temp. Sensor (Downstream)
E 73	Exhaust Gas Temp. Sensor (Upstream)
E 74	Fuel Injector (for Direct Injection No.1)
E 75	Fuel Injector (for Direct Injection No.2)
E 76	Fuel Injector (for Direct Injection No.3)
E 77	Fuel Injector (for Direct Injection No.4)
E 78	VSV (EGR)
E 79	VRV (for Turbocharger Control)
E 80	Camshaft Position Sensor
E 81	Crankshaft Position Sensor
E 82	Alternator
E 83	Air Flow Meter
E 84	Injector Driver (EDU)
E 85	Injector Driver (EDU)
E 86	Injector Driver (EDU)
E 92	Diesel Throttle Body Assembly
E 93	Injector Driver (EDU)
E 94	Injector Driver (EDU)
E 95	Injector Driver (EDU)
E 96	Injector Driver (EDU)
E 97	EGR Valve Position Sensor




- 3 -


Position of Parts in Engine Compartment <RHD 2AD-FHV, 2AD-FTV>

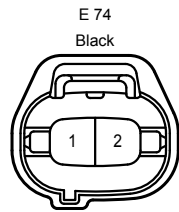


(Before Aug. 2010 Production)

 


(From Aug. 2010 Production)

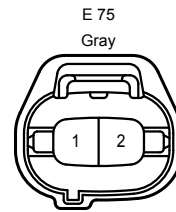


(Before Aug. 2010 Production)

 


(From Aug. 2010 Production)

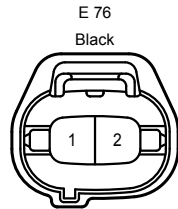


(Before Aug. 2010 Production)

 





(From Aug. 2010 Production)

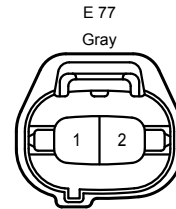


(Before Aug. 2010 Production)

 

(From Aug. 2010 Production)

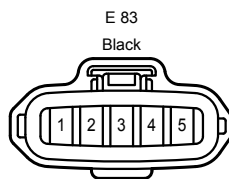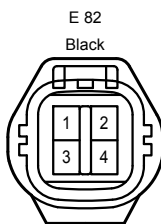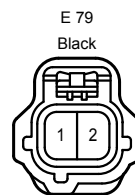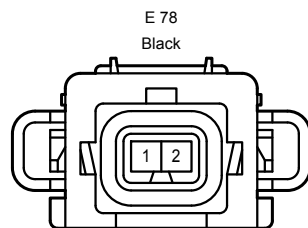

(Before Aug. 2010 Production)

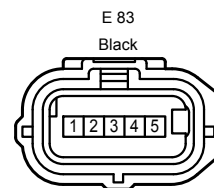

(From Aug. 2010 Production)

