


Position of Parts in Engine Compartment <RHD 4GR-FSE>

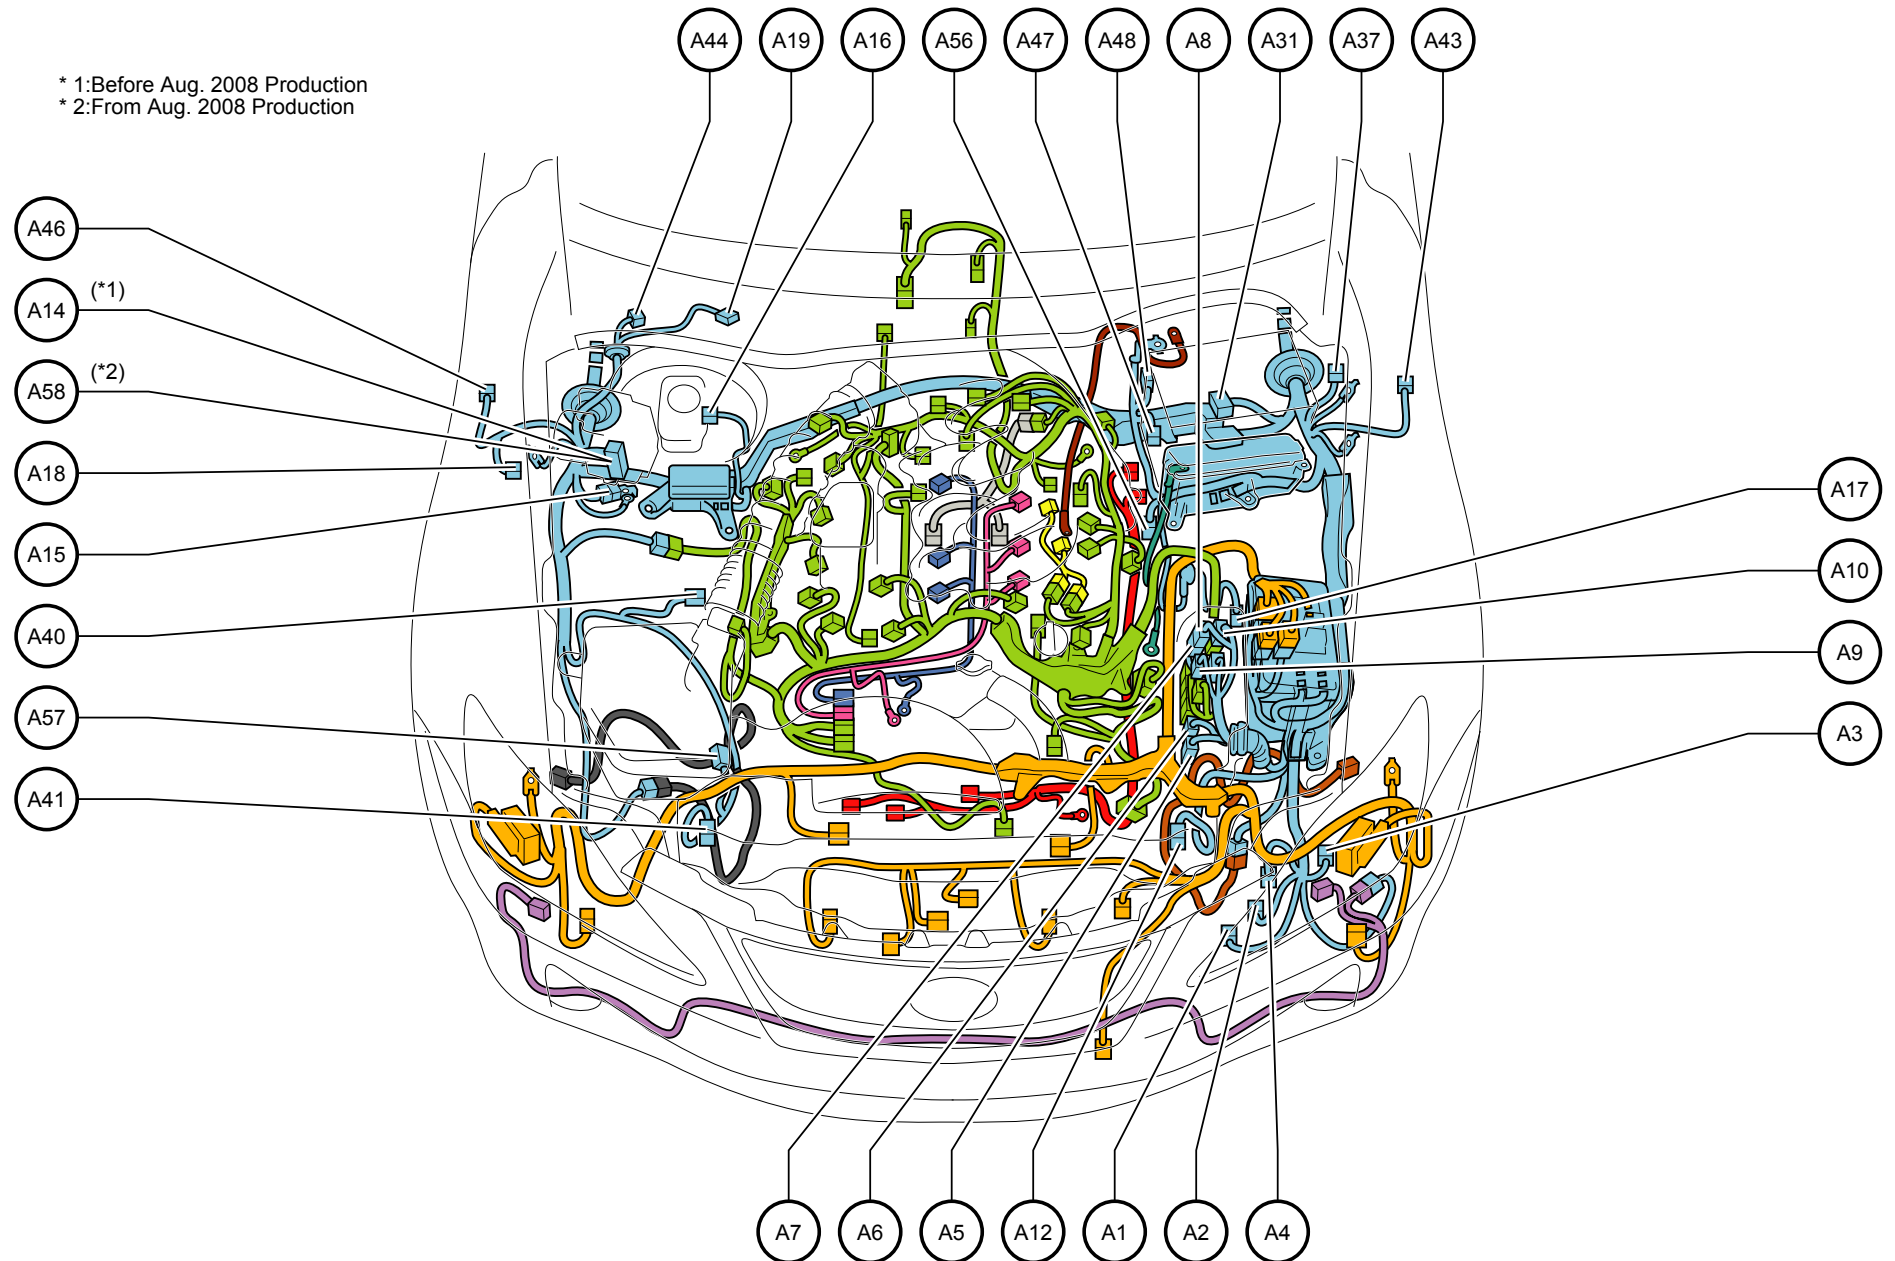

- A 1 Water Level Warning SW
- A 2 Headlamp Cleaner Motor
- A 3 Headlamp Cleaner Control Relay
- A 4 Windshield Washer Motor
- A 5 Engine ECU
- A 6 Engine ECU
- A 7 Junction Connector
- A 8 Junction Connector
- A 9 Junction Connector
- A 10 Junction Connector
- A 12 Airbag Sensor (Front LH)
- A 14 Skid Control ECU with Actuator
- A 15 Junction Connector
- A 16 Brake Fluid Level Warning SW
- A 17 Height Control Sensor (Front)
- A 18 Wireless Door Lock Buzzer
- A 19 Windshield Wiper Motor
- A 31 Power Steering ECU
- A 37 Security Horn
- A 40 Fuel Pump Resistor
- A 41 Airbag Sensor (Front RH)
- A 43 Turn Signal Lamp (Front Side LH)
- A 44 Front Wiper Deicer
- A 46 Turn Signal Lamp (Front Side RH)
- A 47 Battery Thermometer Sensor
- A 48 Battery Current Sensor
- A 56 A/C Pressure Sensor (Low)
- A 57 Noise Filter
- A 58 Skid Control ECU with Actuator

Position of Parts in Engine Compartment <RHD 4GR-FSE>

