



Position of Parts in Body <RHD>

- * 5:Before Aug. 2008 Production
- * 6:From Aug. 2008 Production
- * 7:Before Aug. 2009 Production
- * 8:From Aug. 2009 Production
- * 10:Refer to the Service Bulletin
for the installation position of the parts.
- * 11:Before Aug. 2010 Production
- * 12:From Aug. 2010 Production
- * 13:w/ LEXUS Navigation System
- * 14:w/o LEXUS Navigation System
- * 15:Before Aug. 2012 Production
- * 16:From Aug. 2012 Production
- * 17:14 Speaker *13, *14
- * 18:13 Speaker *13

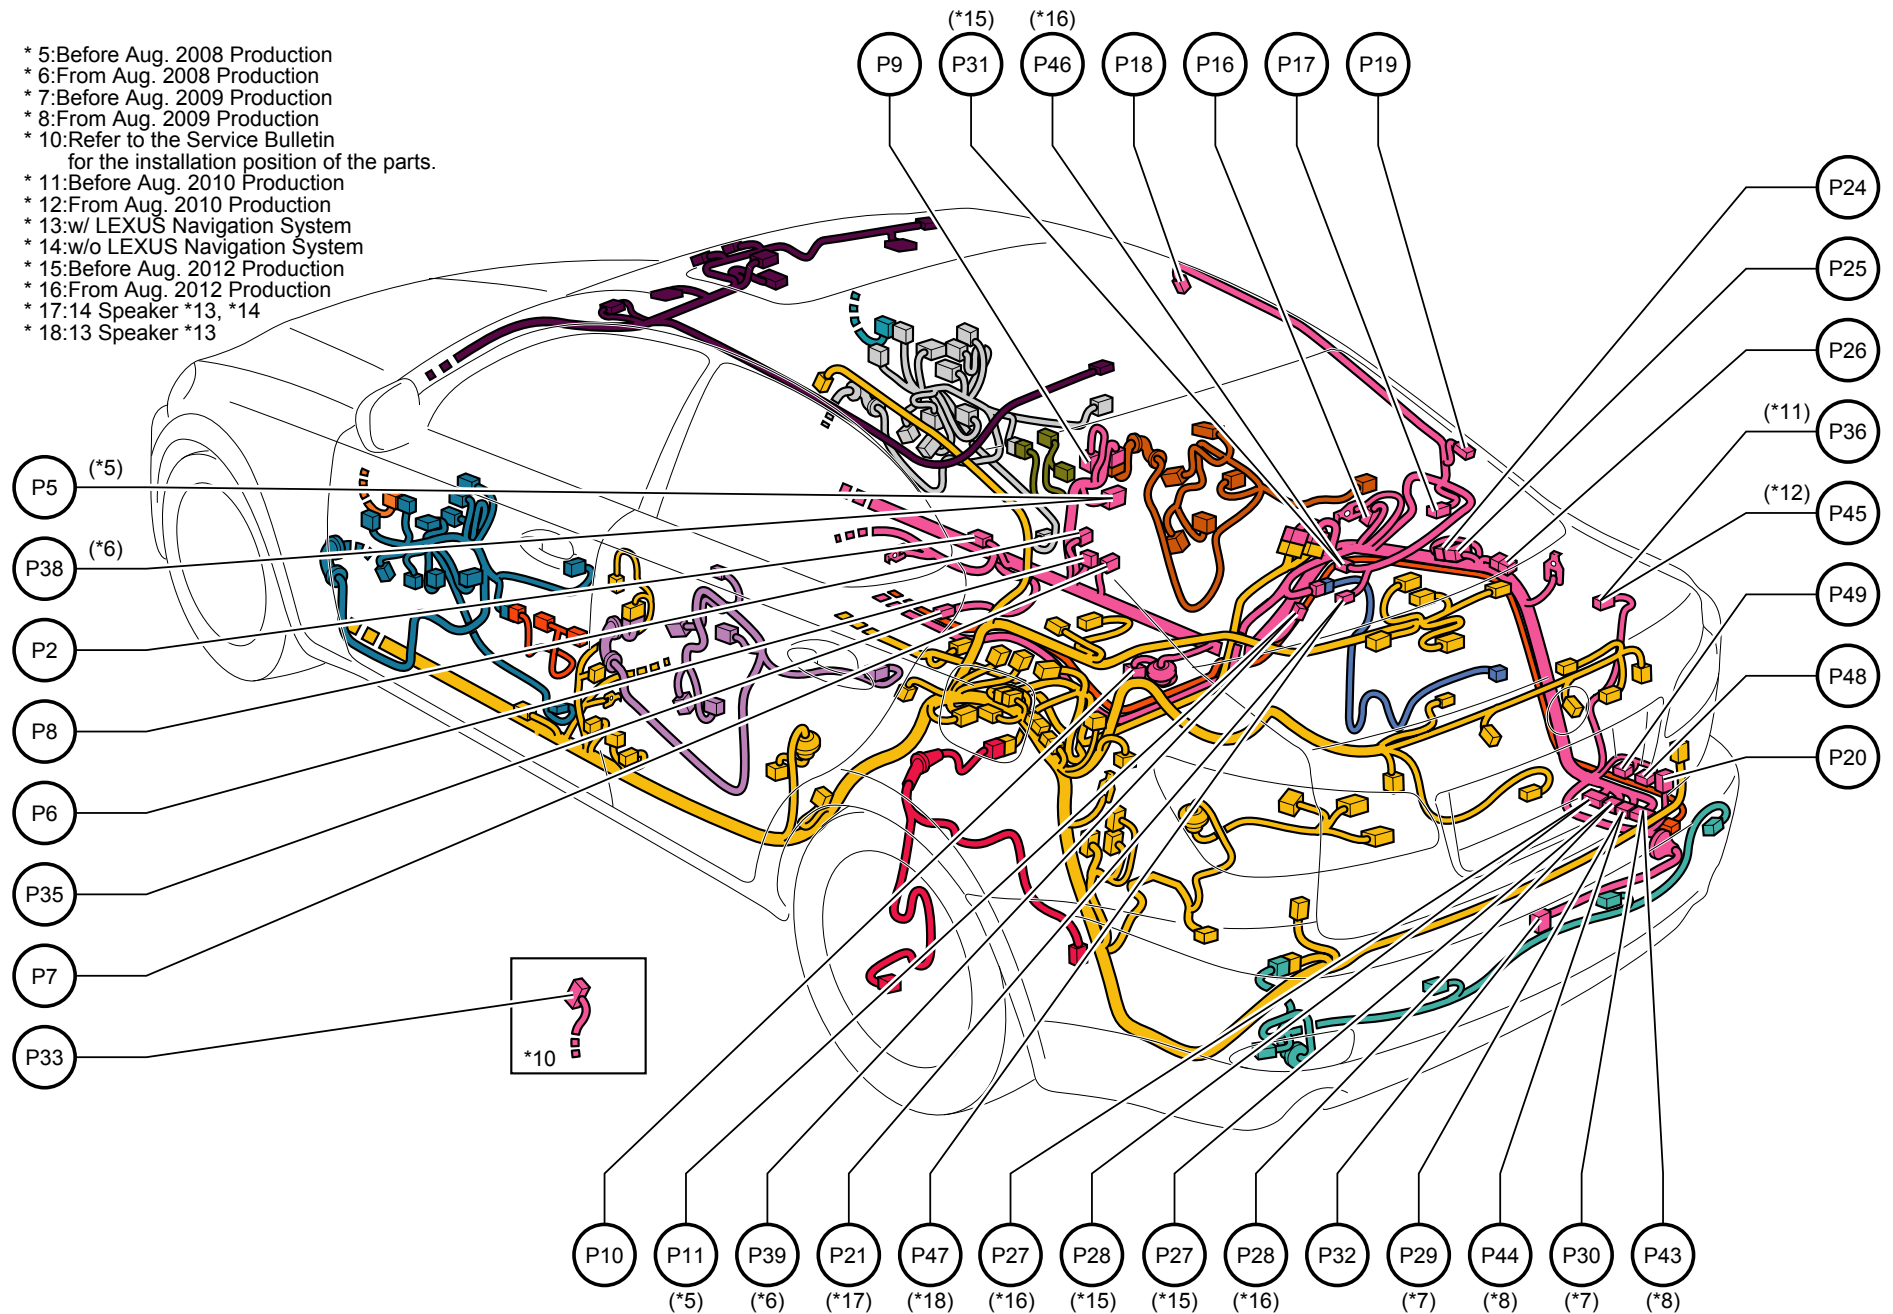


- P 2 Outer Scuff Lamp (RH)
- P 5 Side Airbag Sensor (Front RH)
- P 6 Pretensioner (Front RH)
- P 7 Front Seat Outer Belt (RH)
- P 8 Front Seat Outer Belt Motor (RH)
- P 9 Door Courtesy SW (Front RH)
- P 10 Fuel Sender Gage (Sub)
- P 11 Side Airbag Sensor (Rear RH)
- P 16 Door Courtesy SW (Rear RH)
- P 17 Pretensioner (Rear RH)
- P 18 Curtain Shield Airbag Squib (RH)
- P 19 Rear Window Defogger
- P 20 Electrical Key Antenna
- P 21 Speaker (Subwoofer)
- P 24 Junction Connector
- P 25 Junction Connector
- P 26 Junction Connector
- P 27 Stereo Component Amplifier
- P 28 Stereo Component Amplifier
- P 29 Stereo Component Amplifier
- P 30 Stereo Component Amplifier
- P 31 Door Control Receiver
- P 32 Electrical Key Oscillator (Outside Luggage Room)
- P 33 Certification ECU
- P 35 Air Fuel Ratio Sensor
- P 36 Theft Warning Siren
- P 38 Side Airbag Sensor (Front RH)
- P 39 Side Airbag Sensor (Rear RH)
- P 43 Stereo Component Amplifier
- P 44 Stereo Component Amplifier
- P 45 Theft Warning Siren
- P 46 Door Control Receiver
- P 47 Speaker (Subwoofer)
- P 48 Stereo Component Amplifier Assembly
- P 49 Stereo Component Amplifier Assembly

Position of Parts in Body <RHD>

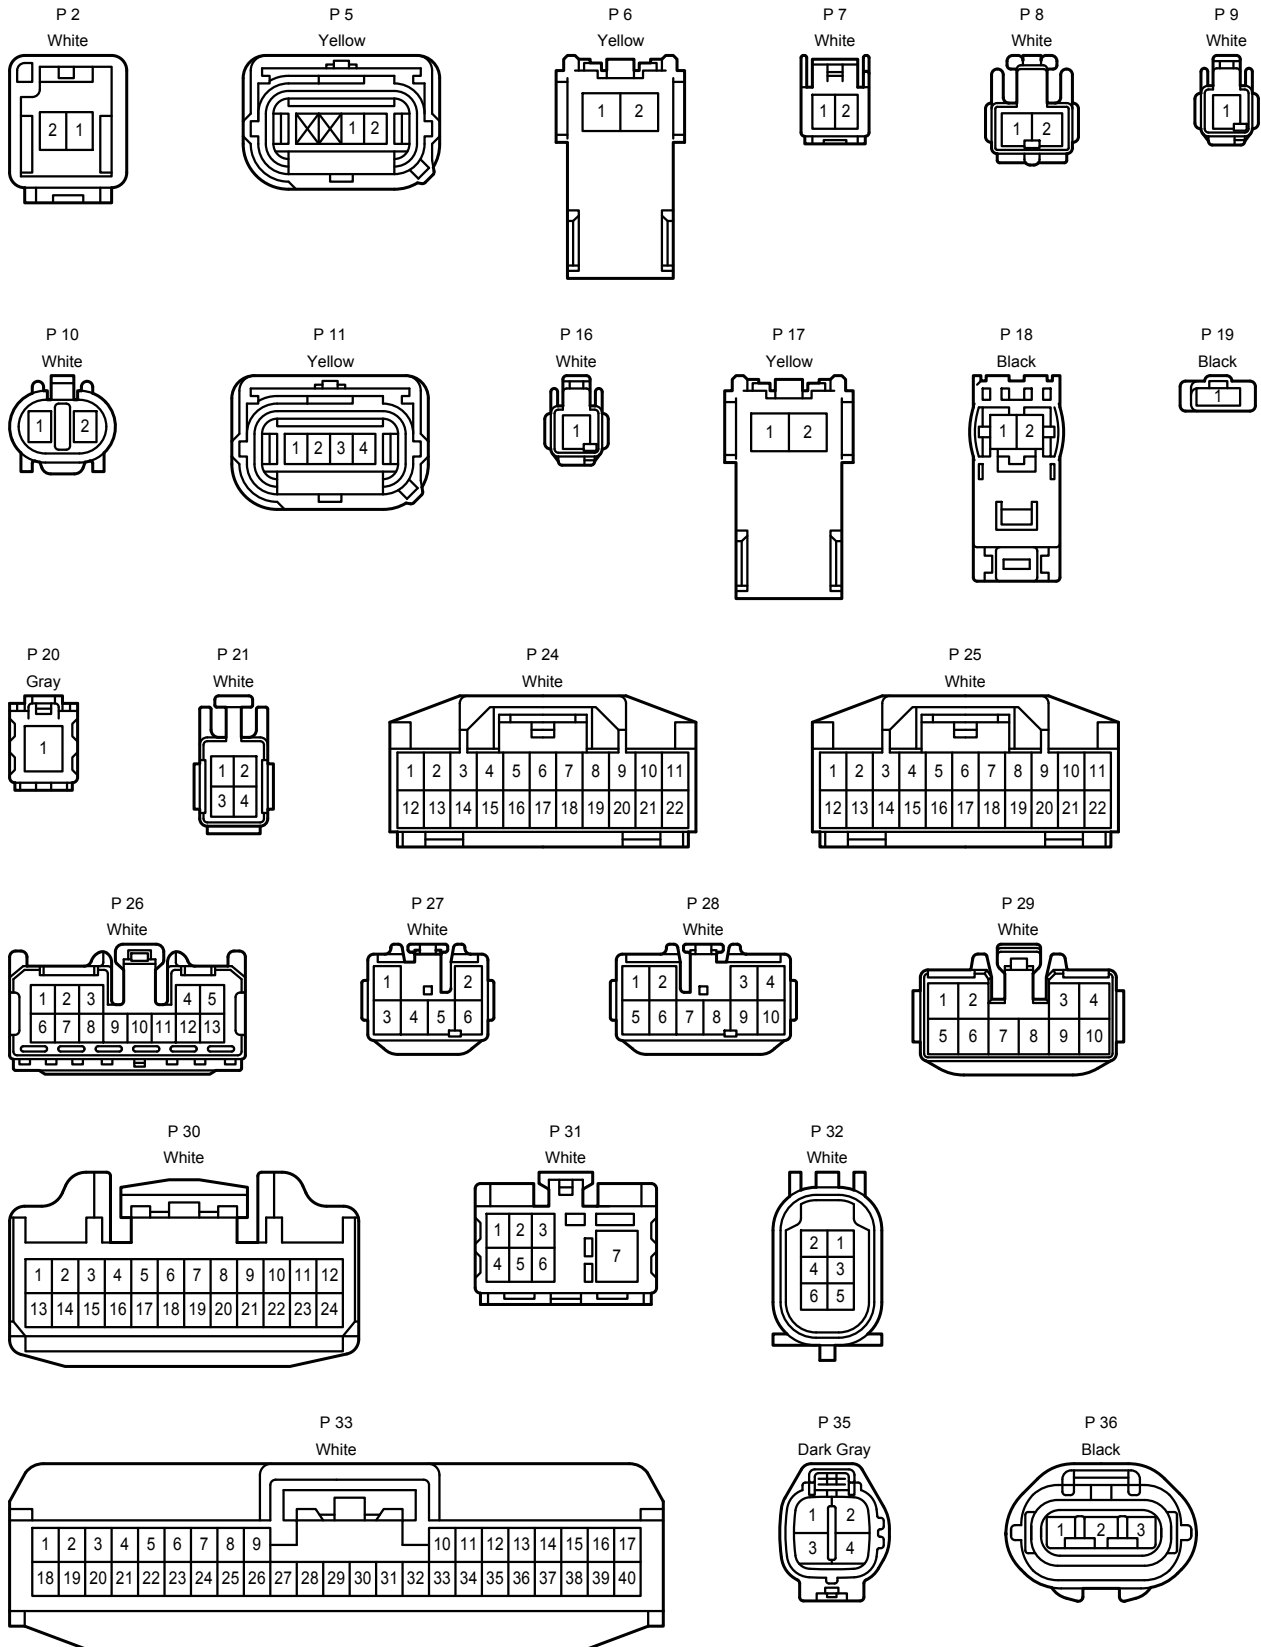


Position of Parts in Body <RHD>


P 38
Yellow

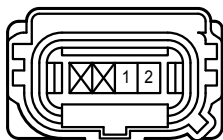


P 39
Yellow

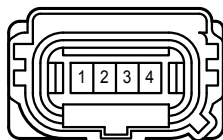


P 43
White

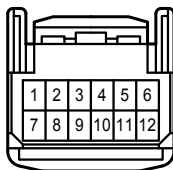


P 44
White

 

P 45
Black

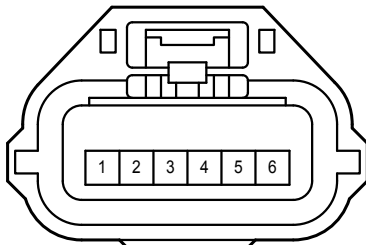


P 46
White

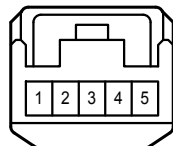

P 47
Blue



P 48
White

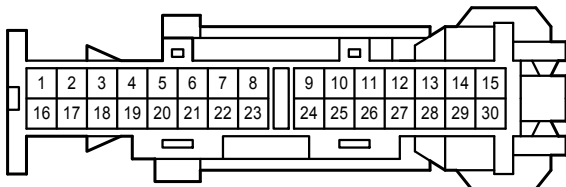

P 49
White

