 
 
 


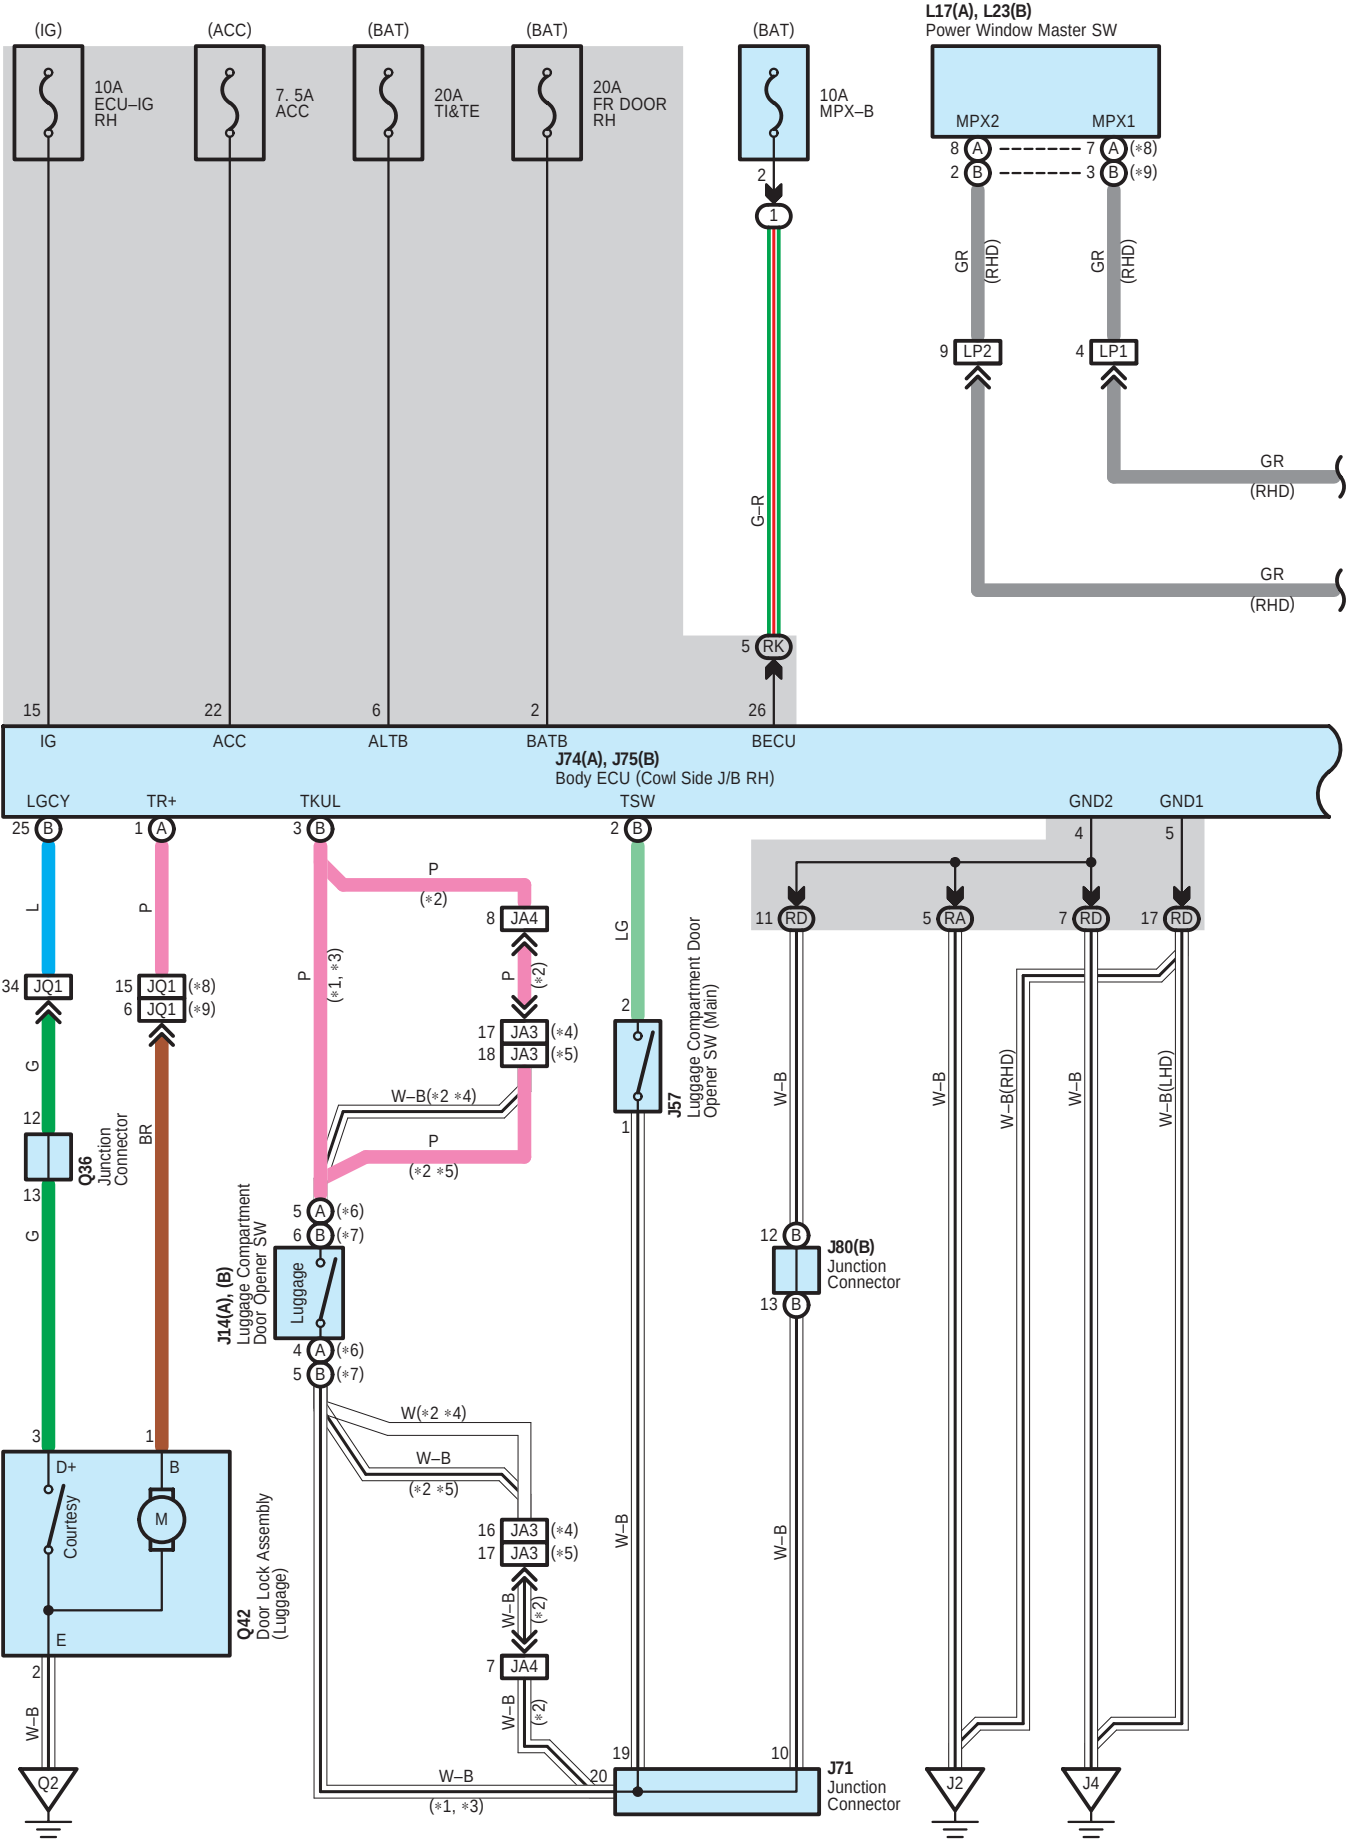

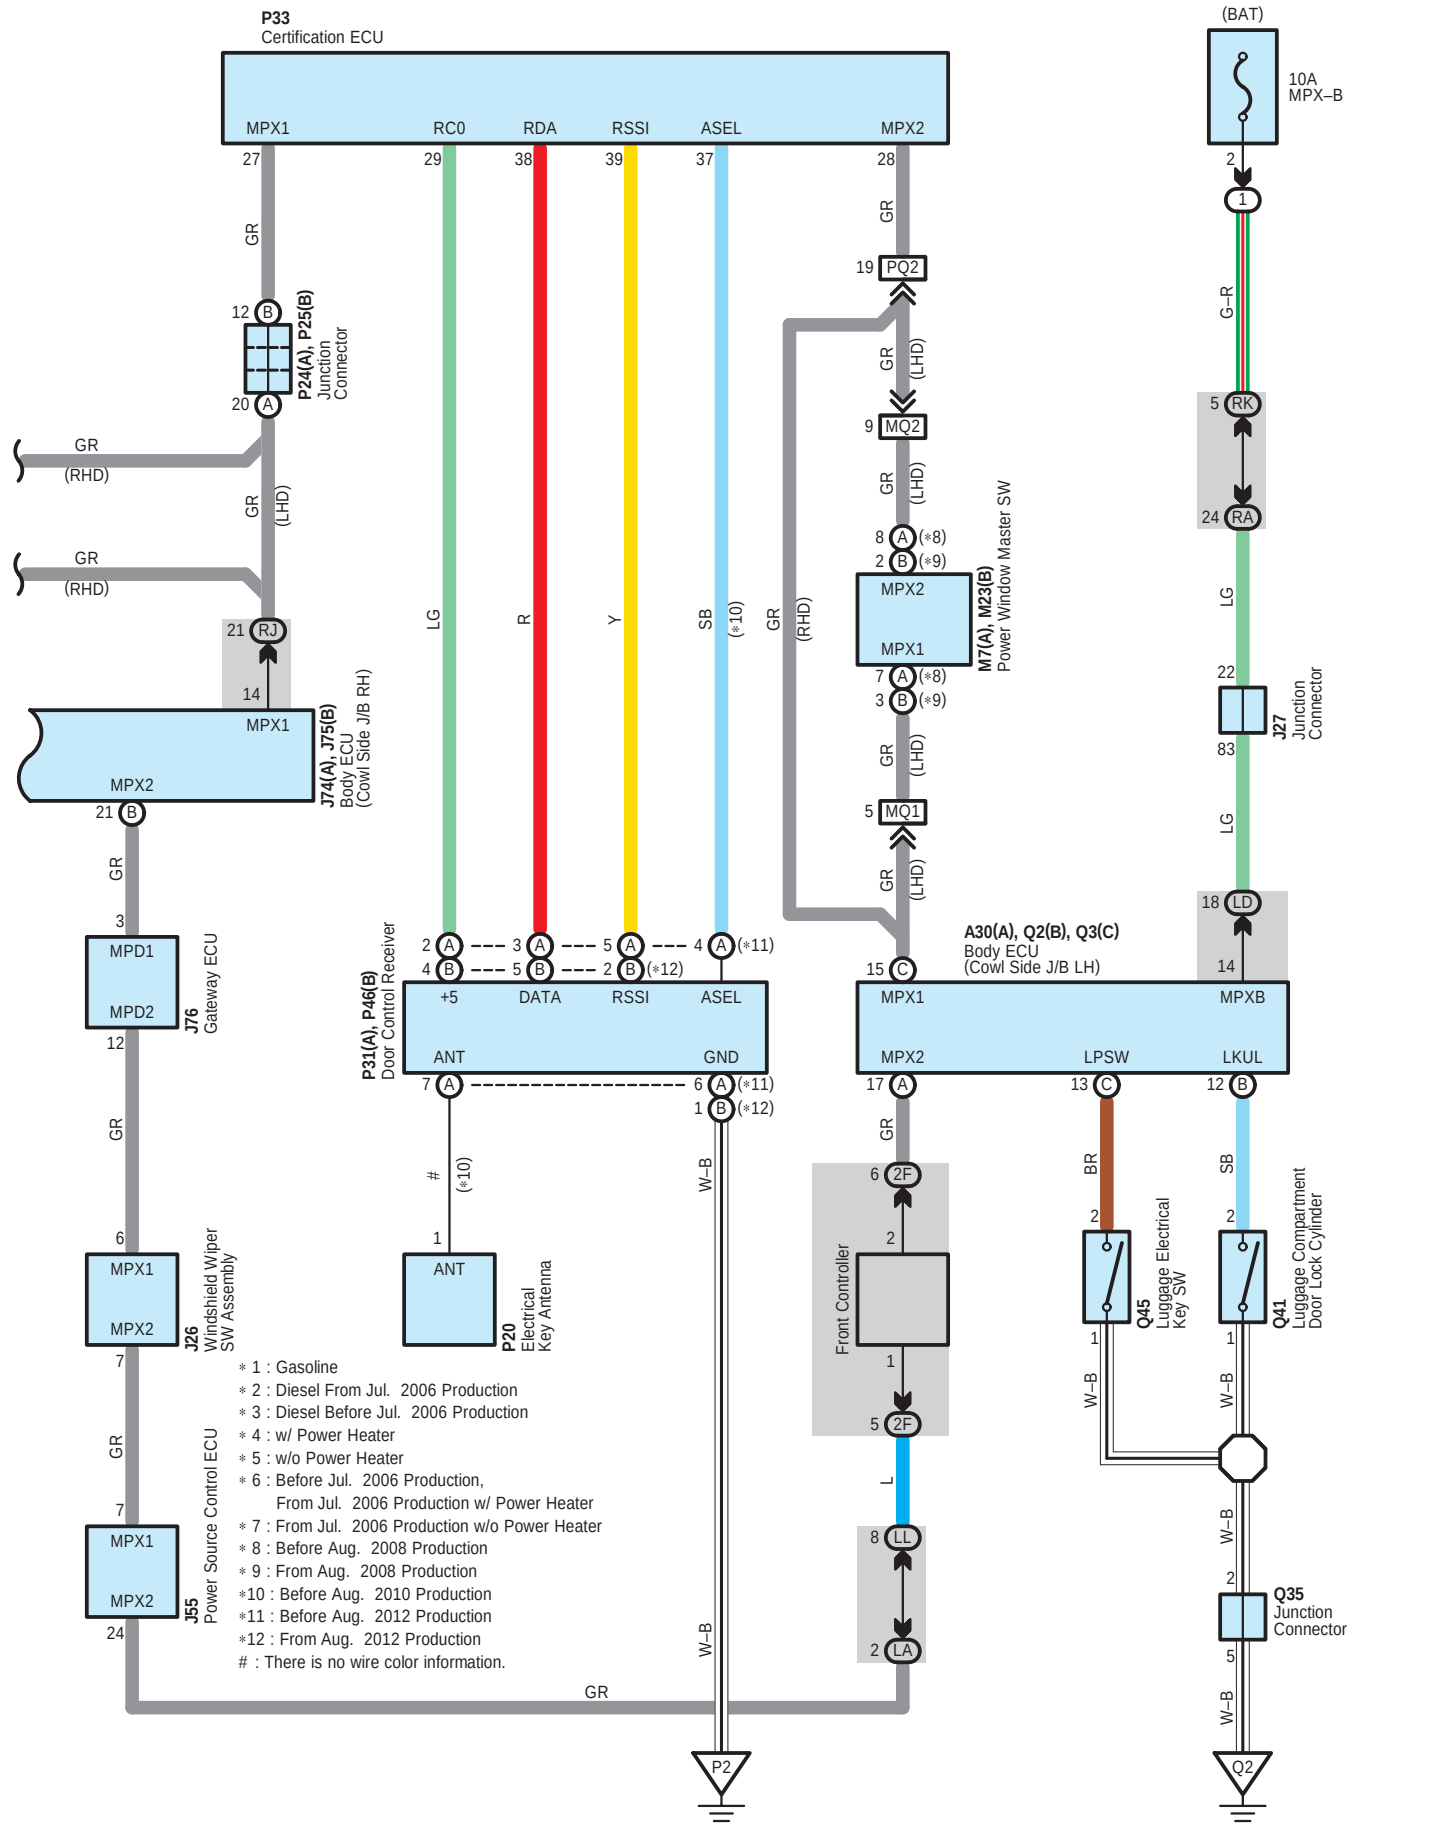


Luggage Compartment Door Opener

A 30
White

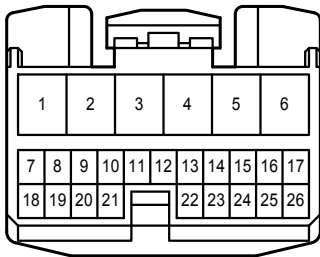


 J 14
White




(Before Jul. 2006 Production)

 J 14
Black




(From Jul. 2006 Production)

 
J 26
White

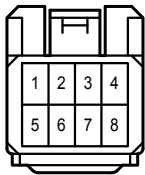


J 27
White

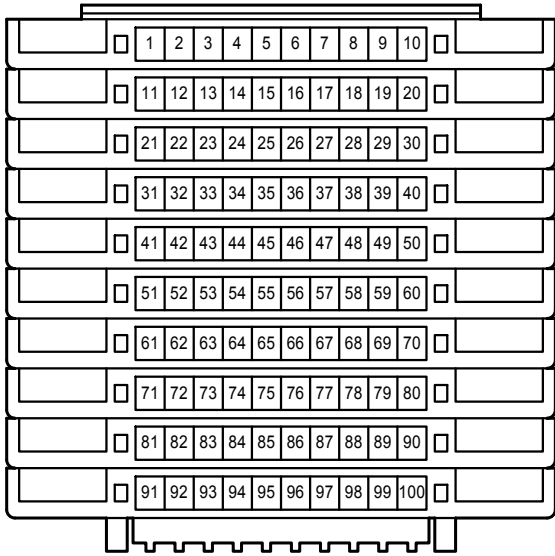 

J 55
White

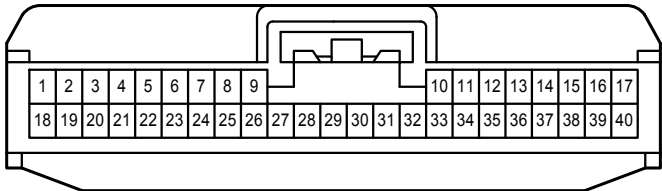 


J 57
Blue

 


J 71

 White

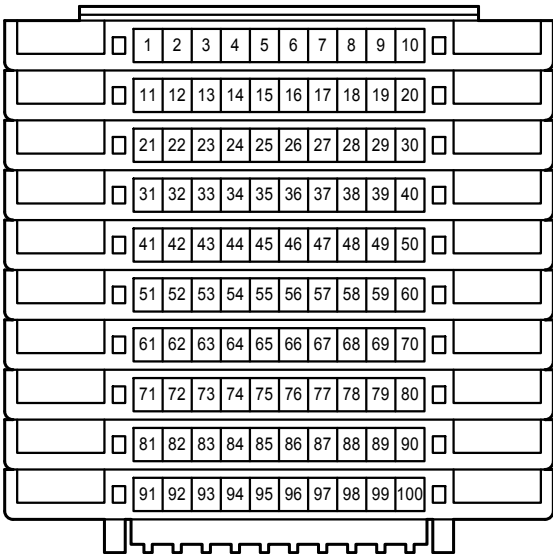


J 74

 White

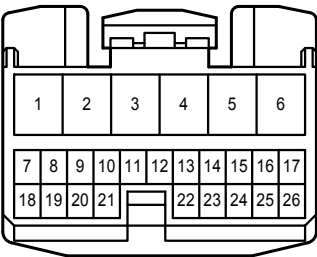


J 75

 White

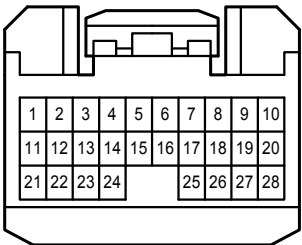


J 76

 White

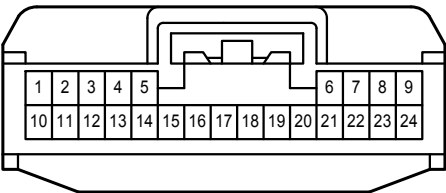


J 80

 Blue

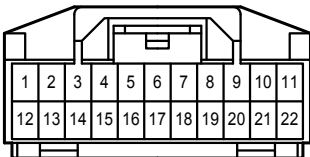


L 17

 White

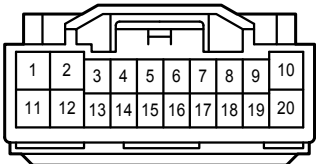


L 23

 White

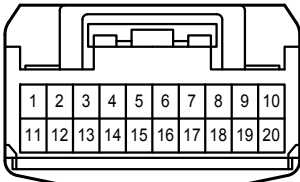


M 7

 White

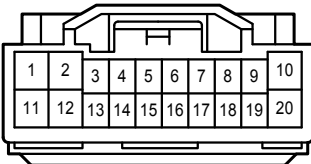


M 23

 White

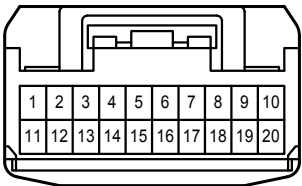


P 20

 Gray




P 24

 White

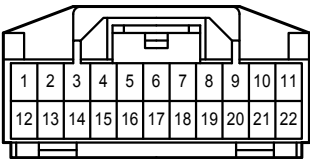


P 25

 White

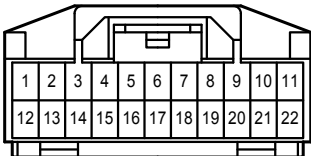


P 31

 White

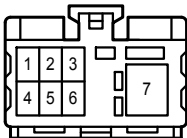


Luggage Compartment Door Opener

 
P 33
White

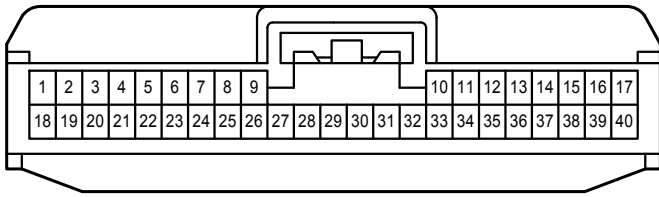


P 46
White

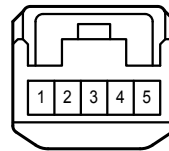 


Q 2
White

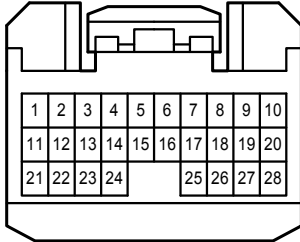 


Q 3
White

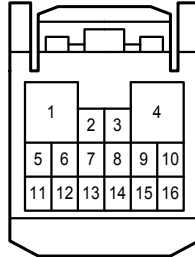 


Q 35
White

 


Q 36
White

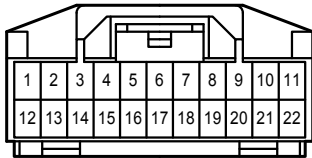 


Q 41
White

 


Q 42
Black

 


Q 45
White

 


2F
Black

 


LA
White

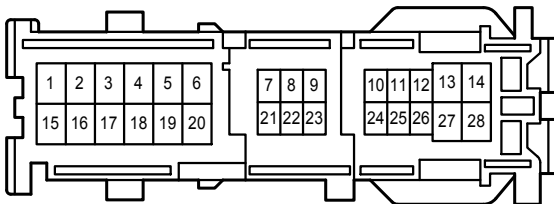 


LD
White

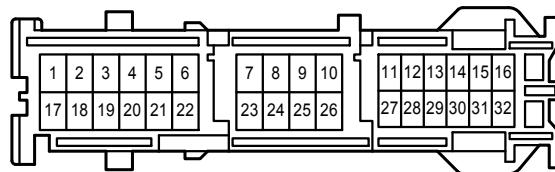 


LL
Gray

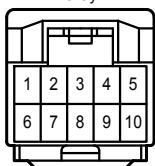 


RA
White

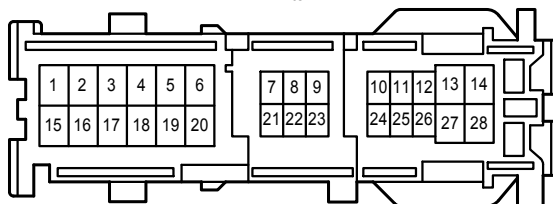 


RD
White

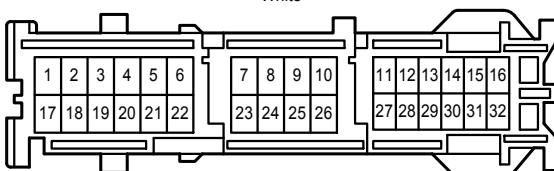 


RJ
Gray

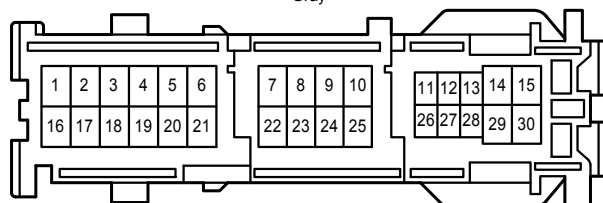 


Luggage Compartment Door Opener

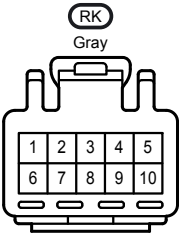 


JA3
White

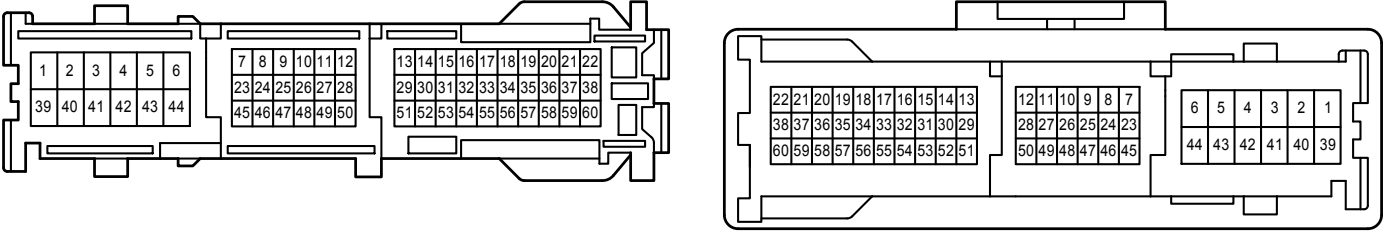 


JA4
White

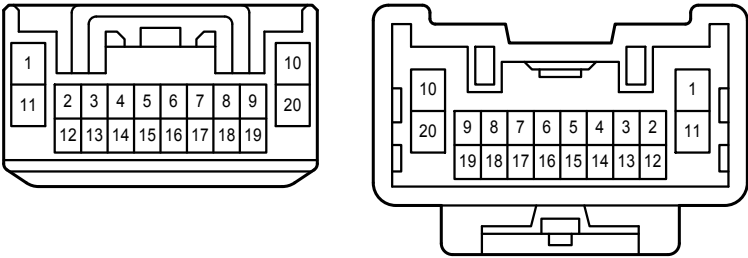 


JQ1
White

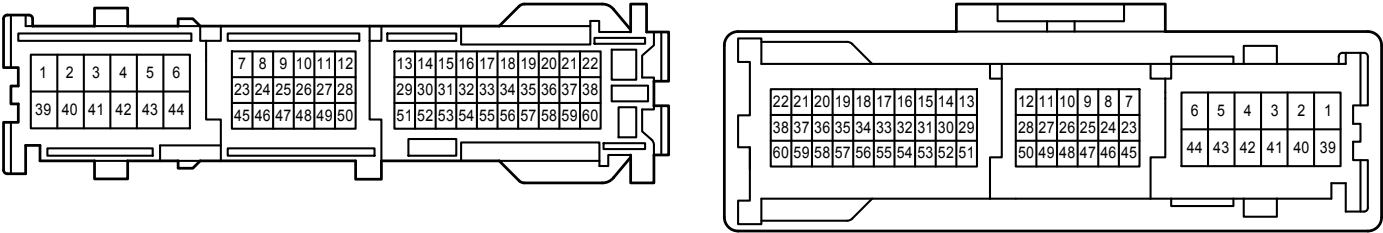 


LP1
White

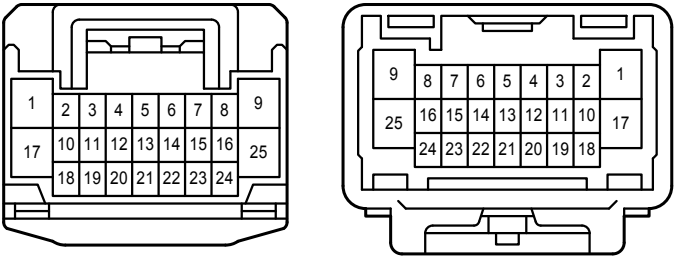 


LP2
White

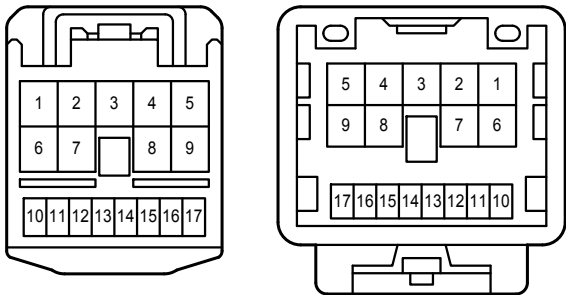 

MQ1
White

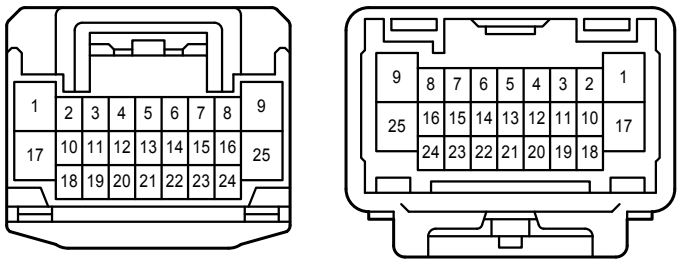 

MQ2
White

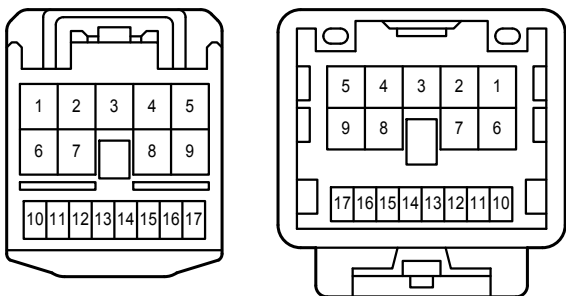 

PQ2
White

