


Position of Parts in Engine Compartment <LHD 3GR-FE>

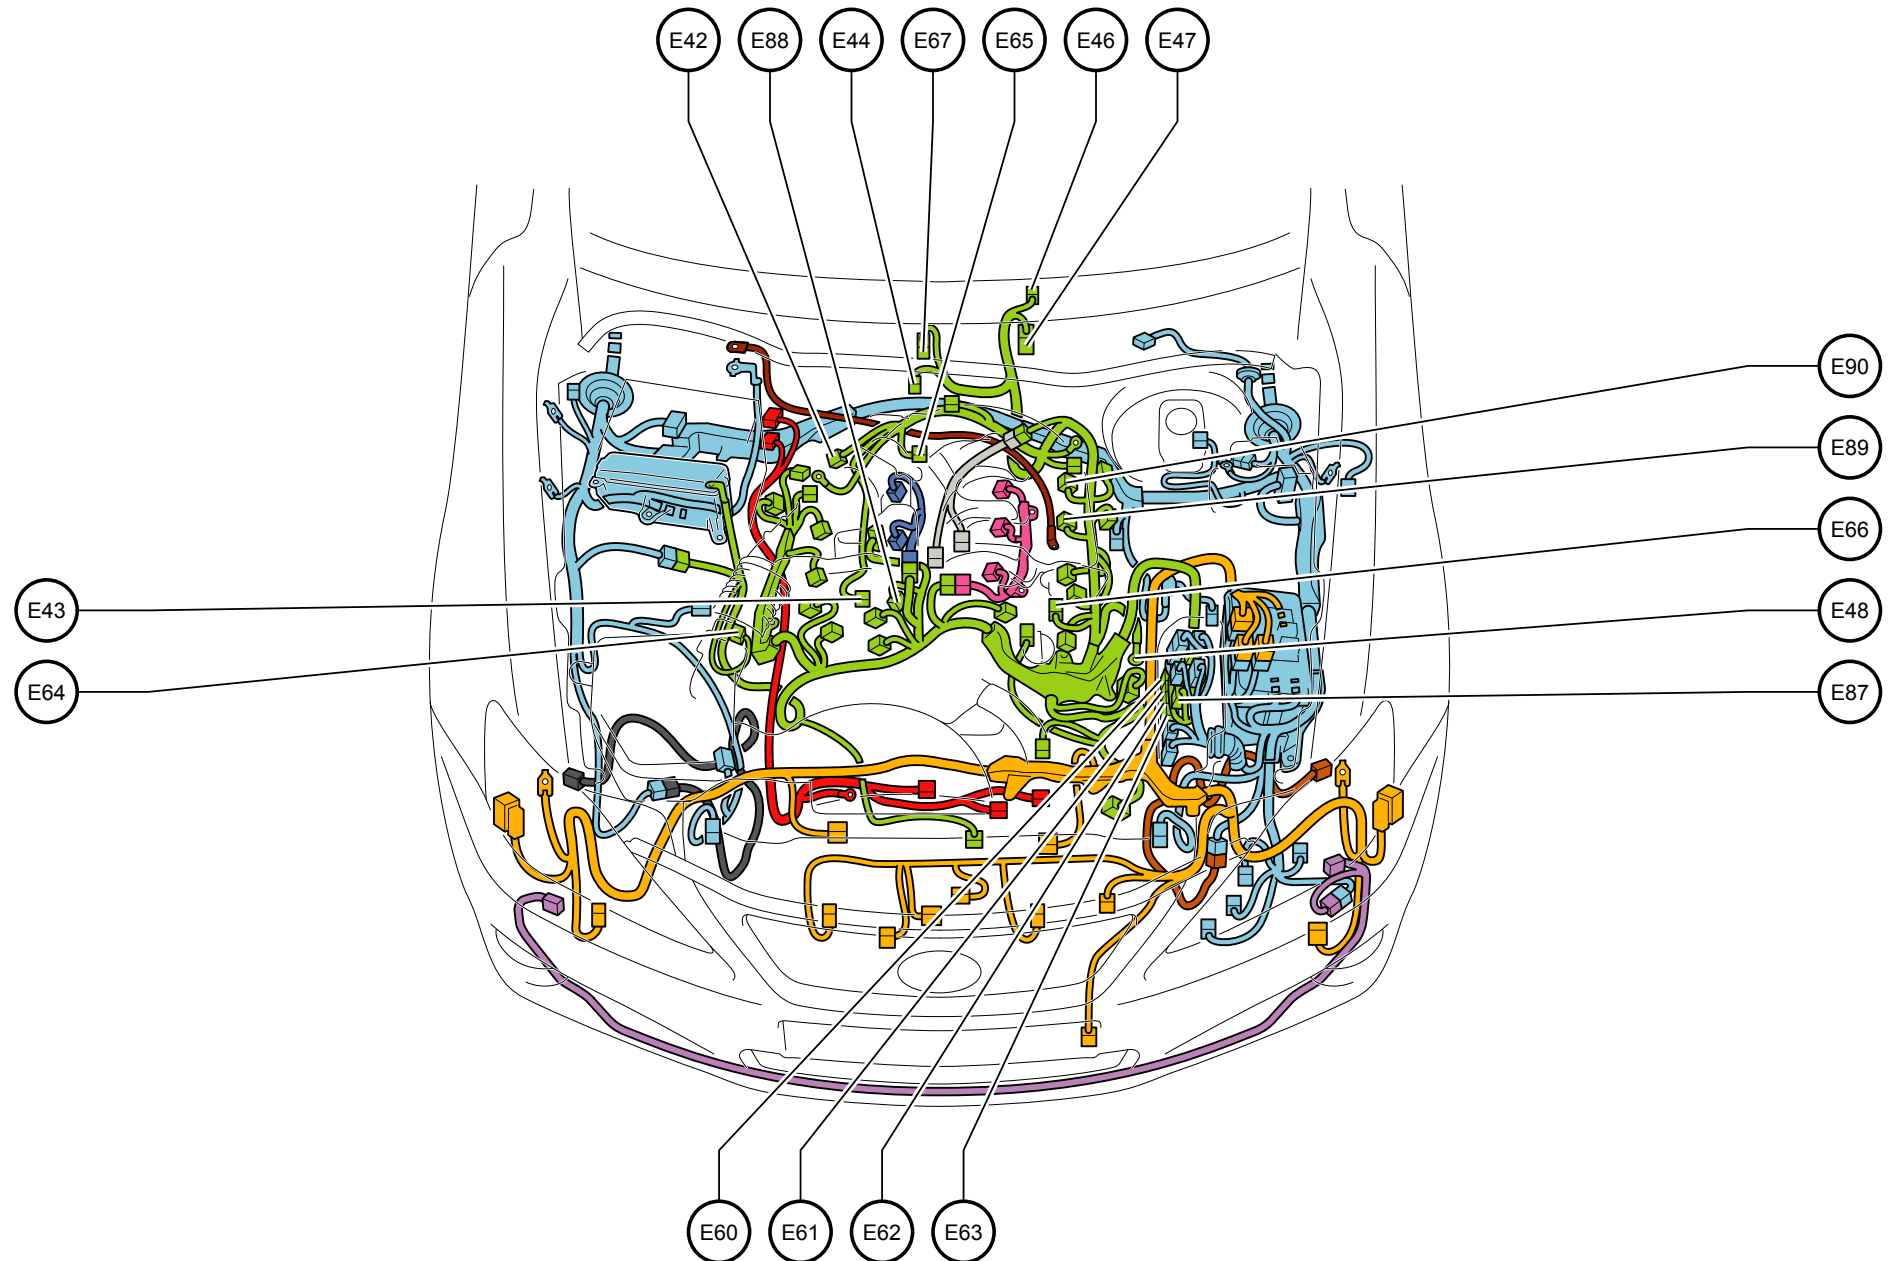

- E 42 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 43 Engine Oil Level Sensor
- E 44 Transmission Revolution Sensor (Turbine)
- E 46 Transmission Revolution Sensor (Counter Gear)
- E 47 Electronically Controlled Transmission Solenoid
- E 48 Generator Assembly
- E 60 ECM
- E 61 ECM
- E 62 ECM
- E 63 ECM
- E 64 Intake Mass Air Flow Meter Sub-Assembly
- E 65 E.F.I. Engine Coolant Temperature Sensor
- E 66 VSV (ACIS)
- E 67 Park/Neutral Position Switch Assembly
- E 87 Junction Connector
- E 88 Fuel Injector Assembly No. 1
- E 89 Ignition Coil Assembly No. 4
- E 90 Ignition Coil Assembly No. 6

Position of Parts in Engine Compartment <LHD 3GR-FE>


E 42  
Dark Gray




E 43  
Gray




E 44  
Black

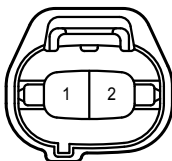


E 46  
Black

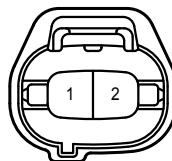


E 47  
Gray

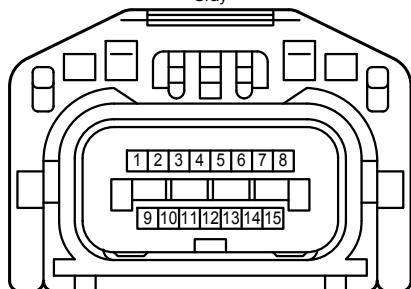


E 48

 


E 60  
White

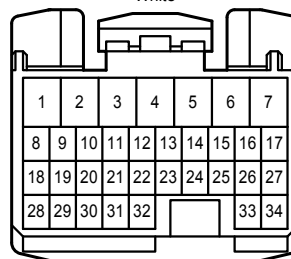


E 61  
White

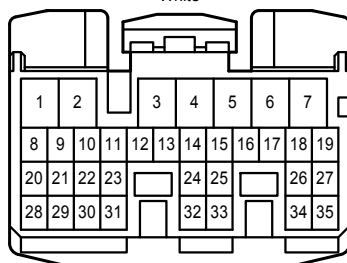

E 62  
White

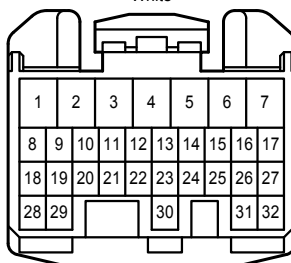

E 63  
White

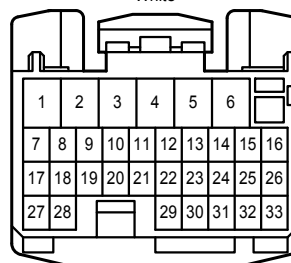

E 64  
Black




E 65  
Dark Gray




E 66  
Black




E 67  
Gray

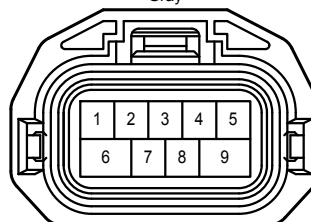


E 87  
White

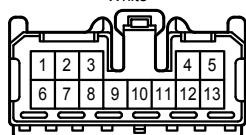

E 88  
Gray

 

E 89  
Black

 

E 90  
Gray

