


Position of Parts in Engine Compartment <LHD 4GR-FSE>

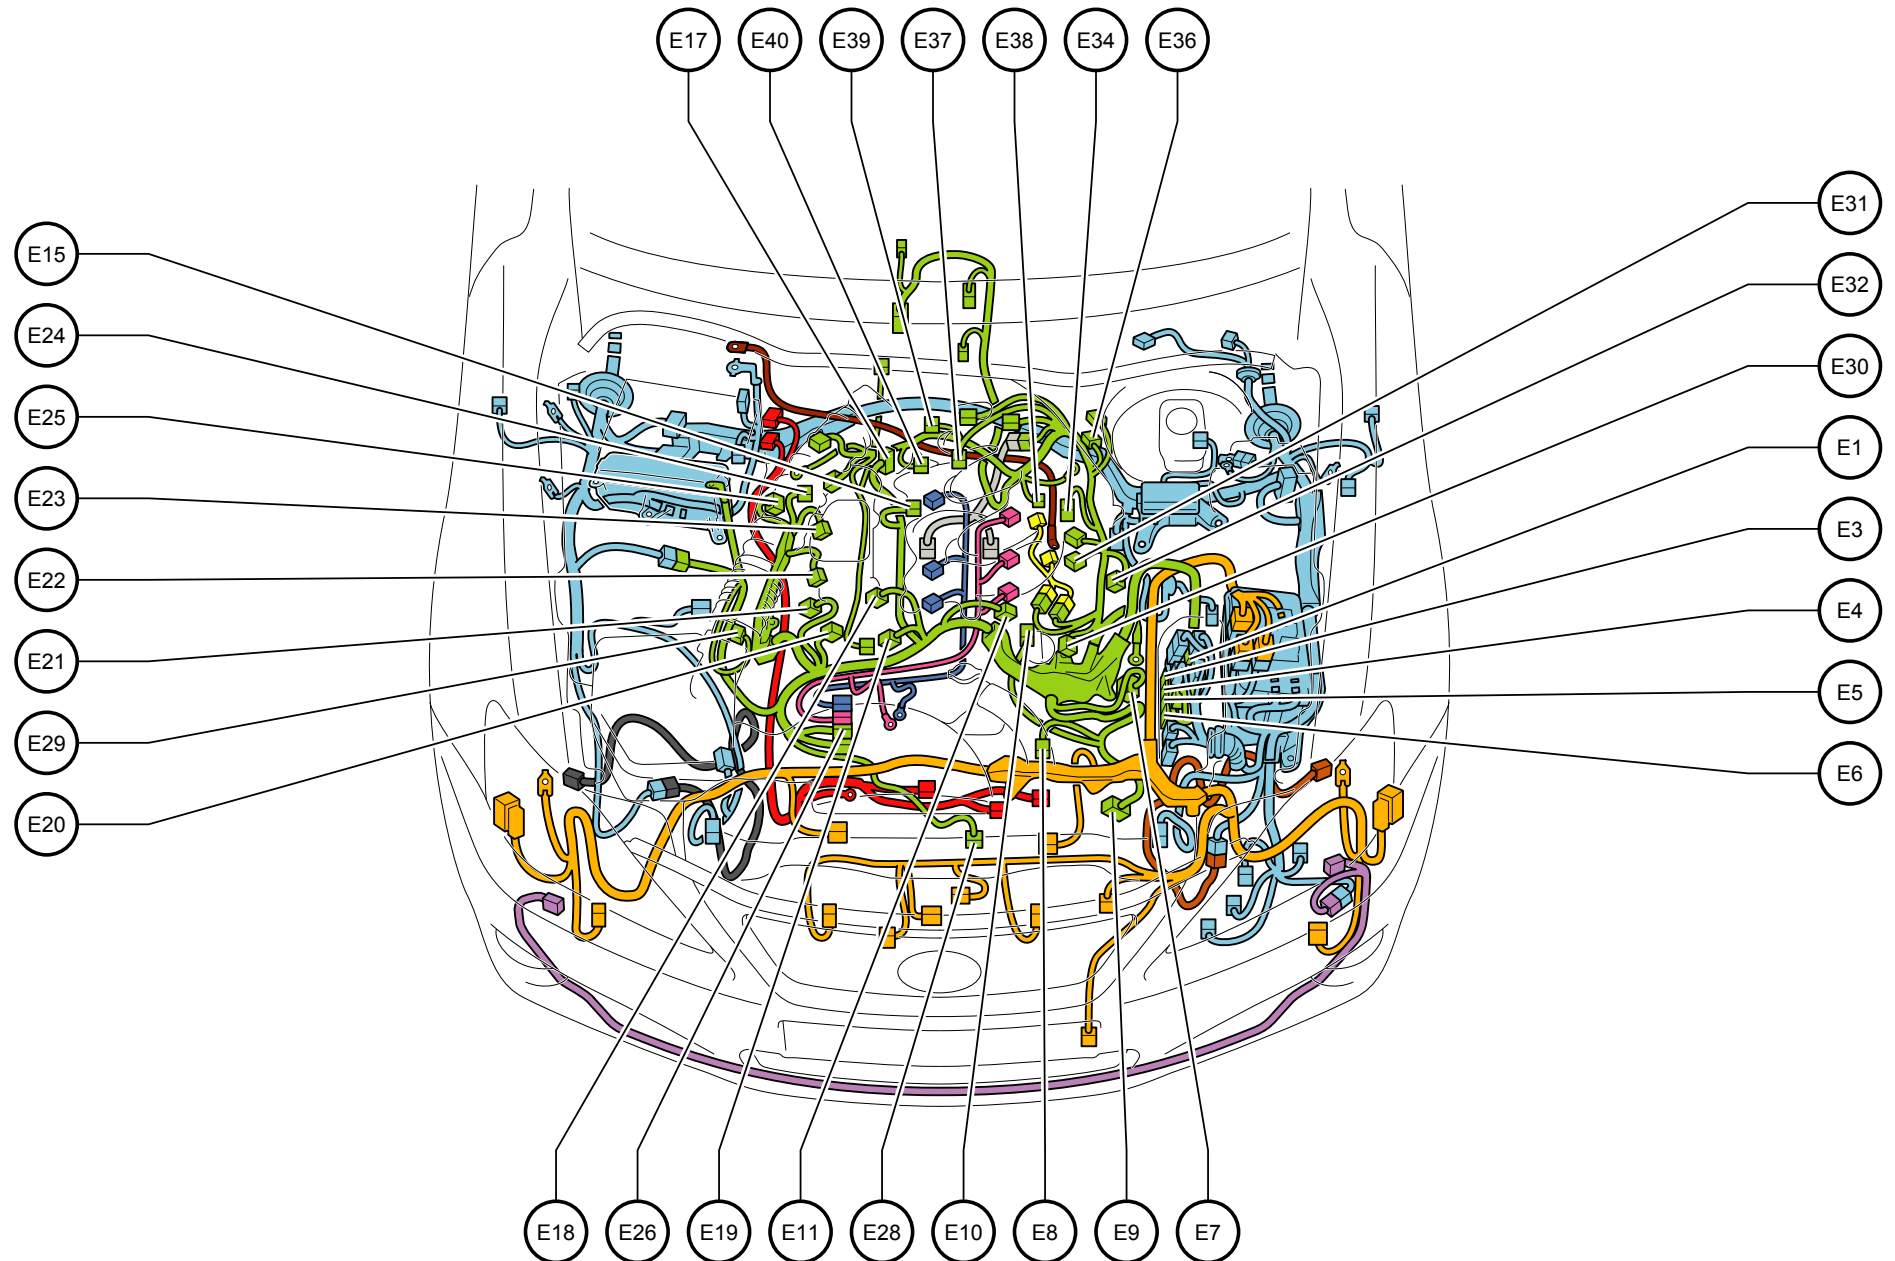

- E 1 Junction Connector
- E 3 ECM
- E 4 ECM
- E 5 ECM
- E 6 ECM
- E 7 Generator Assembly
- E 8 With Magnet Clutch Compressor Assembly
- E 9 Crank Position Sensor
- E 10 Starter Assembly
- E 11 Cam Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- E 15 Purge VSV
- E 17 Throttle with Motor Body Assembly
- E 18 Cam Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- E 19 VVT Sensor (Bank 1 Intake Side)
- E 20 Noise Filter (Ignition No. 1)
- E 21 Cam Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- E 22 Ignition Coil Assembly No. 1
- E 23 Ignition Coil Assembly No. 3
- E 24 Ignition Coil Assembly No. 5
- E 25 VVT Sensor (Bank 1 Exhaust Side)
- E 26 Injector Driver
- E 28 Engine Oil Pressure Switch Assembly
- E 29 Intake Mass Air Flow Meter Sub-Assembly
- E 30 VVT Sensor (Bank 2 Intake Side)
- E 31 Cam Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- E 32 Ignition Coil Assembly No. 2
- E 34 VVT Sensor (Bank 2 Exhaust Side)
- E 36 Noise Filter (Ignition No. 2)
- E 37 Fuel Pressure Sensor
- E 38 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 39 Water By-Pass Glow Plug
- E 40 E.F.I. Engine Coolant Temperature Sensor

