


Position of Parts in Engine Compartment <LHD 4GR-FSE>

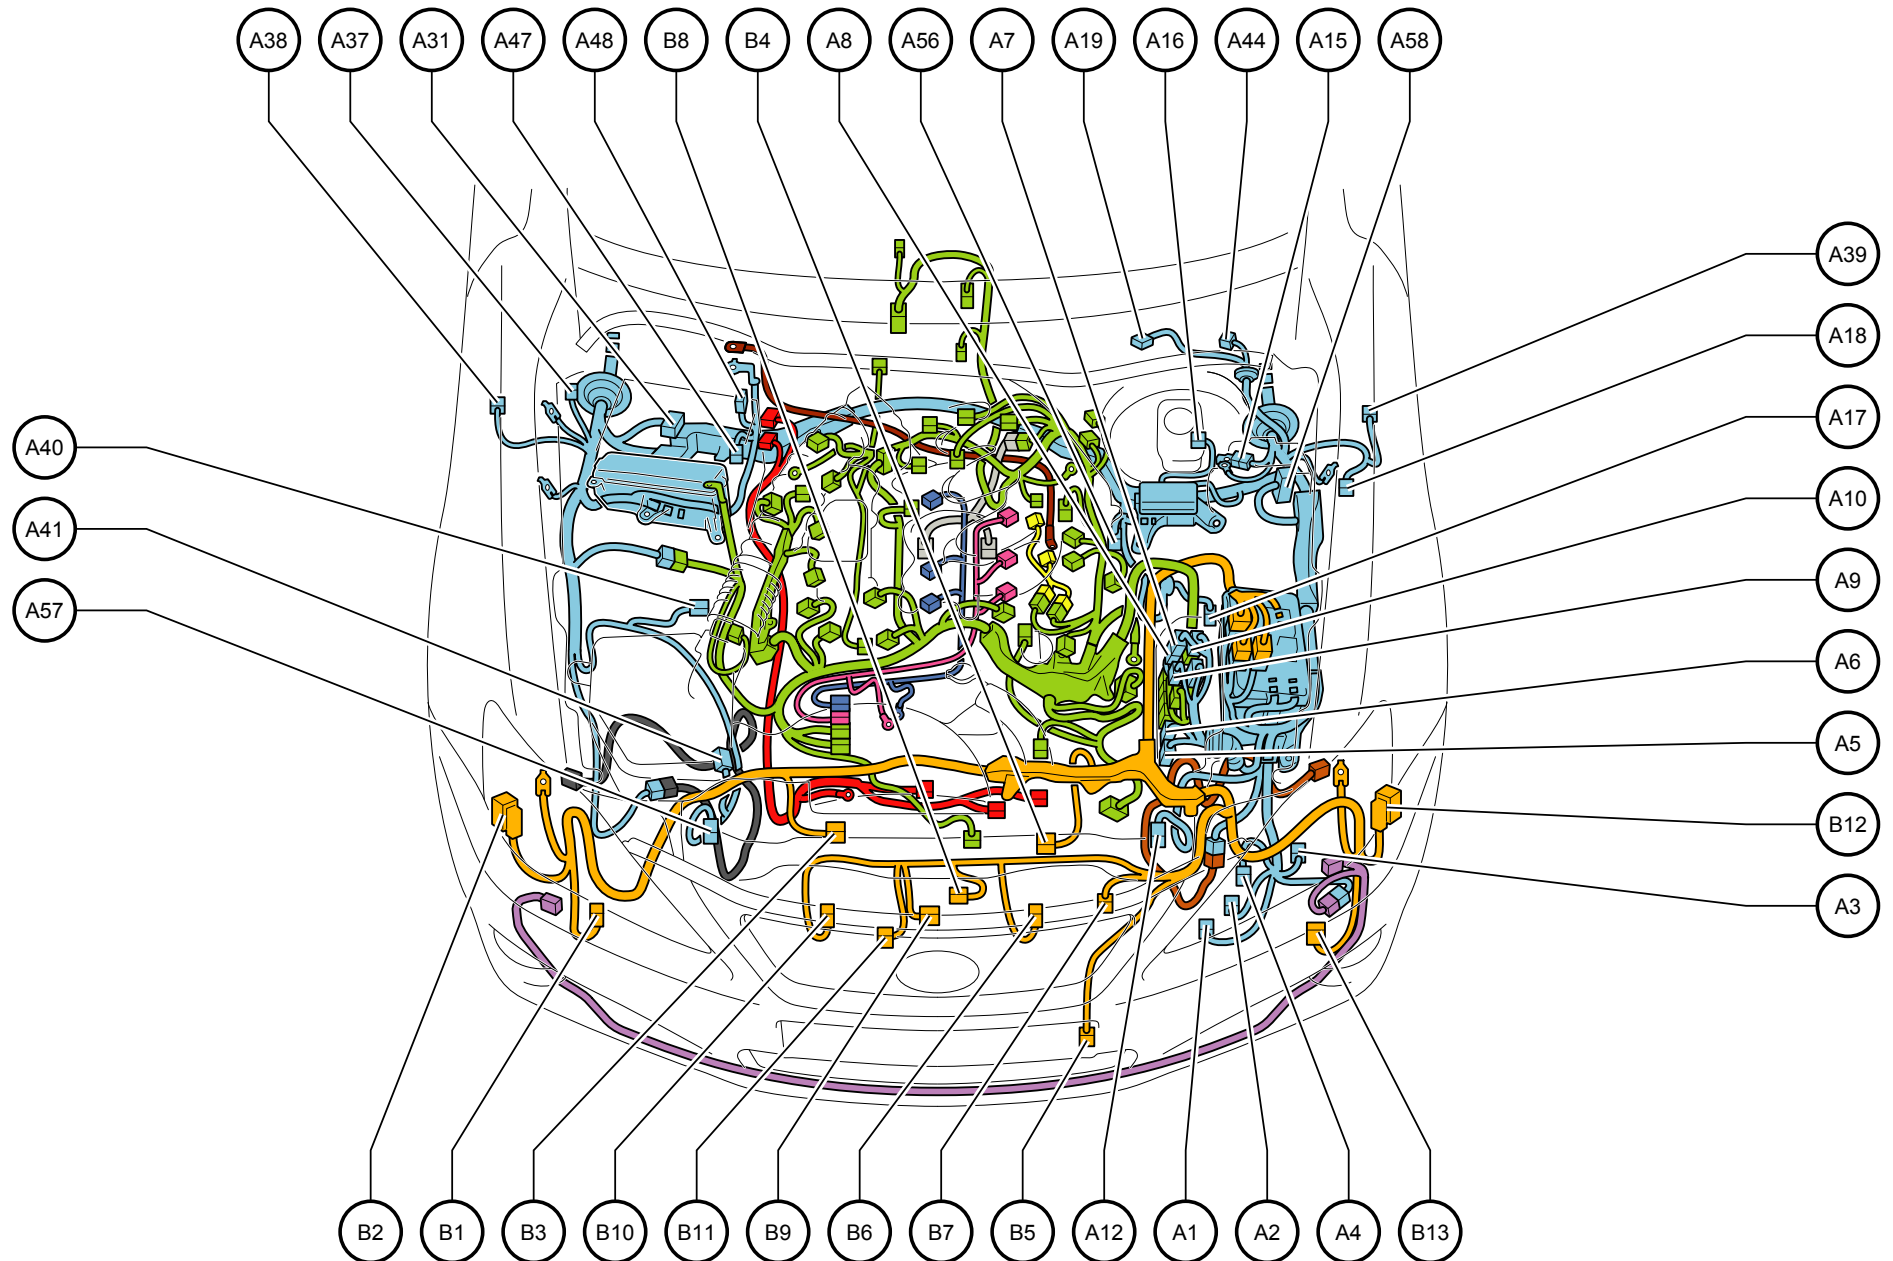

- A 1 Level Warning Switch Assembly
- A 2 Headlight Cleaner Motor and Pump Assembly
- A 3 Headlight Cleaner Control Relay
- A 4 Windshield Washer Motor and Pump Assembly
- A 5 ECM
- A 6 ECM
- A 7 Junction Connector
- A 8 Junction Connector
- A 9 Junction Connector
- A 10 Junction Connector
- A 12 Front Airbag Sensor LH
- A 15 Junction Connector
- A 16 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
- A 17 Front Height Control Sensor Sub-Assembly LH
- A 18 Wireless Door Lock Buzzer
- A 19 Windshield Wiper Motor Assembly
- A 31 Power Steering ECU Assembly
- A 37 Security Horn Assembly
- A 38 Front Tire Pressure Warning Antenna RH
- A 39 Front Tire Pressure Warning Antenna LH
- A 40 Fuel Pump Resistor
- A 41 Front Airbag Sensor RH
- A 44 Front Wiper Deicer (Windshield Glass)
- A 47 Battery Thermometer Sensor Assembly
- A 48 Battery Current Sensor Assembly
- A 56 A/C Pressure Sensor (Suction Pipe Sub-Assembly)
- A 57 Noise Filter
- A 58 Brake Actuator Assembly

- B 1 Fog Light Assembly RH
- B 2 Headlight Assembly RH
- B 3 No. 2 Cooling Fan Motor
- B 4 Cooling Fan Motor
- B 5 Cooler (Ambient Temperature Sensor) Thermistor
- B 6 Low Pitched Horn Assembly
- B 7 A/C Pressure Sensor
- B 8 Engine Hood Courtesy Switch
- B 9 Millimeter Wave Radar Sensor Assembly
- B 10 High Pitched Horn Assembly
- B 11 Smog Ventilation Sensor
- B 12 Headlight Assembly LH
- B 13 Fog Light Assembly LH

