


Position of Parts in Engine Compartment <RHD 4GR-FSE>

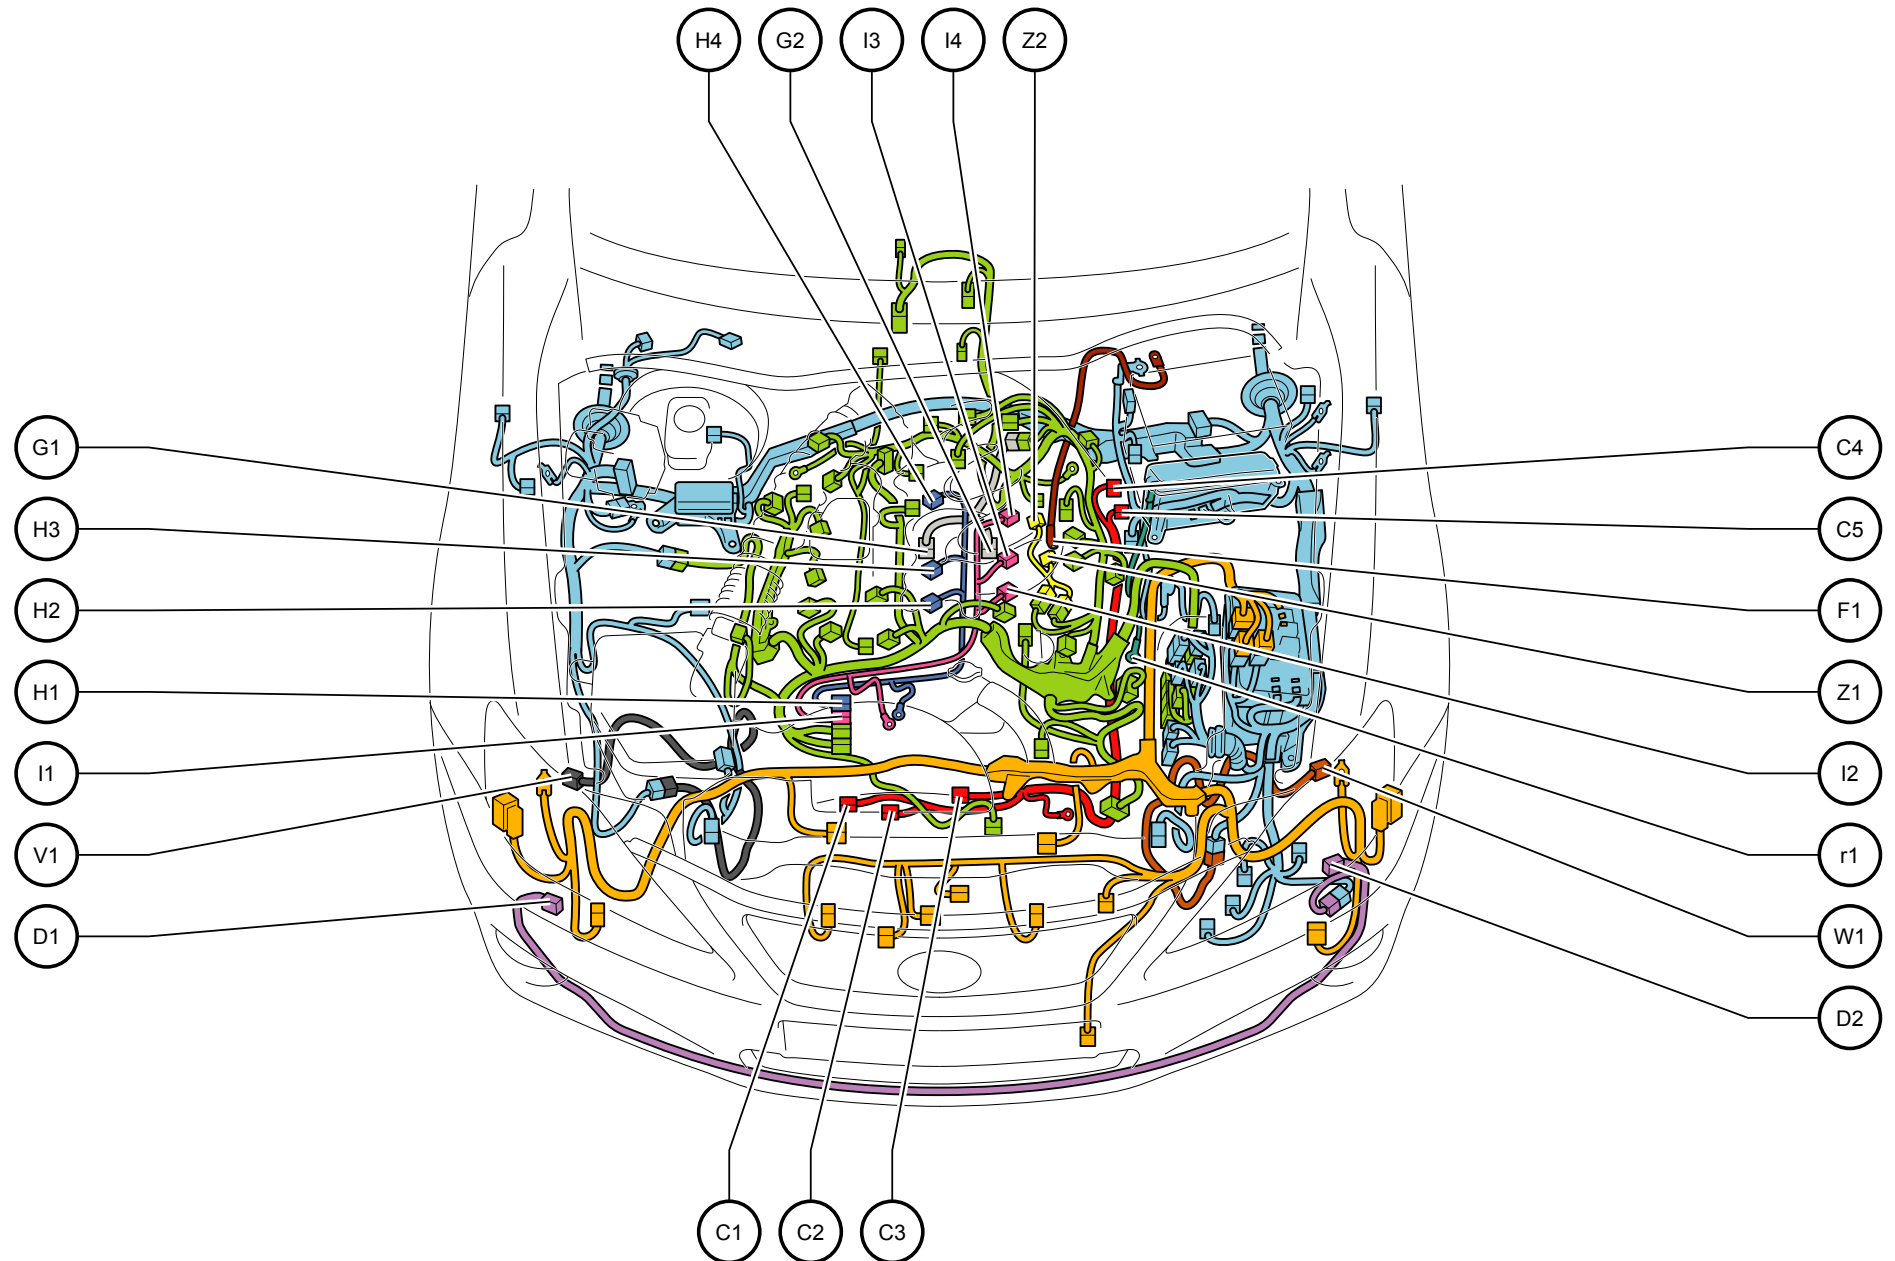

- C 1 Steering Torque Sensor (Power Steering Link Assembly)
- C 2 Power Steering Motor (Power Steering Link Assembly)
- C 3 Power Steering Motor (Power Steering Link Assembly)
- C 4 Power Steering ECU Assembly
- C 5 Power Steering ECU Assembly

- D 1 Front No. 1 Ultrasonic Sensor RH
- D 2 Front No. 1 Ultrasonic Sensor LH

- F 1 Starter Assembly

- G 1 Knock Control Sensor (Bank 1)
- G 2 Knock Control Sensor (Bank 2)

- H 1 Injector Driver
- H 2 Fuel Injector Assembly No. 1
- H 3 Fuel Injector Assembly No. 2
- H 4 Fuel Injector Assembly No. 3

- I 1 Injector Driver
- I 2 Fuel Injector Assembly No. 2
- I 3 Fuel Injector Assembly No. 4
- I 4 Fuel Injector Assembly No. 6


- V 1 Front Speed Sensor RH

- W 1 Front Speed Sensor LH


- Z 1 Ignition Coil Assembly No. 4
- Z 2 Ignition Coil Assembly No. 6

- r 1 Generator Assembly


C 1
Gray

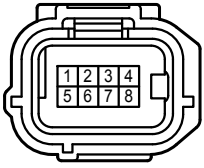


C 2
Gray

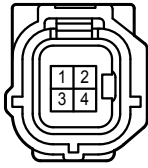


C 3
Gray

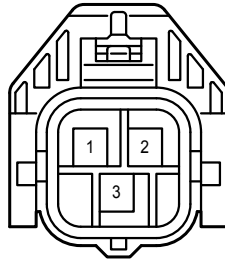


C 4
Gray

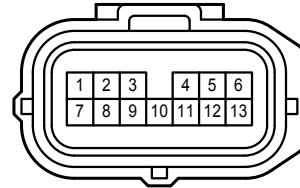


C 5
Gray

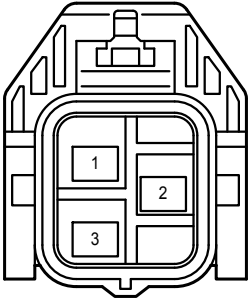


D 1
Black

 


D 2
Black

 


F 1

 

G 1
Black

 

G 2
Gray

 

H 1
Black



H 2
Black



H 3
Black



H 4
Black



I 1
Gray



I 2
Black



I 3
Black



I 4
Black



 
V 1
Black




W 1
Black



Z 1
Black



Z 2
Gray

 

r 1

