


* 3: Refer to the Service Bulletin
for the installation position of the parts.

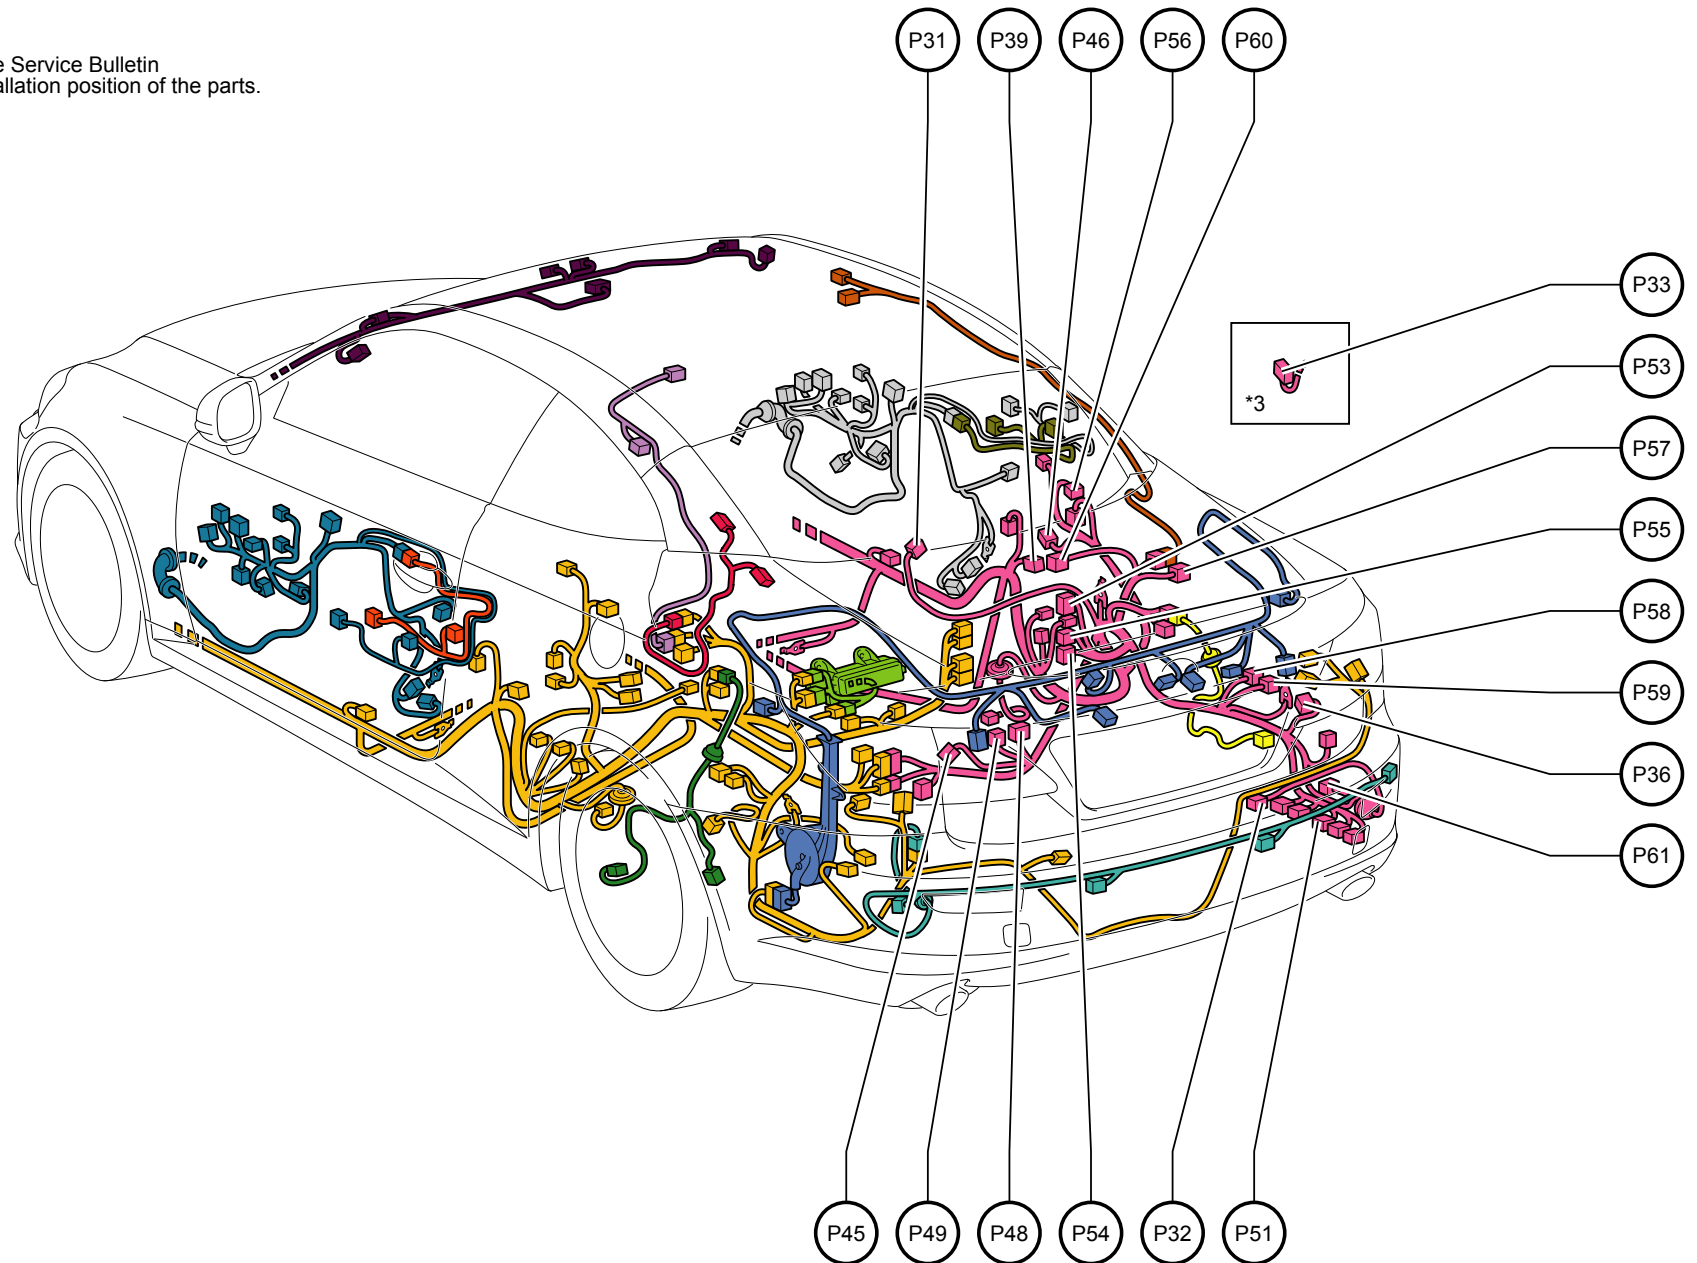

- P 31 Door Control Receiver
- P 32 Outside Luggage Electrical Key Antenna
- P 33 Certification ECU Assembly
- P 36 Theft Warning Siren Assembly
- P 39 Side Airbag Sensor Assembly RH
- P 45 Stereo Component Speaker Assembly
- P 46 Rear Speaker Assembly RH
- P 46 Rear Speaker Assembly RH
- P 48 Seat Belt Control ECU
- P 49 Seat Belt Control ECU
- P 51 Stereo Component Amplifier Assembly
- P 53 Sliding Roof Control ECU Assembly
- P 54 Sliding Roof Control ECU Assembly
- P 55 Sliding Roof Control ECU Assembly
- P 56 Roof Panel Strength Sub-Assembly RH
- P 57 Slide Roof Motor Assembly RH
- P 58 Luggage Compartment Door Hinge Assembly RH
- P 59 Luggage Compartment Door Hinge Assembly RH
- P 60 Package Tray Trim Bracket
- P 61 Under Side Tonneau Cover Switch (Deck Side Trim Box RH)

Position of Parts in Body <LHD>

