


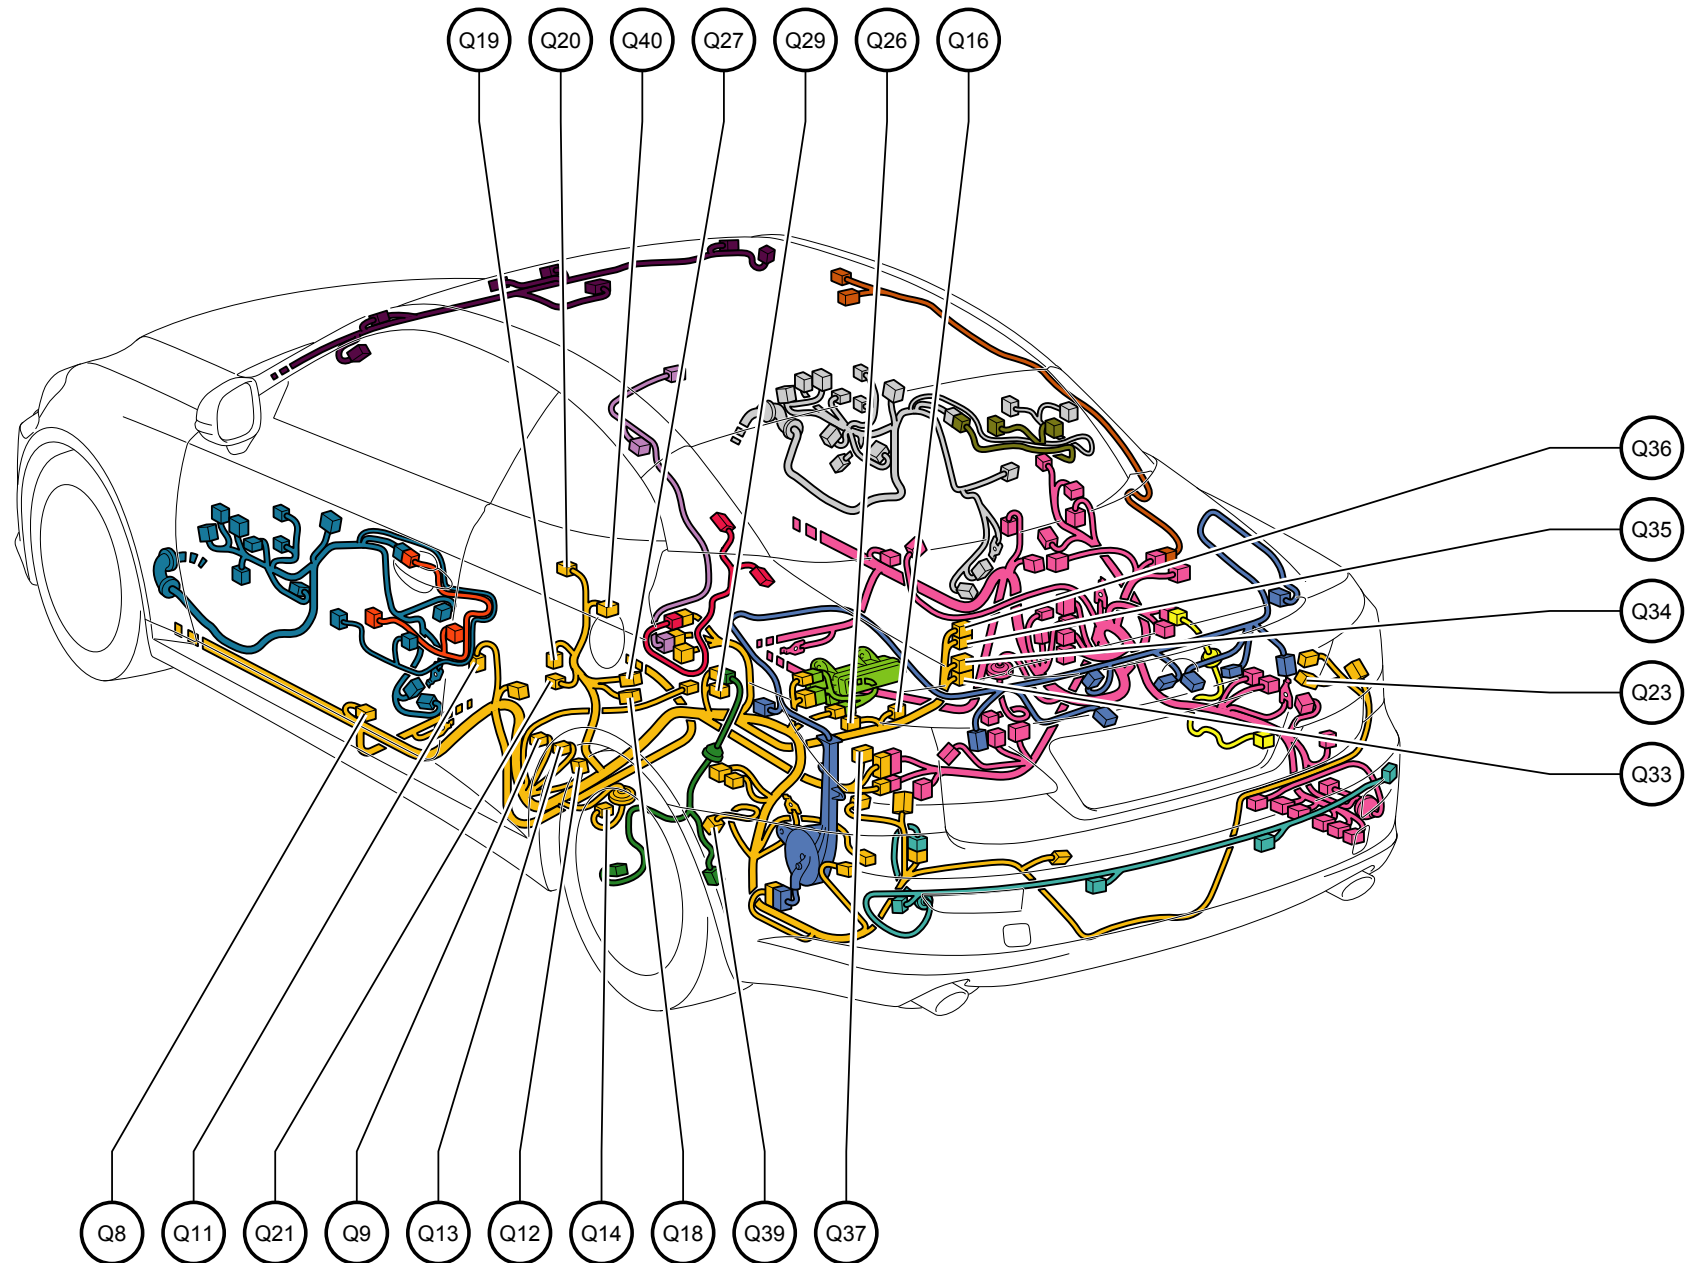

- Q 8 Door Scuff Plate Assembly LH
- Q 9 Front Tension Reducer LH (Front Seat Outer Belt Assembly LH)
- Q 11 Front Door Courtesy Light Switch Assembly LH
- Q 12 Front Pretensioner LH (Front Seat Outer Belt Assembly LH)
- Q 13 Front Pre-Crash Seat Belt Motor LH (Front Seat Outer Belt Assembly LH)
- Q 14 Fuel Pump , Fuel Sender Gauge Assembly
- Q 16 Diode (Luggage Room Light)
- Q 18 Noise Filter (Stop Light)
- Q 19 Quarter Power Window Regulator Motor Assembly LH
- Q 20 Rear No. 2 Speaker Assembly LH
- Q 21 Rear Speaker Assembly LH
- Q 21 Rear Speaker Assembly LH
- Q 23 Rear Room Light Assembly RH
- Q 26 Noise Filter (Defogger)
- Q 27 Noise Filter (Luggage Room Light)
- Q 29 Rear Tire Pressure Warning Antenna LH
- Q 33 Sliding Roof Control ECU Assembly
- Q 34 Sliding Roof Control ECU Assembly
- Q 35 Sliding Roof Control ECU Assembly
- Q 36 Sliding Roof Control ECU Assembly
- Q 37 Clearance Warning ECU Assembly
- Q 39 Fuel Lid with Motor Lock Assembly
- Q 40 No. 2 Roof Panel Strength Sub-Assembly LH

Position of Parts in Body <RHD>

