


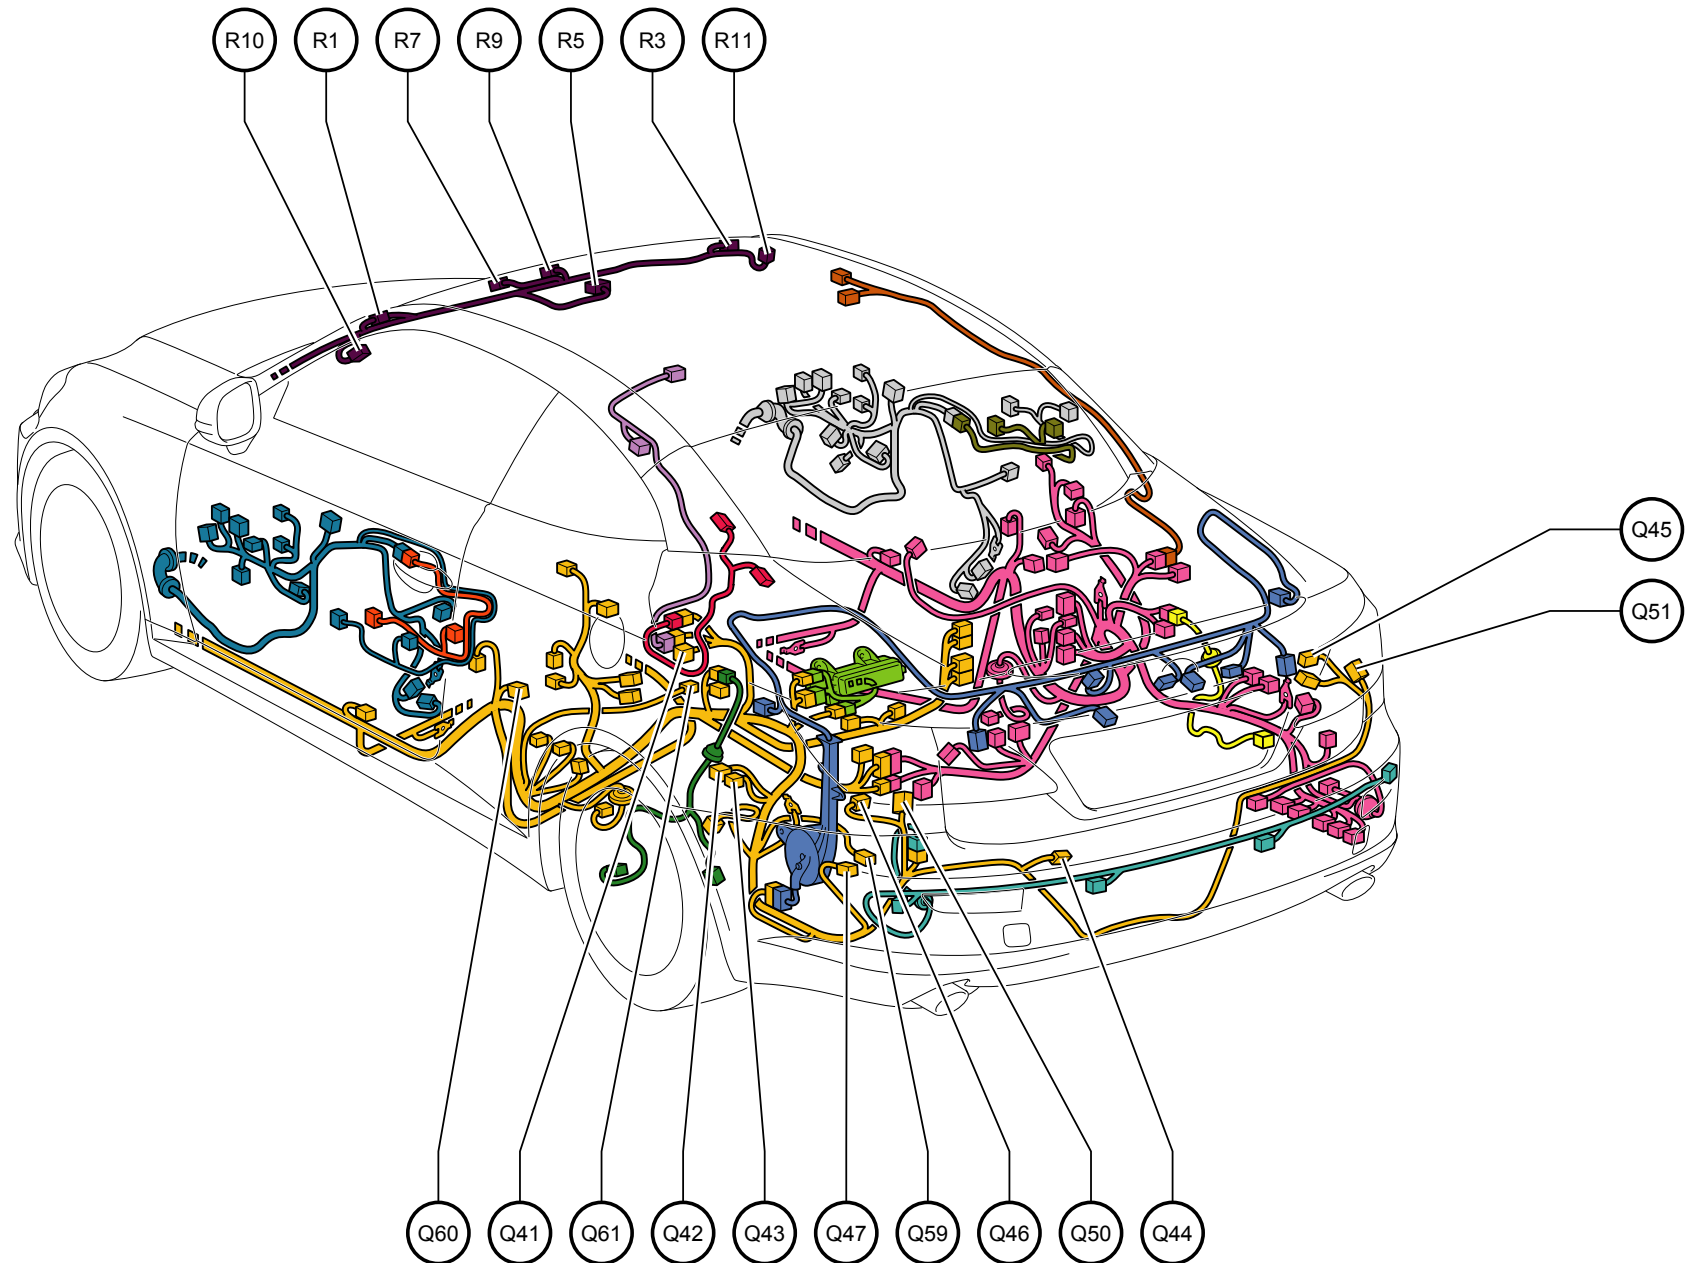

- Q 41 Slide Roof Motor Assembly LH
- Q 42 Luggage Compartment Door Hinge Assembly LH
- Q 43 Luggage Compartment Door Hinge Assembly LH
- Q 44 Luggage Compartment Door Lock Assembly
- Q 45 Upper Side Tonneau Cover Switch (Side Package Tray Trim Cover RH)
- Q 46 Under Side Tonneau Cover Switch (Side Package Tray Trim Cover LH)
- Q 47 Under Side Tonneau Cover Switch (Deck Side Trim Box LH)
- Q 50 Rear Combination Light Assembly LH
- Q 51 Rear Combination Light Assembly RH
- Q 59 Indoor Luggage Compartment Electrical Key Oscillator
- Q 60 Side Airbag Sensor Assembly LH
- Q 61 Rear Indoor Electrical Key Oscillator

- R 1 Vanity Light Assembly LH
- R 3 Vanity Light Assembly RH
- R 5 Map Light Assembly
- R 7 Rain Sensor
- R 9 Inner Rear View Mirror Assembly
- R 10 Roof Close Switch LH (Removable Roof Auxiliary Catch Assembly LH)
- R 11 Roof Close Switch RH (Removable Roof Auxiliary Catch Assembly RH)

Position of Parts in Body <RHD>

