

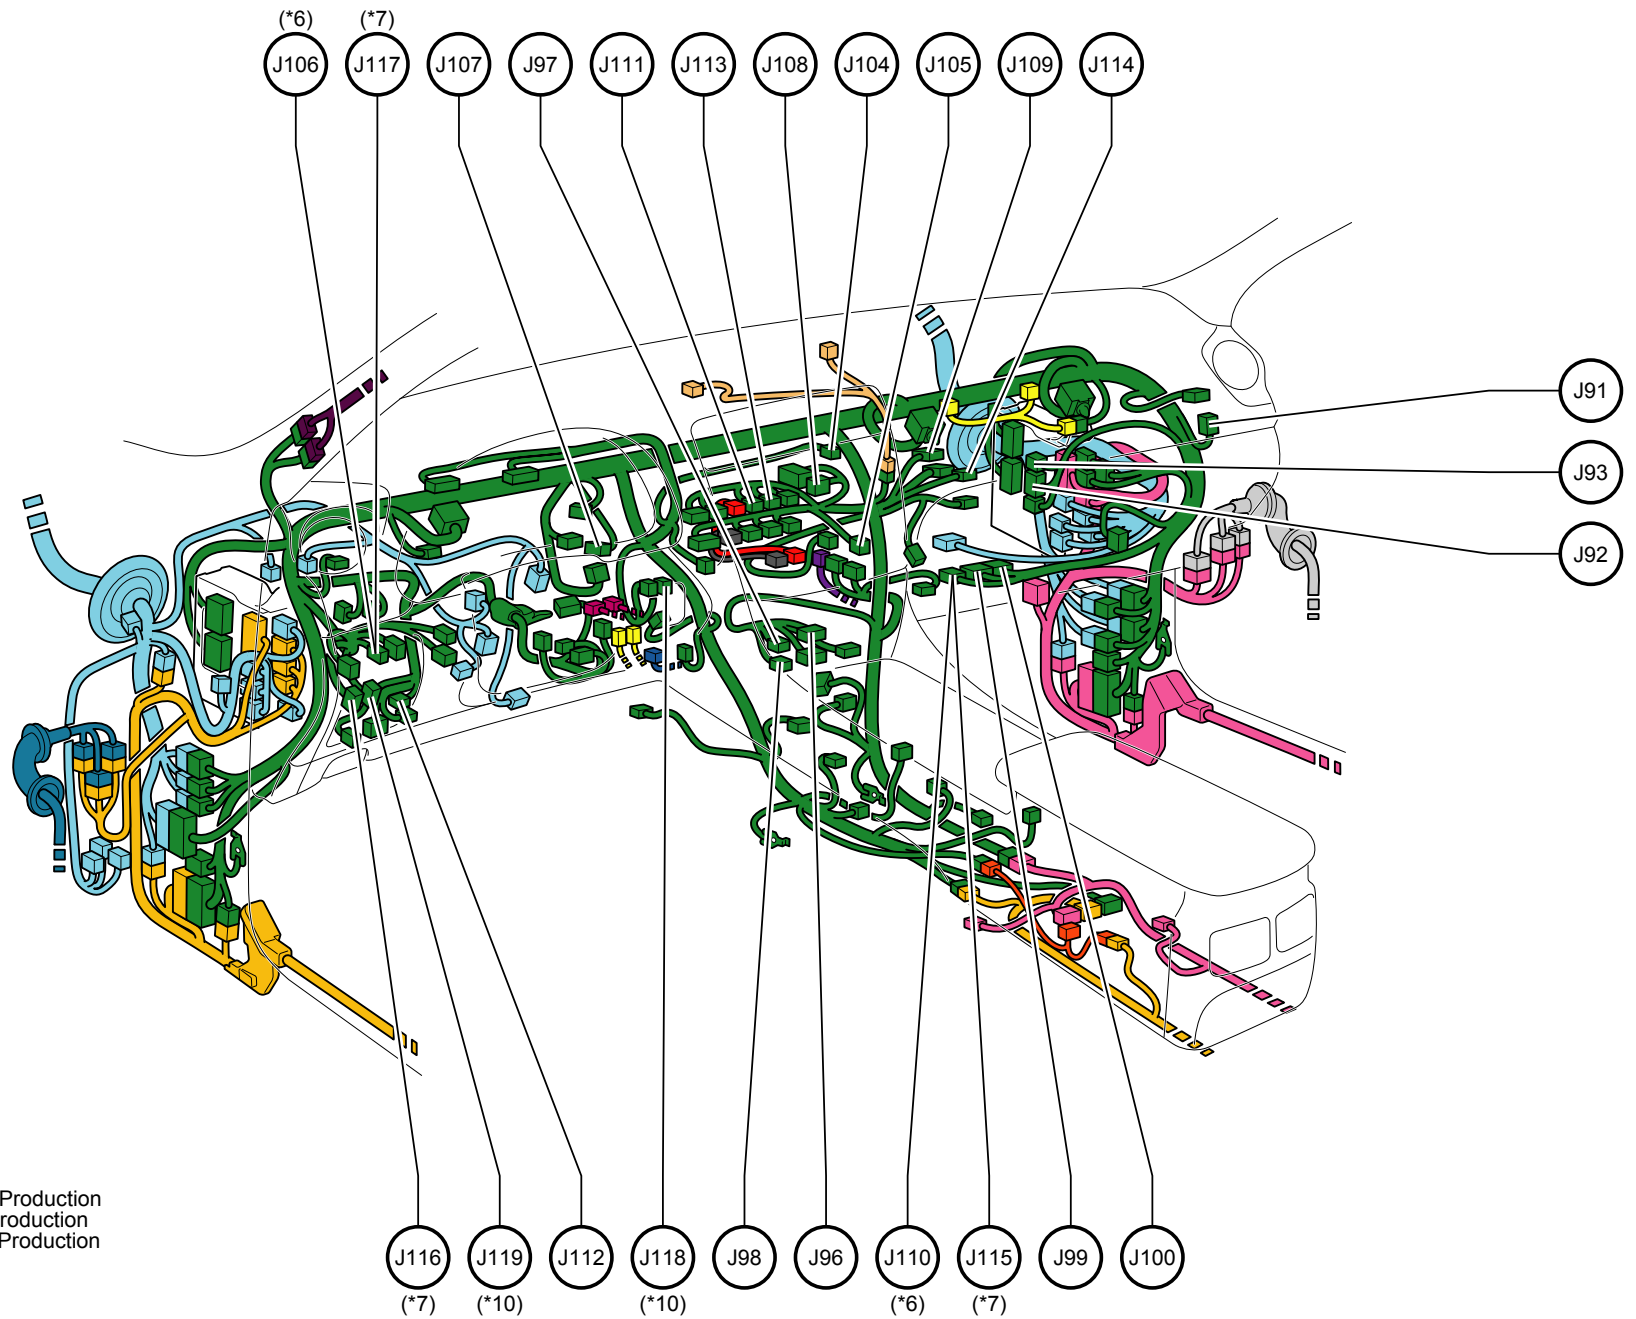
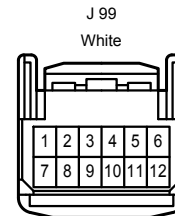
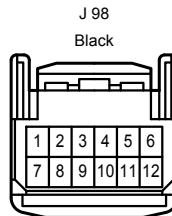
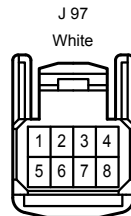
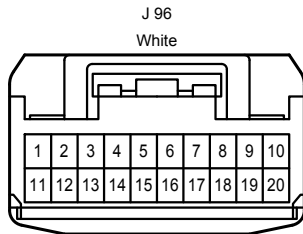
 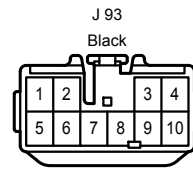


Position of Parts in Instrument Panel <LHD>

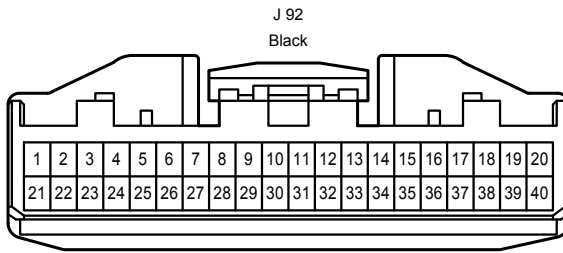


- J 91 Airbag Cut Off Switch Cylinder Sub-Assembly
- J 92 Parking Assist ECU
- J 93 Parking Assist ECU
- J 96 Radio Receiver Assembly
- J 97 Radio Receiver Assembly
- J 98 Radio Receiver Assembly
- J 99 Multi-Media Interface ECU
- J 99 Multi-Media Interface ECU
- J 100 Multi-Media Interface ECU
- J 104 Front Center Register No. 2 Interior Illumination Light Assembly
- J 105 Clock Assembly
- J 106 Sliding Roof Switch Assembly
- J 107 Turn Signal Relay Assembly
- J 108 Tire Pressure Warning ECU and Receiver
- J 109 Telematics Transceiver
- J 110 Multi-Media Interface ECU
- J 111 Display & Navigation Module Display
- J 112 IEEE Connector
- J 113 Display & Navigation Module Display
- J 114 Telematics Transceiver
- J 115 Multi-Media Interface ECU
- J 116 Luggage Door Opening Switch Assembly
- J 117 Sliding Roof Switch Assembly
- J 118 Front Wiper Deicer Switch
- J 119 VSC Off Switch

Position of Parts in Instrument Panel <LHD>



(w/o LEXUS Navigation System)

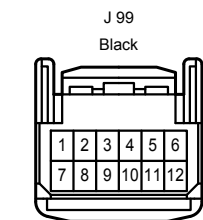

(w/ LEXUS Navigation System)

