


Position of Parts in Instrument Panel <LHD>

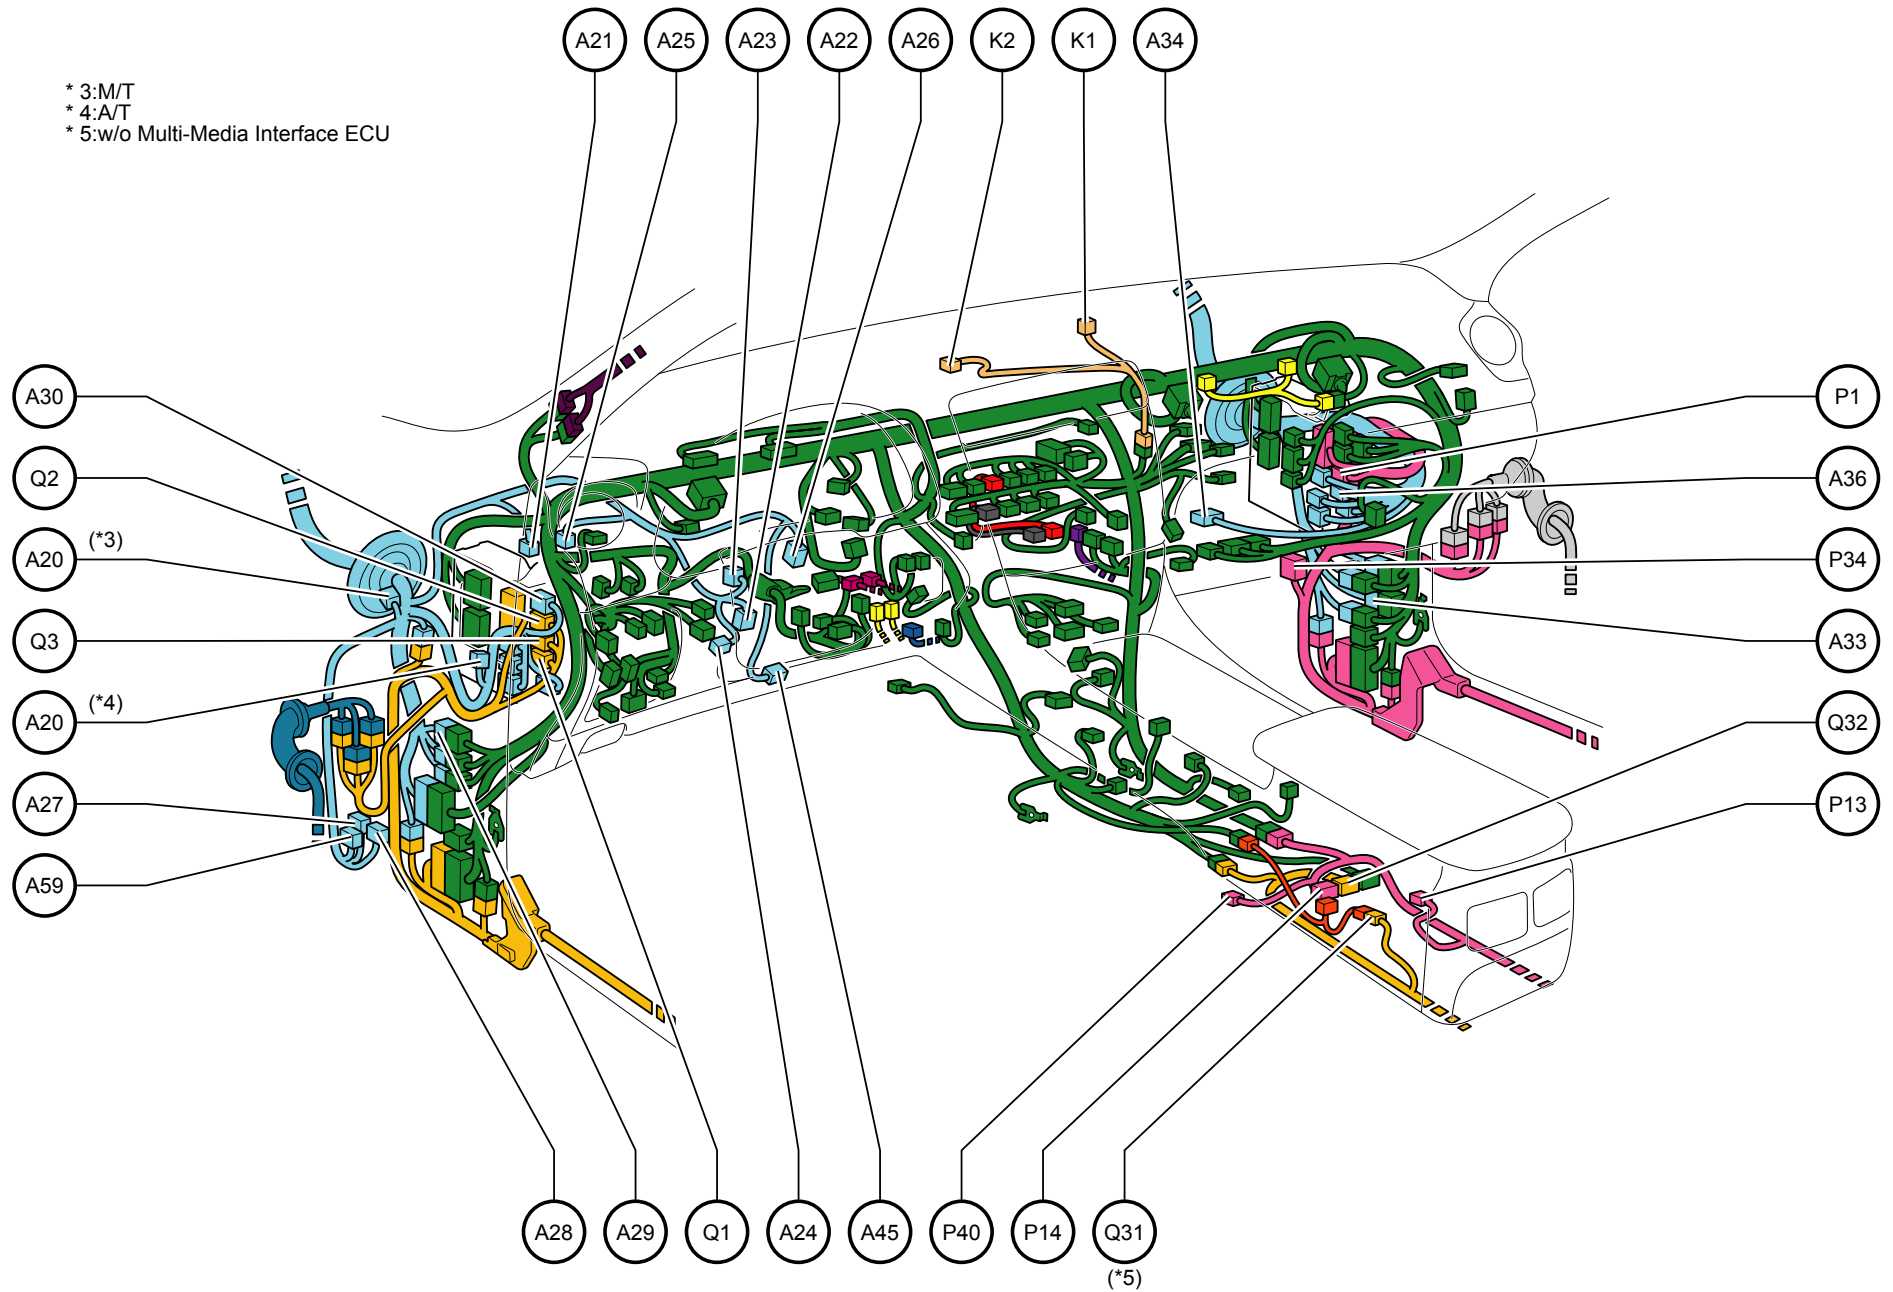


 



 










 
 
 
 
 
 
A 20 Junction Connector
A 21 Clutch Switch Assembly
A 22 Stop Light Switch Assembly
A 23 Brake Pedal Load Sensing Switch
A 24 Clutch Start Switch Assembly
A 25 Parking Brake Switch Assembly
A 26 Accelerator Position Sensor (Accelerator Pedal Assembly)
A 27 Headlight Swivel ECU Assembly
A 28 Headlight Swivel ECU Assembly
A 29 Junction Connector
A 30 Main Body ECU LH (Cowl Side J/B LH)
A 33 Junction Connector
A 34 Cooling Unit Motor Sub-Assembly with Fan
A 36 Main Body ECU RH (Cowl Side J/B RH)
A 45 Kick Down Switch Assembly
A 59 Headlight Leveling ECU Assembly

K 1 Automatic Light Control Sensor
K 2 Front No. 4 Speaker Assembly
K 2 Front No. 4 Speaker Assembly

P 1 Main Body ECU RH (Cowl Side J/B RH)
P 13 Power Outlet Socket Assembly
P 14 Center Airbag Sensor Assembly
P 34 Double Lock Door Control Relay Assembly
P 40 Indoor Console Electrical Key Oscillator

Q 1 Main Body ECU LH (Cowl Side J/B LH)
Q 2 Main Body ECU LH (Cowl Side J/B LH)
Q 3 Main Body ECU LH (Cowl Side J/B LH)
Q 31 No. 1 Stereo Jack Adapter Assembly
Q 32 Center Airbag Sensor Assembly

Position of Parts in Instrument Panel <LHD>

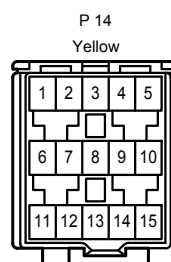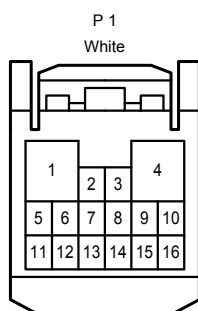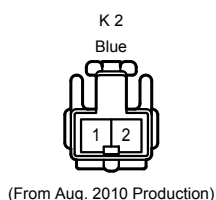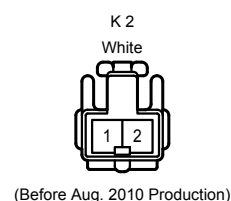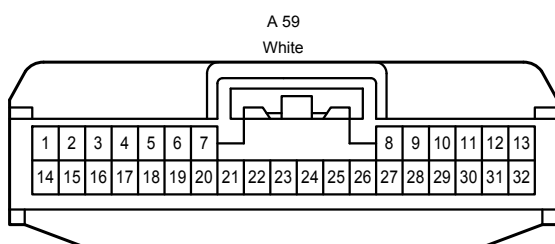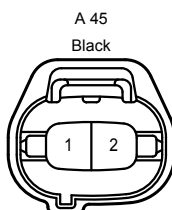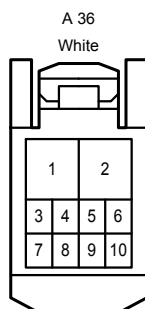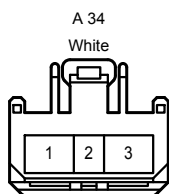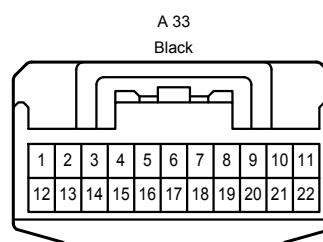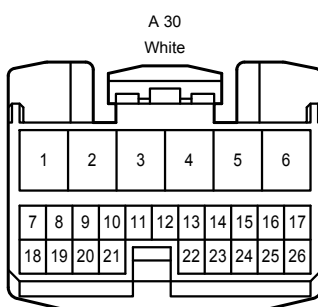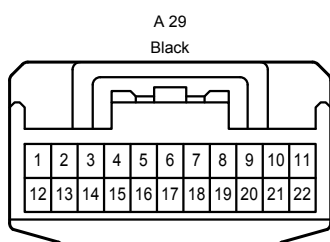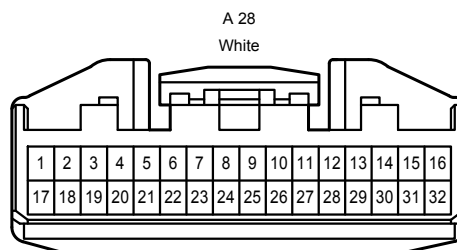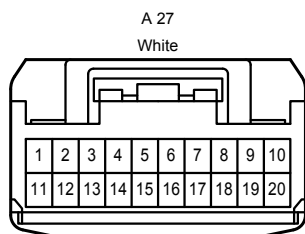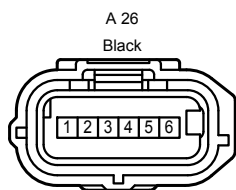

Position of Parts in Instrument Panel <LHD>

