



Position of Parts in Instrument Panel <RHD>

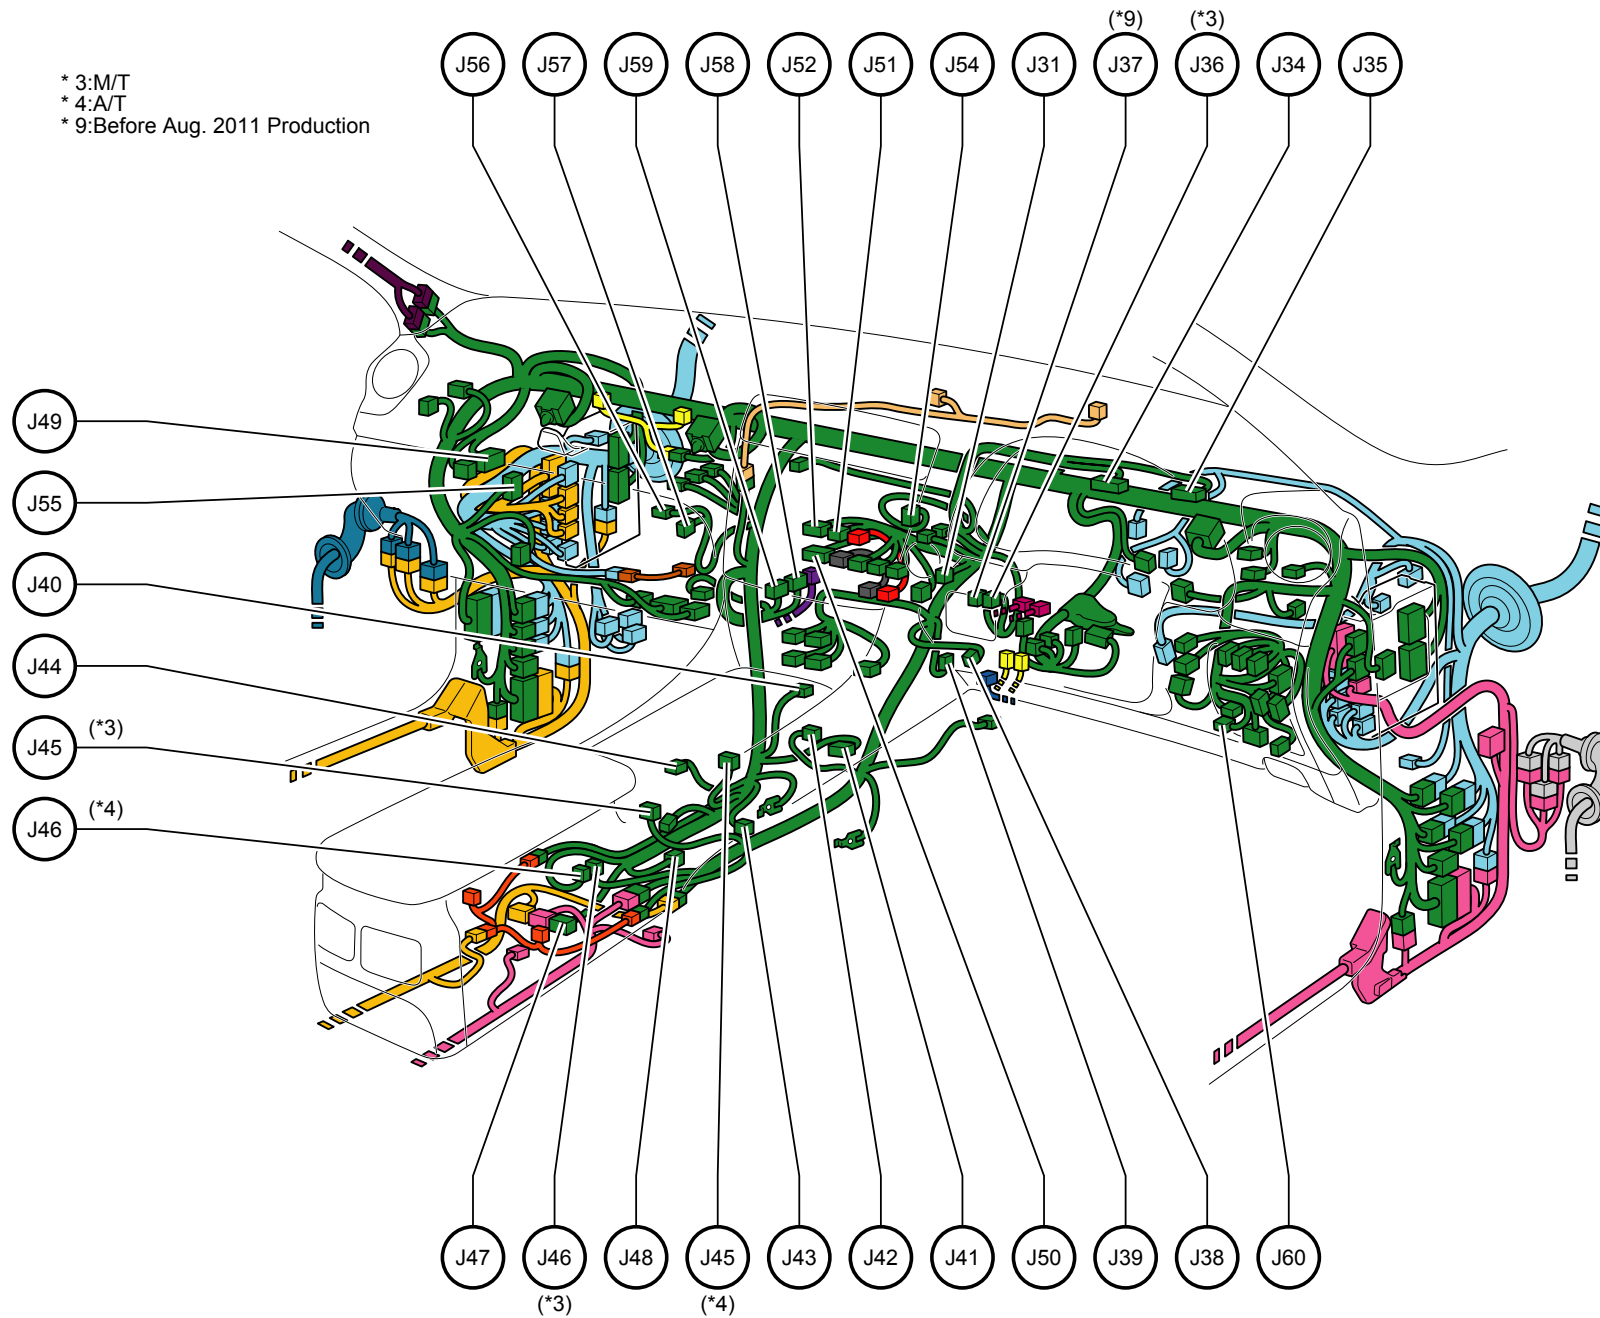


- J 31 Engine Switch
- J 34 Combination Meter Assembly
- J 35 Combination Meter Assembly
- J 36 Throttle Position Switch Assembly
- J 37 VSC Off Switch
- J 38 A/C Room Temperature Sensor (Cooler Thermistor)
- J 39 No. 1 Clearance Warning Buzzer
- J 40 Oxygen Sensor (Bank 2 Sensor 2)
- J 41 Yaw Rate Sensor
- J 42 Cigarette Lighter Assembly
- J 43 Transmission Control Switch
- J 44 Shift Position Indicator
- J 45 Seat Heater Switch
- J 46 Console Box Illumination Light Assembly
- J 47 Center Airbag Sensor Assembly
- J 48 Shift Lock Control ECU Sub-Assembly
- J 49 Tire Pressure Warning ECU and Receiver
- J 50 Display & Navigation Module Display
- J 51 Display & Navigation Module Display
- J 52 Display & Navigation Module Display
- J 54 Integration Control & Panel Assembly
- J 55 Power Source Control ECU
- J 56 Glove Box Light Assembly
- J 57 Luggage Door Opening Cancel Switch Assembly
- J 58 A/C Amplifier Assembly
- J 59 A/C Amplifier Assembly
- J 60 No. 1 Interior Illumination Light Assembly RH

Position of Parts in Instrument Panel <RHD>


J 31
Black

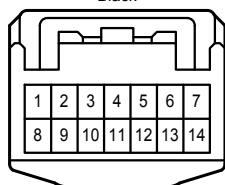


J 34
Black

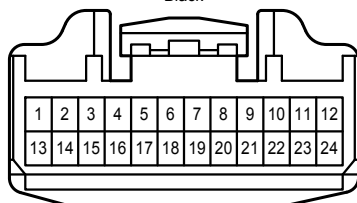

J 35
Black

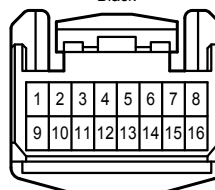

J 36
Blue

 


J 37
Black



J 38
Black



 
J 39
Black




J 40
Dark Gray




J 41
Black

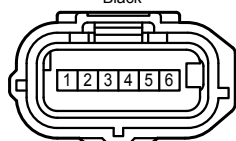

J 42
White

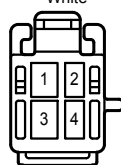


J 43
White

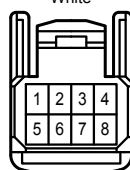

J 44
White




J 45
Black

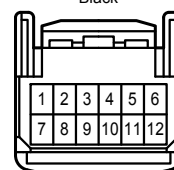


J 46
White




J 47
Yellow

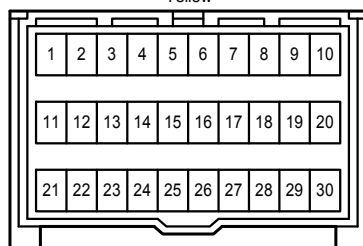


J 48
White

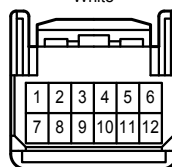


J 49
White

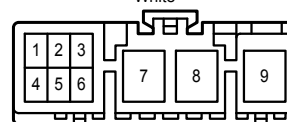


J 50
White

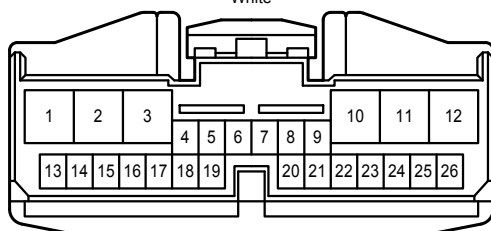


J 51
Black

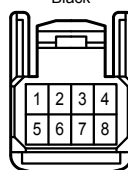


J 52
White

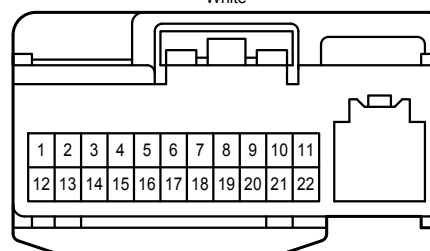

J 54
White

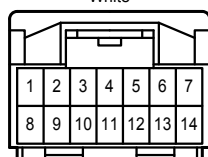

J 55
White

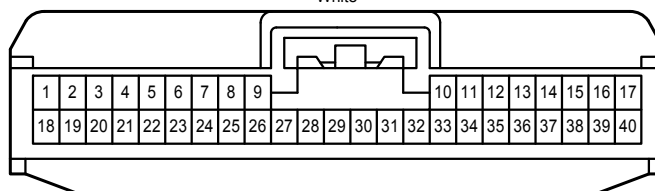

J 56
White



Position of Parts in Instrument Panel <RHD>

