


Position of Parts in Seat <LHD>

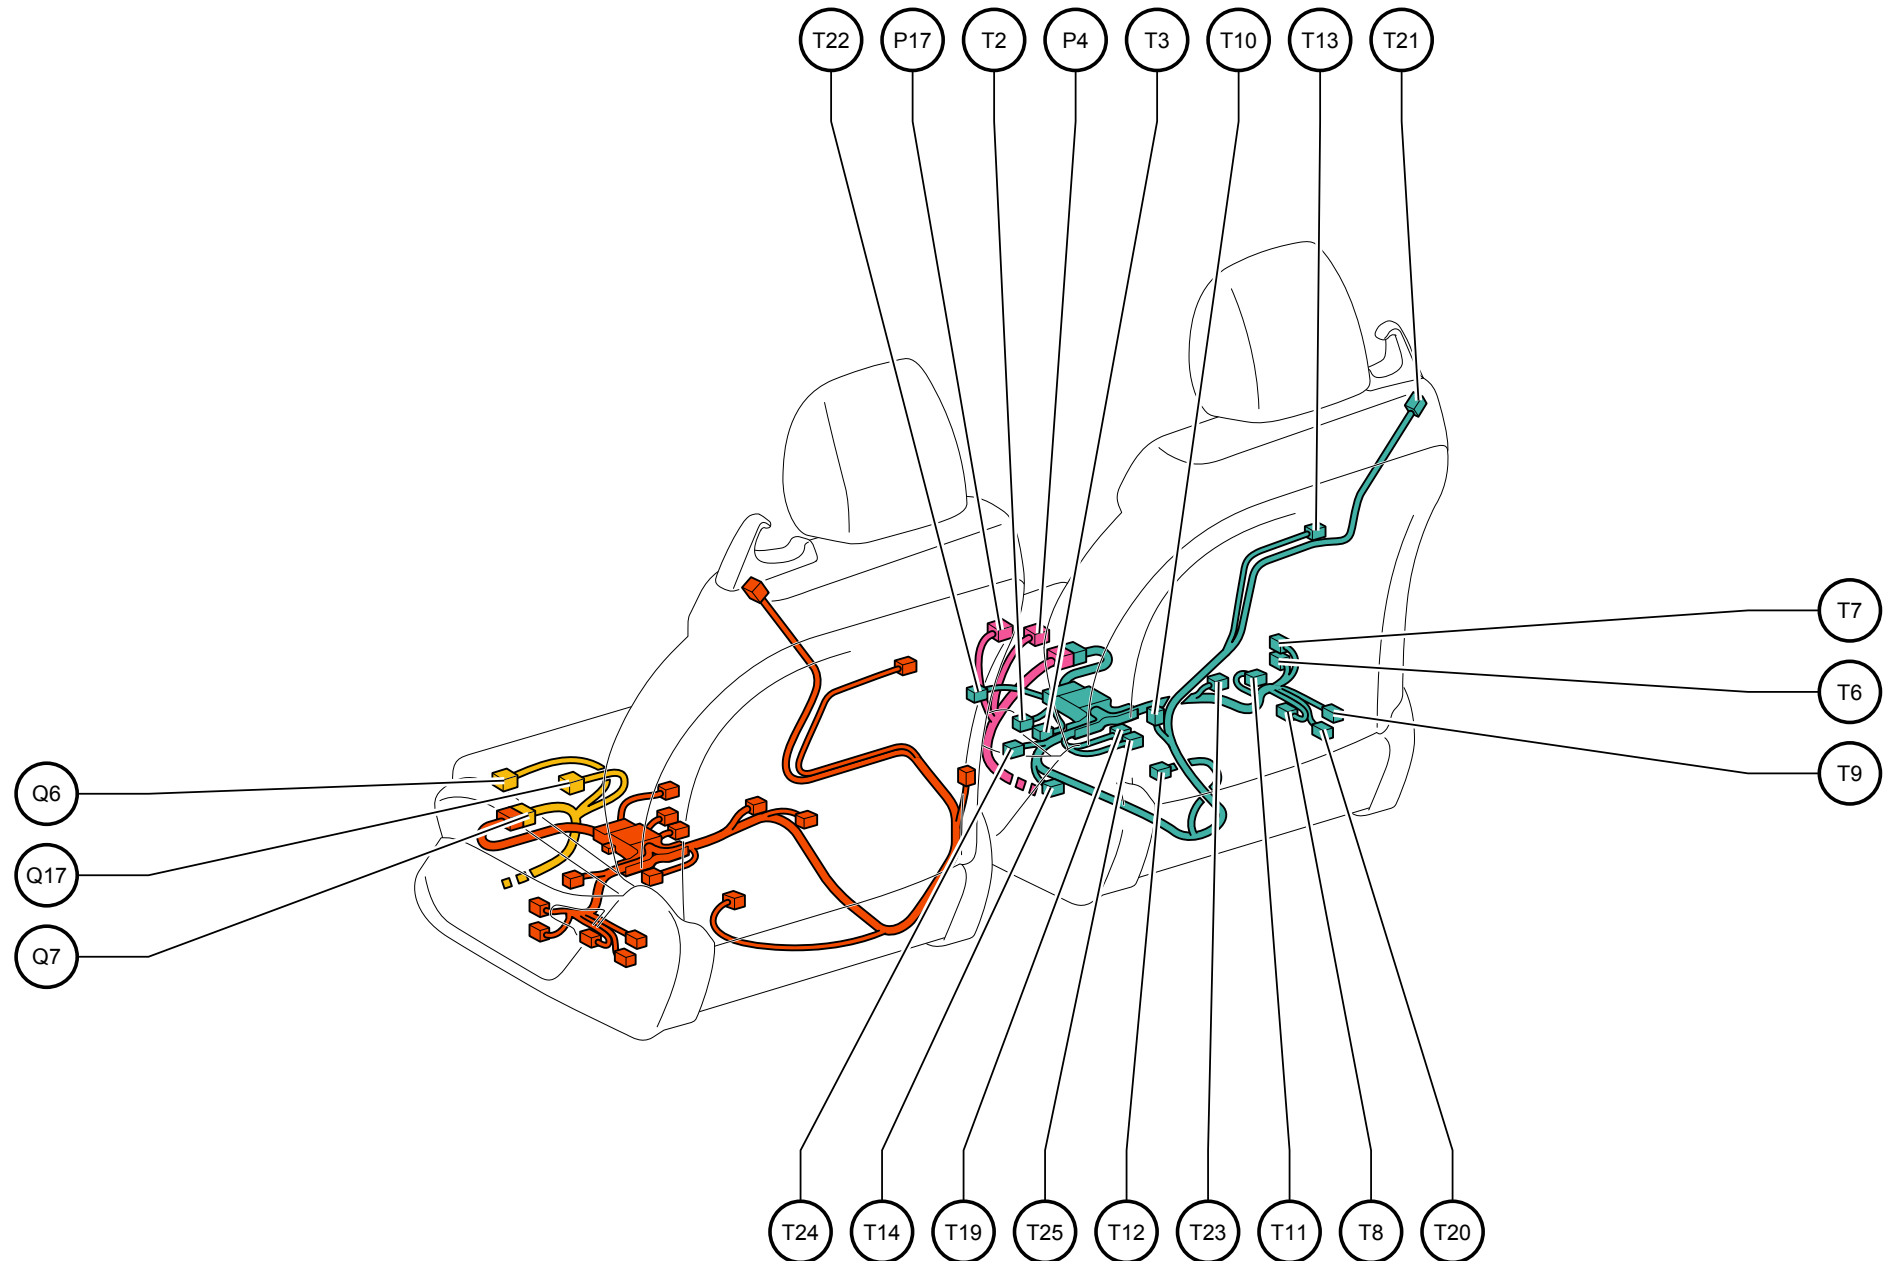

- P 4 Front Seat Inner Belt Assembly RH
- P 17 Side Airbag Squib Circuit RH

- Q 6 Front Seat Inner Belt Assembly LH
- Q 7 Junction Connector
- Q 17 Side Airbag Squib Circuit LH

- T 2 Seat Heater Control Sub-Assembly RH
- T 3 Front Seat Inner Belt Assembly RH
- T 6 Front Position Control ECU & Switch Assembly RH
- T 7 Front Position Control ECU & Switch Assembly RH
- T 8 Front Lumbar Power Seat Switch RH
- T 9 Front Power Seat Reclining Position Motor Assembly RH
- T 10 Front Lumbar Support Motor Assembly RH
- T 11 Junction Connector
- T 12 Seat Cushion Climate Control Blower RH
- T 13 Seat Back Climate Control Blower RH
- T 14 Junction Connector
- T 19 Diode (Tension Reducer RH)
- T 20 Reclining Position Sensor RH
- T 21 Front Power Seat Slide Switch Assembly RH
- T 22 Front Power Seat Slide Position Motor and Sensor RH (Front Seat Adjuster Assembly RH)
- T 23 Front Power Seat Vertical Position Motor and Sensor RH (Front Seat Adjuster Assembly RH)
- T 24 Front Power Seat Lifter Position Motor and Sensor RH (Front Seat Adjuster Assembly RH)
- T 25 Diode (Occupant Detection Sensor RH)

Position of Parts in Seat <LHD>

