


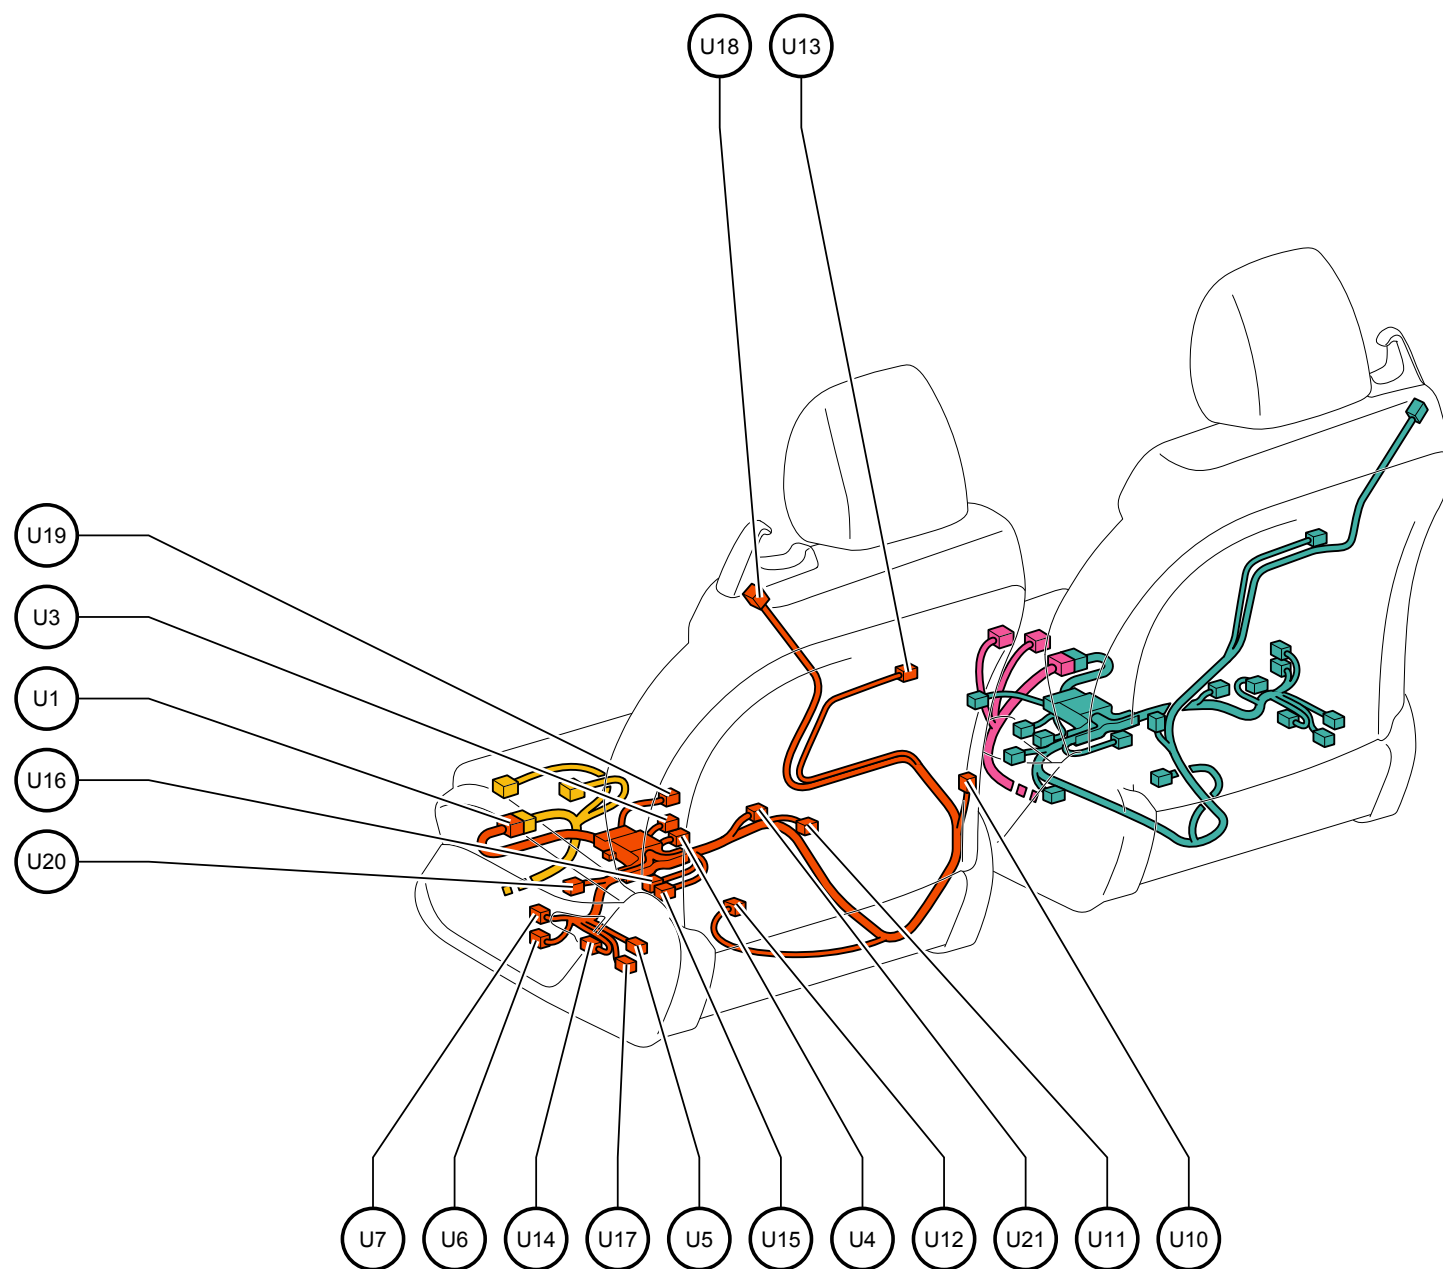

- U 1 Junction Connector
- U 3 Seat Heater Control Sub-Assembly LH
- U 4 Front Seat Inner Belt Assembly LH
- U 5 Front Power Seat Reclining Position Motor Assembly LH
- U 6 Front Position Control ECU & Switch Assembly LH
- U 7 Front Position Control ECU & Switch Assembly LH
- U 10 Front Lumbar Support Motor Assembly LH
- U 11 Junction Connector
- U 12 Seat Cushion Climate Control Blower LH
- U 13 Seat Back Climate Control Blower LH
- U 14 Front Lumbar Power Seat Switch LH
- U 15 Diode (Occupant Detection Sensor LH)
- U 16 Diode (Tension Reducer LH)
- U 17 Reclining Position Sensor LH
- U 18 Front Power Seat Slide Switch Assembly LH
- U 19 Front Power Seat Slide Position Motor and Sensor LH (Front Seat Adjuster Assembly LH)
- U 20 Front Power Seat Vertical Position Motor and Sensor LH (Front Seat Adjuster Assembly LH)
- U 21 Front Power Seat Lifter Position Motor and Sensor LH (Front Seat Adjuster Assembly LH)

Position of Parts in Seat <RHD>

