 
 



Luggage Compartment Door Opener

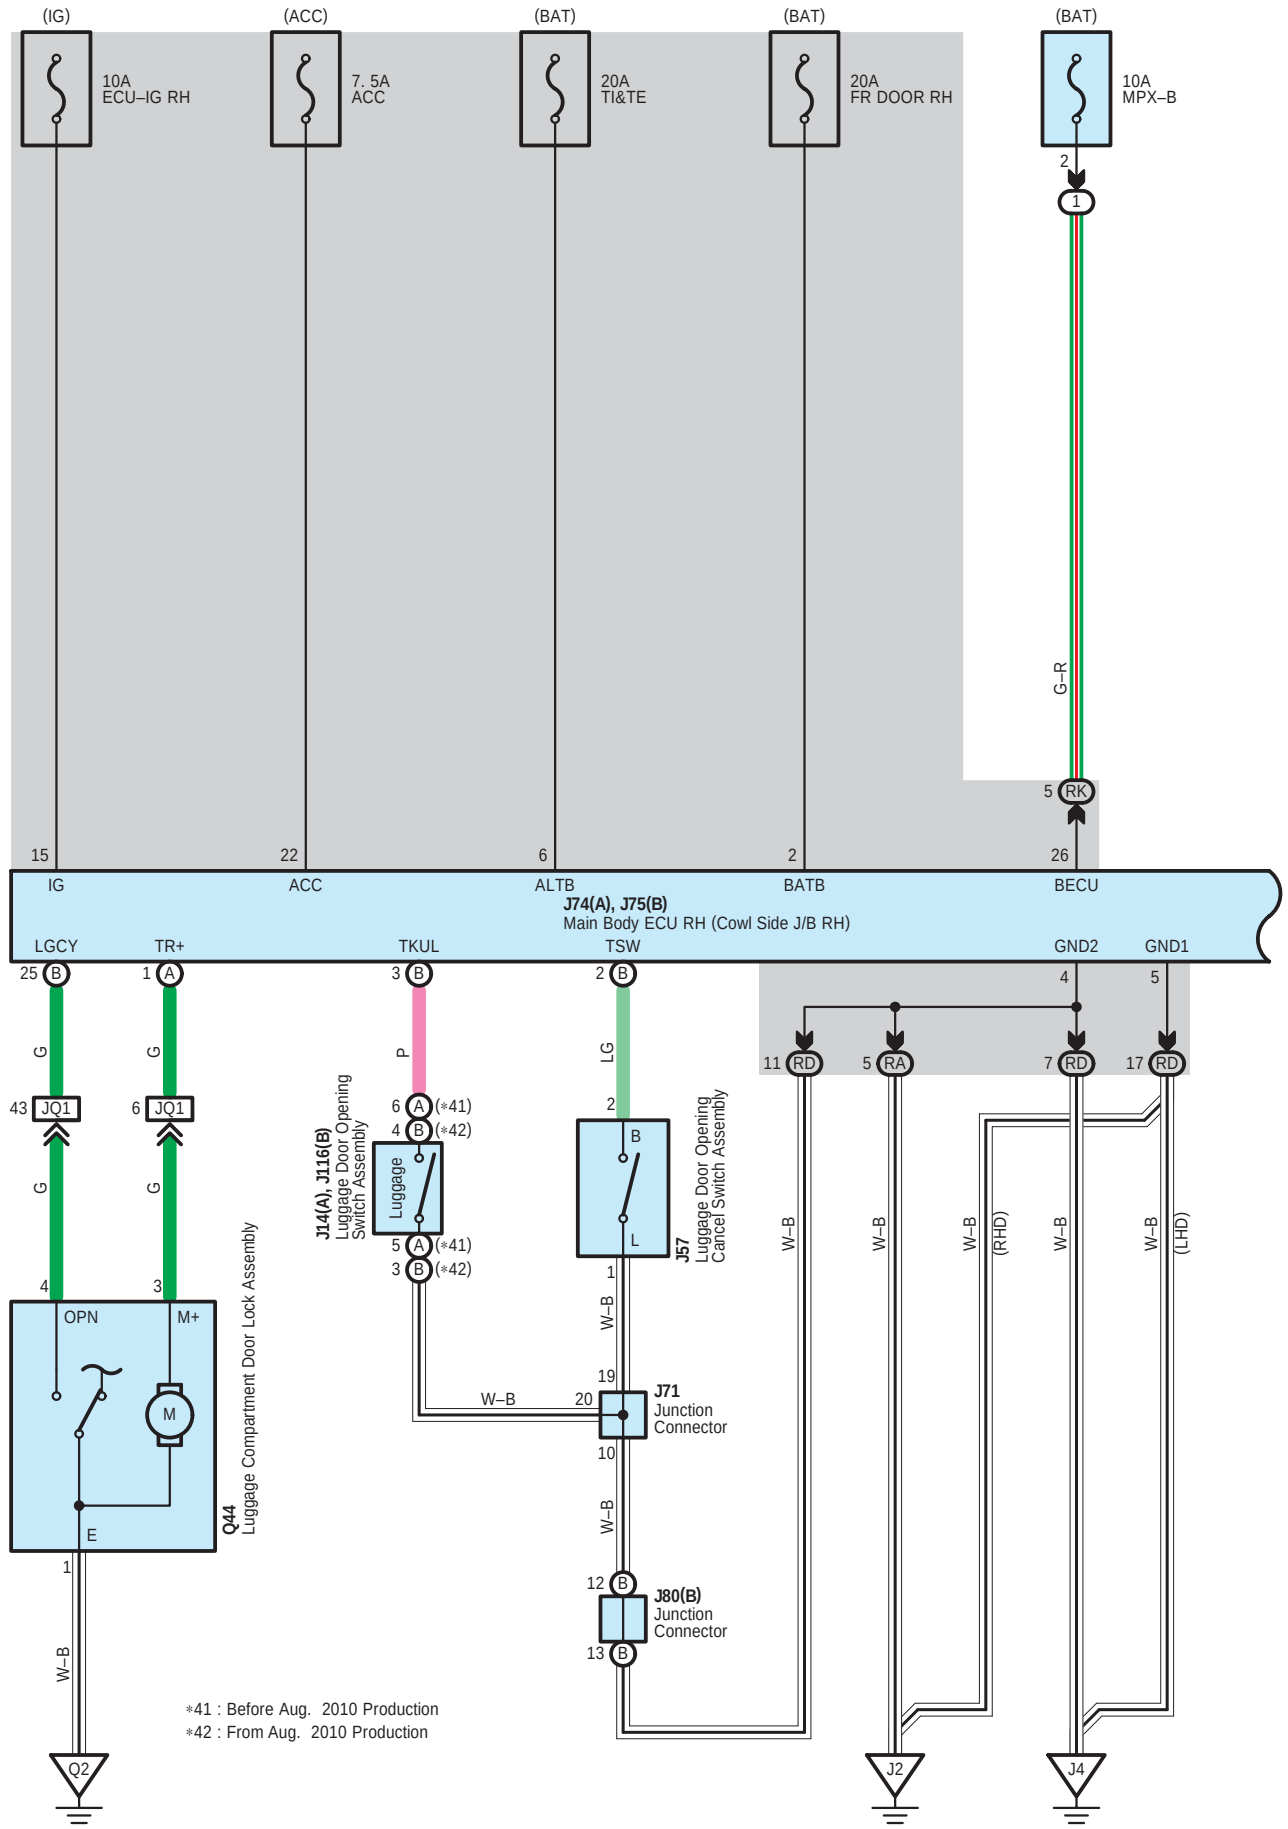


Luggage Compartment Door Opener

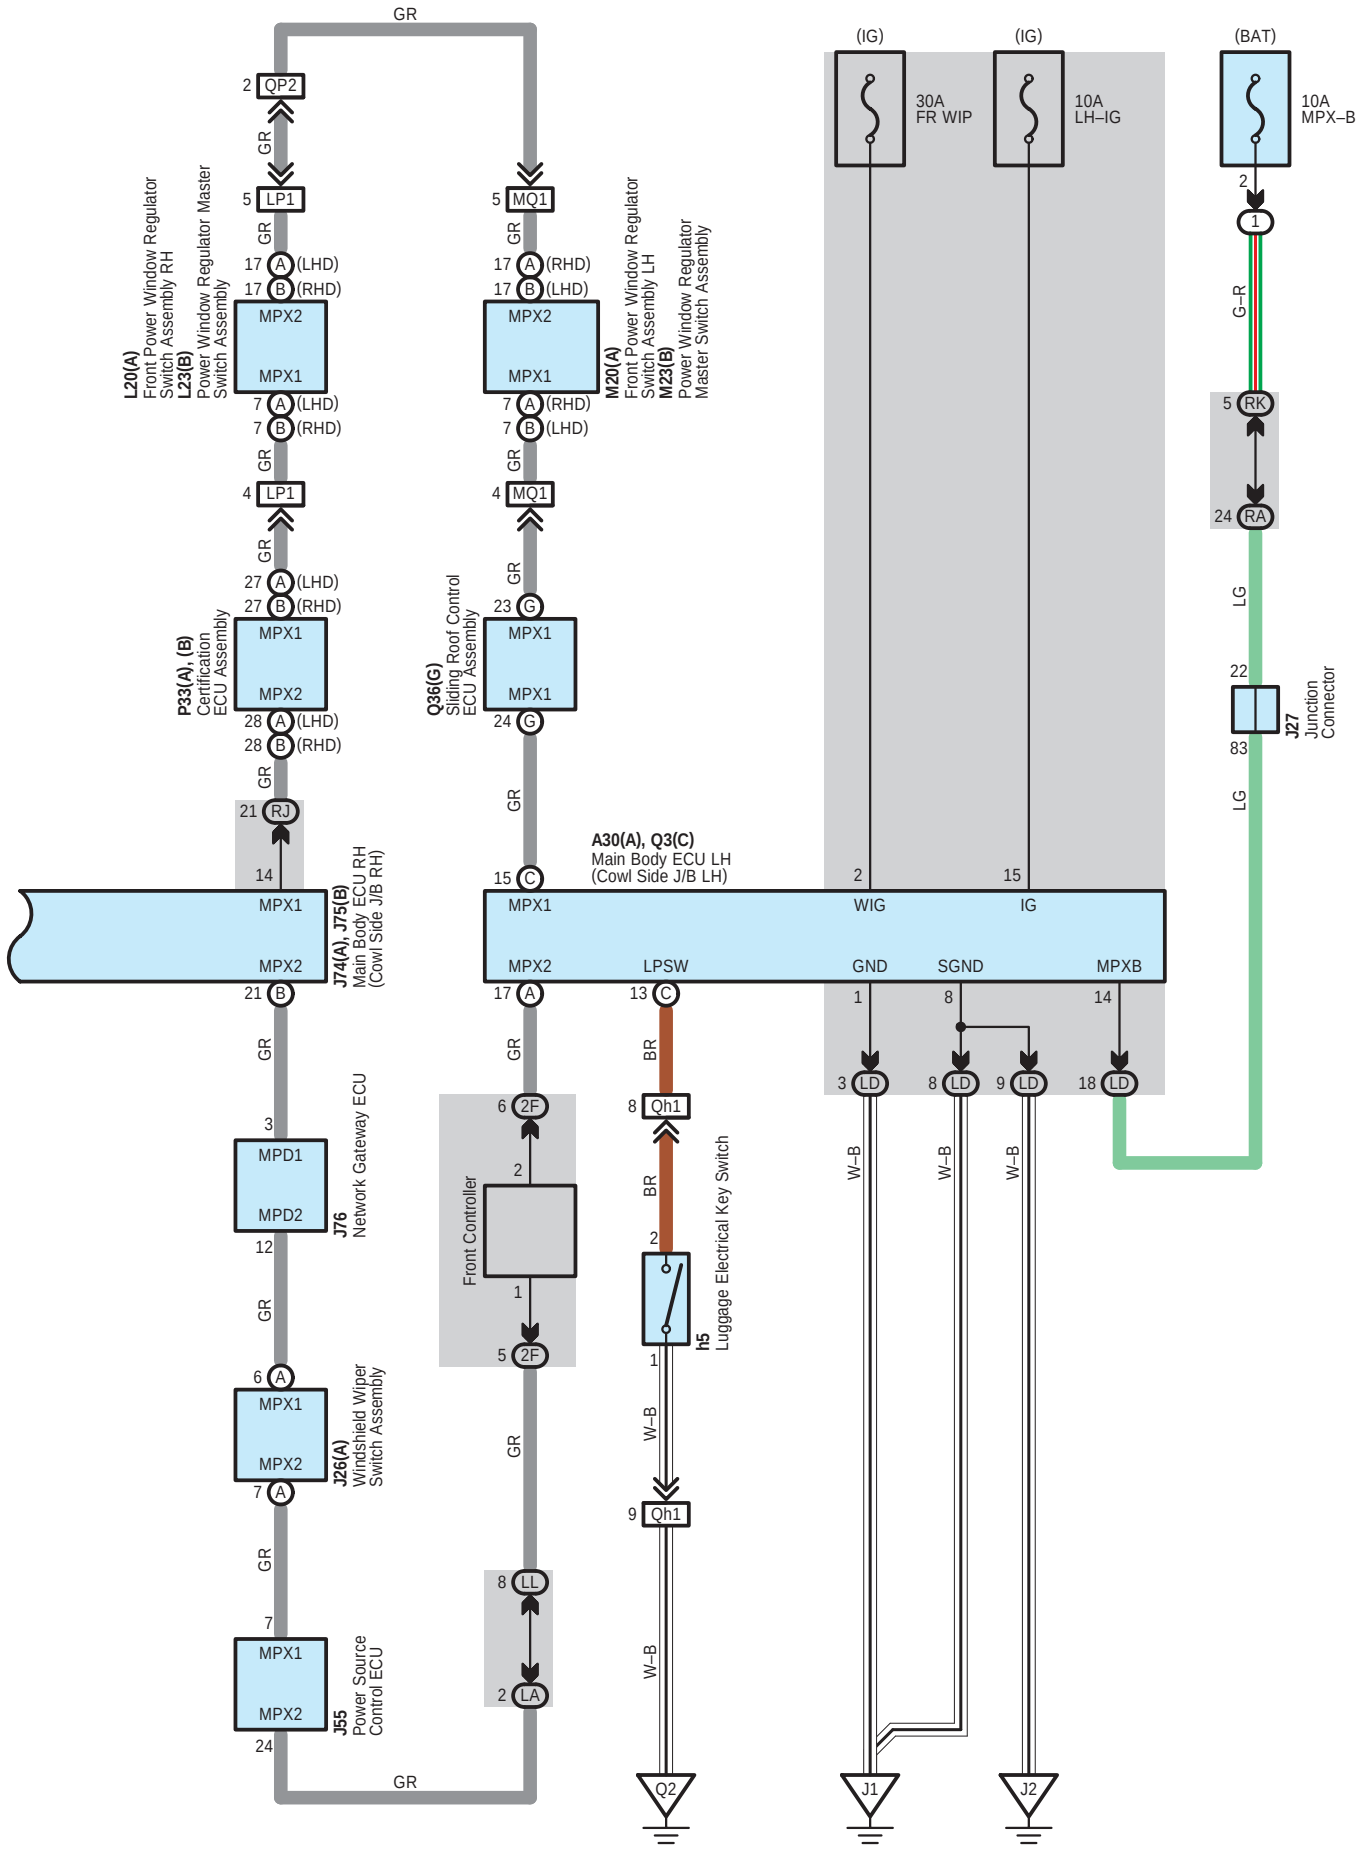

 
A 30
White

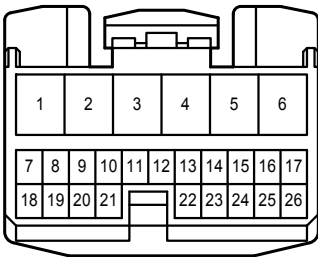


J 14
Black

 


J 26
White

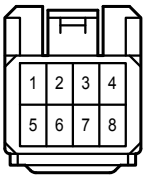 

J 27
White

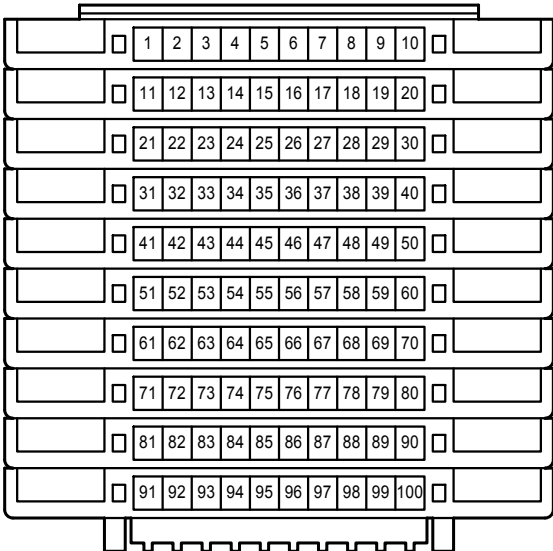 

J 55
White

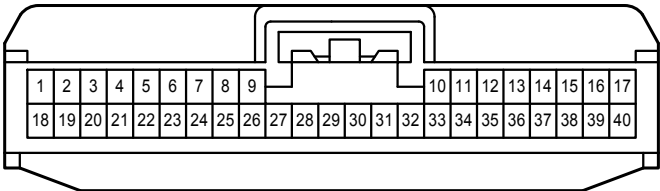 


J 57
Blue




Luggage Compartment Door Opener

 
J 71
White

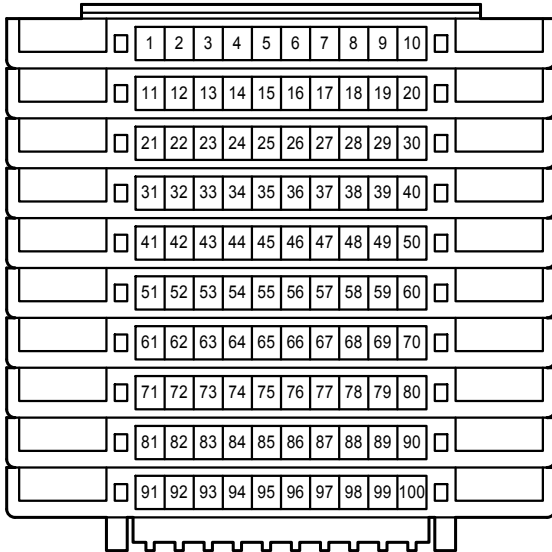


J 74
White

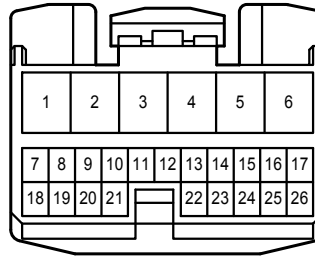 


J 75
White

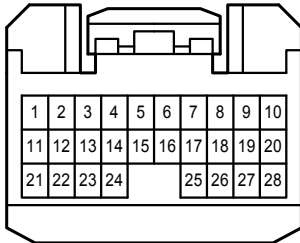 


J 76
White

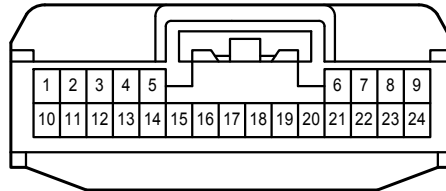 


J 80
Black

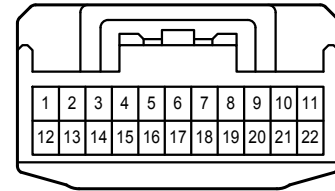 


J116
Black

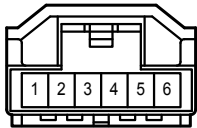 


L 20
White

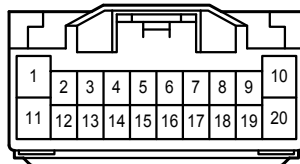 


L 23
White

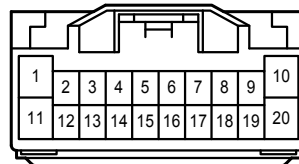 


M 20
White

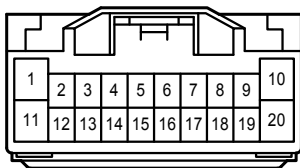 


M 23
White

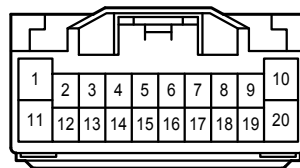 

P 33
White

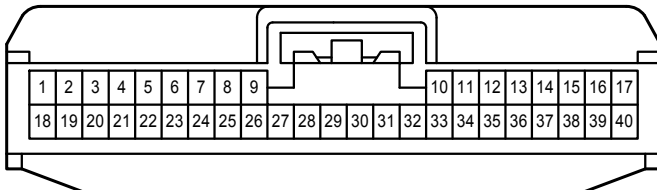 


Q 3
White

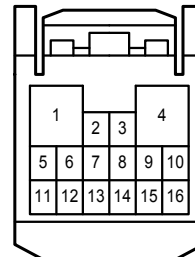 


Luggage Compartment Door Opener

 
Q 36
Black

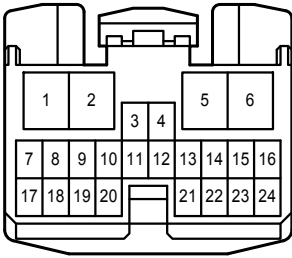


Q 44
White

 


h 5
White

 


2F
Black

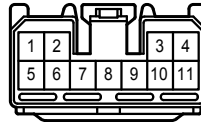 

LA
White

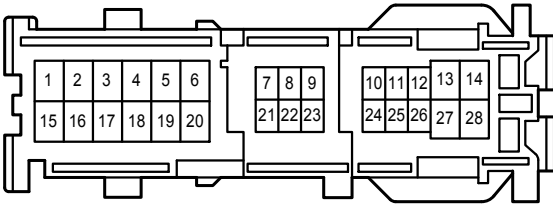 


LD
White

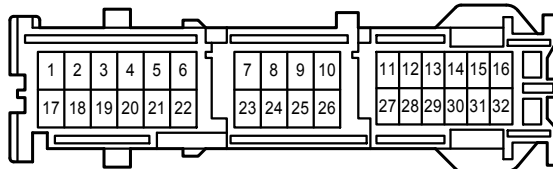 


LL
Gray



 
RA
White

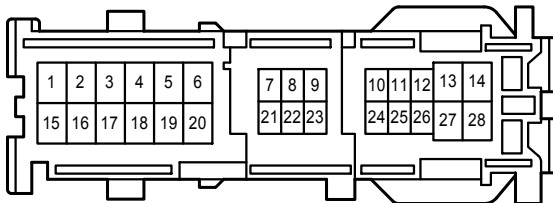

RD
White

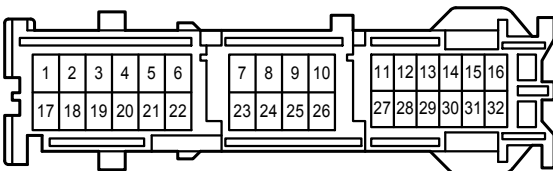 


RJ
Gray

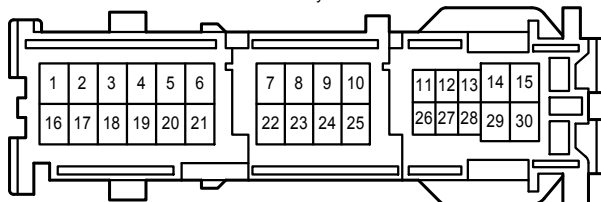 


RK
Gray



 
JQ1
White

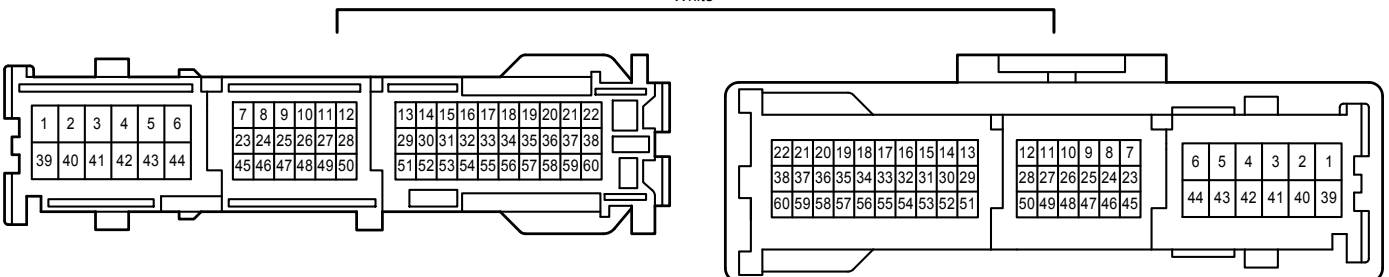


LP1
White

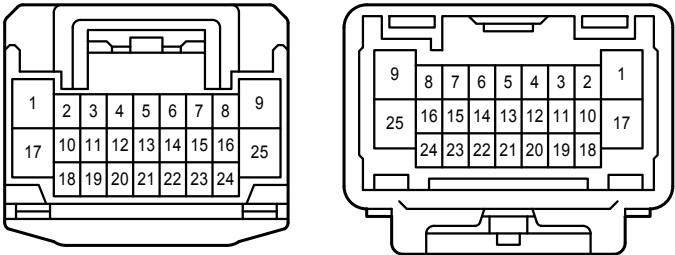 

MQ1
White

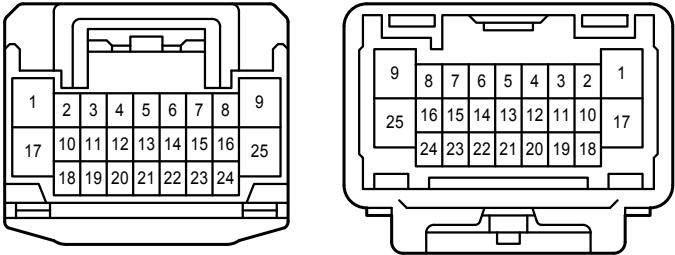 

QP2
White

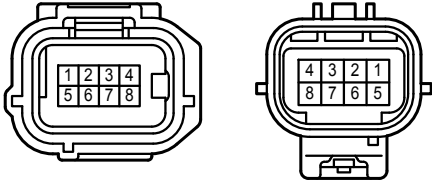 

Qh1
Black

