



Position of Parts in Engine Compartment (LHD 2GR-FKS)

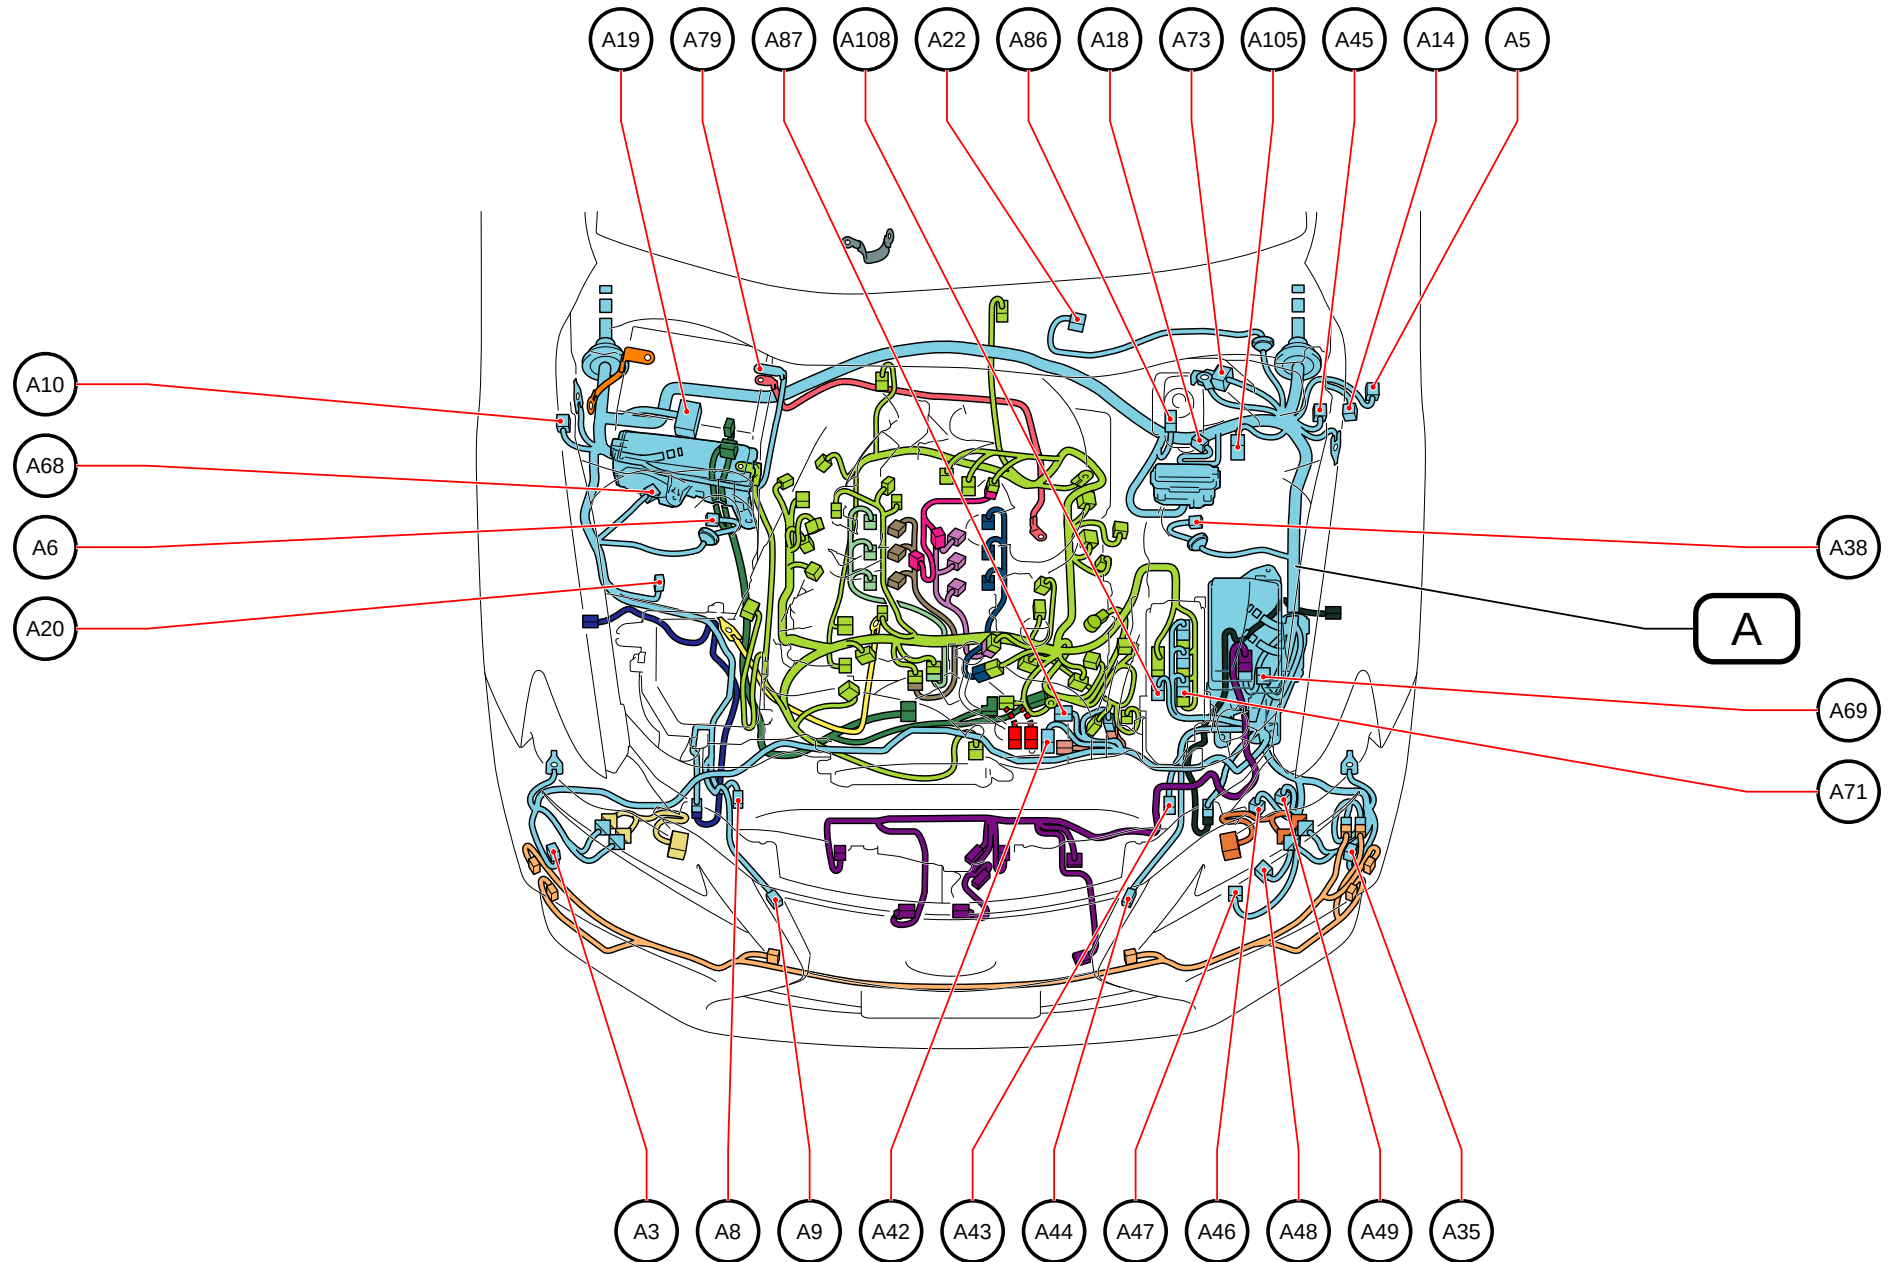


A3	Clearance Light Assembly RH
A5	Front Tire Pressure Monitor Initiator
A6	Front Absorber Control Actuator RH
A8	Front Airbag Sensor RH
A9	Pedestrian Protection Sensor RH
A10	Pop Up Hood Lifter Assembly RH
A14	Wireless Door Lock Buzzer
A18	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A19	Power Steering ECU Assembly
A20	Security Horn Assembly
A22	Windshield Wiper Motor Assembly
A35	Clearance Light Assembly LH
A38	Front Absorber Control Actuator LH
A42	Cooling Fan ECU
A43	Front Airbag Sensor LH
A44	Pedestrian Protection Sensor LH
A45	Pop Up Hood Lifter Assembly LH
A46	Windshield Washer Motor and Pump Assembly
A47	Level Warning Switch Assembly
A48	Headlight Cleaner Control Relay
A49	Headlight Cleaner Motor and Pump Assembly
A68	No. 1 Wiring Harness Condenser Assembly
A69	No. 1 Junction Connector
A71	No. 2 Junction Connector
A73	No. 1 Ground Junction Connector
A79	Battery
A86	Vacuum Warning Switch Assembly
A87	No. 1 Cooling Fan ECU
A105	Brake Actuator Assembly
A108	ECM


Position of Parts in Engine Compartment (LHD 2GR-FKS)

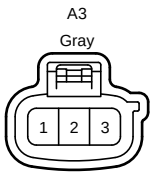


90980-10981

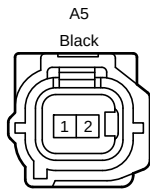


90980-12416

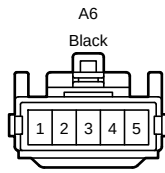


90980-10789

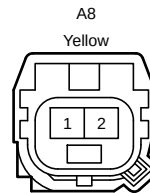


90980-12490

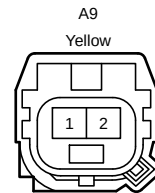

90980-12490

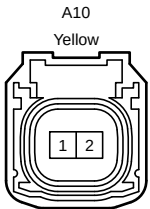


90980-12698

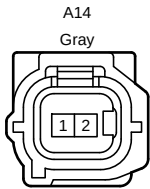


90980-12572




90980-11207

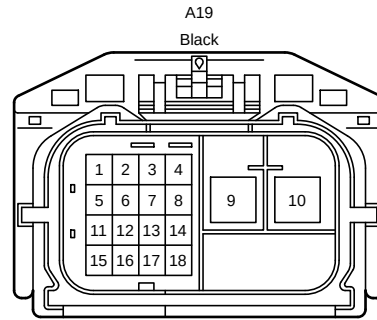


90980-12573

 


90980-10619

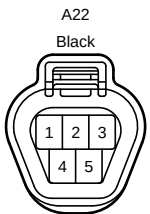


90980-11599

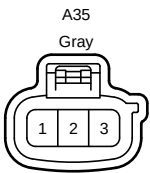


90980-10981

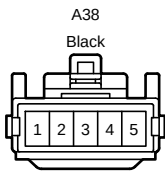


90980-10789

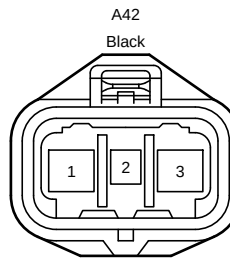


90980-12058

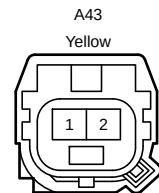


90980-12490

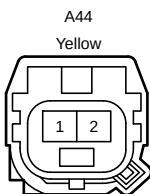


90980-12490

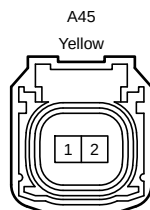

90980-12698

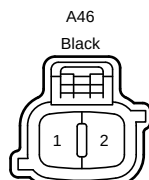


90980-11019

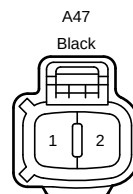


90980-11068




90980-11194

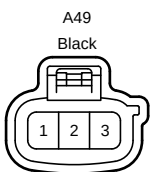

90980-10981

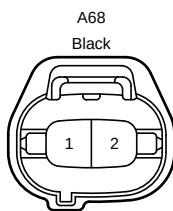

90980-11156

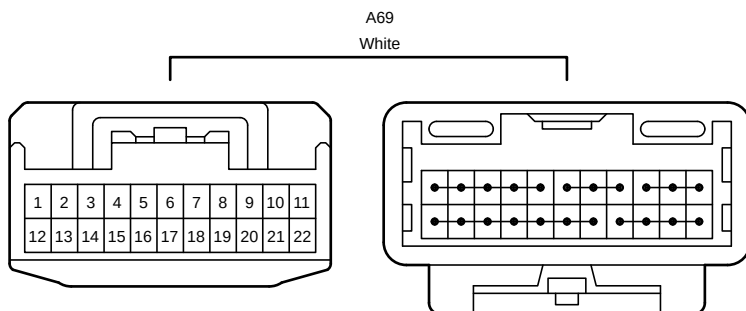

90980-12372

Position of Parts in Engine Compartment (LHD 2GR-FKS)

