



Position of Parts in Engine Compartment (LHD 2GR-FKS)

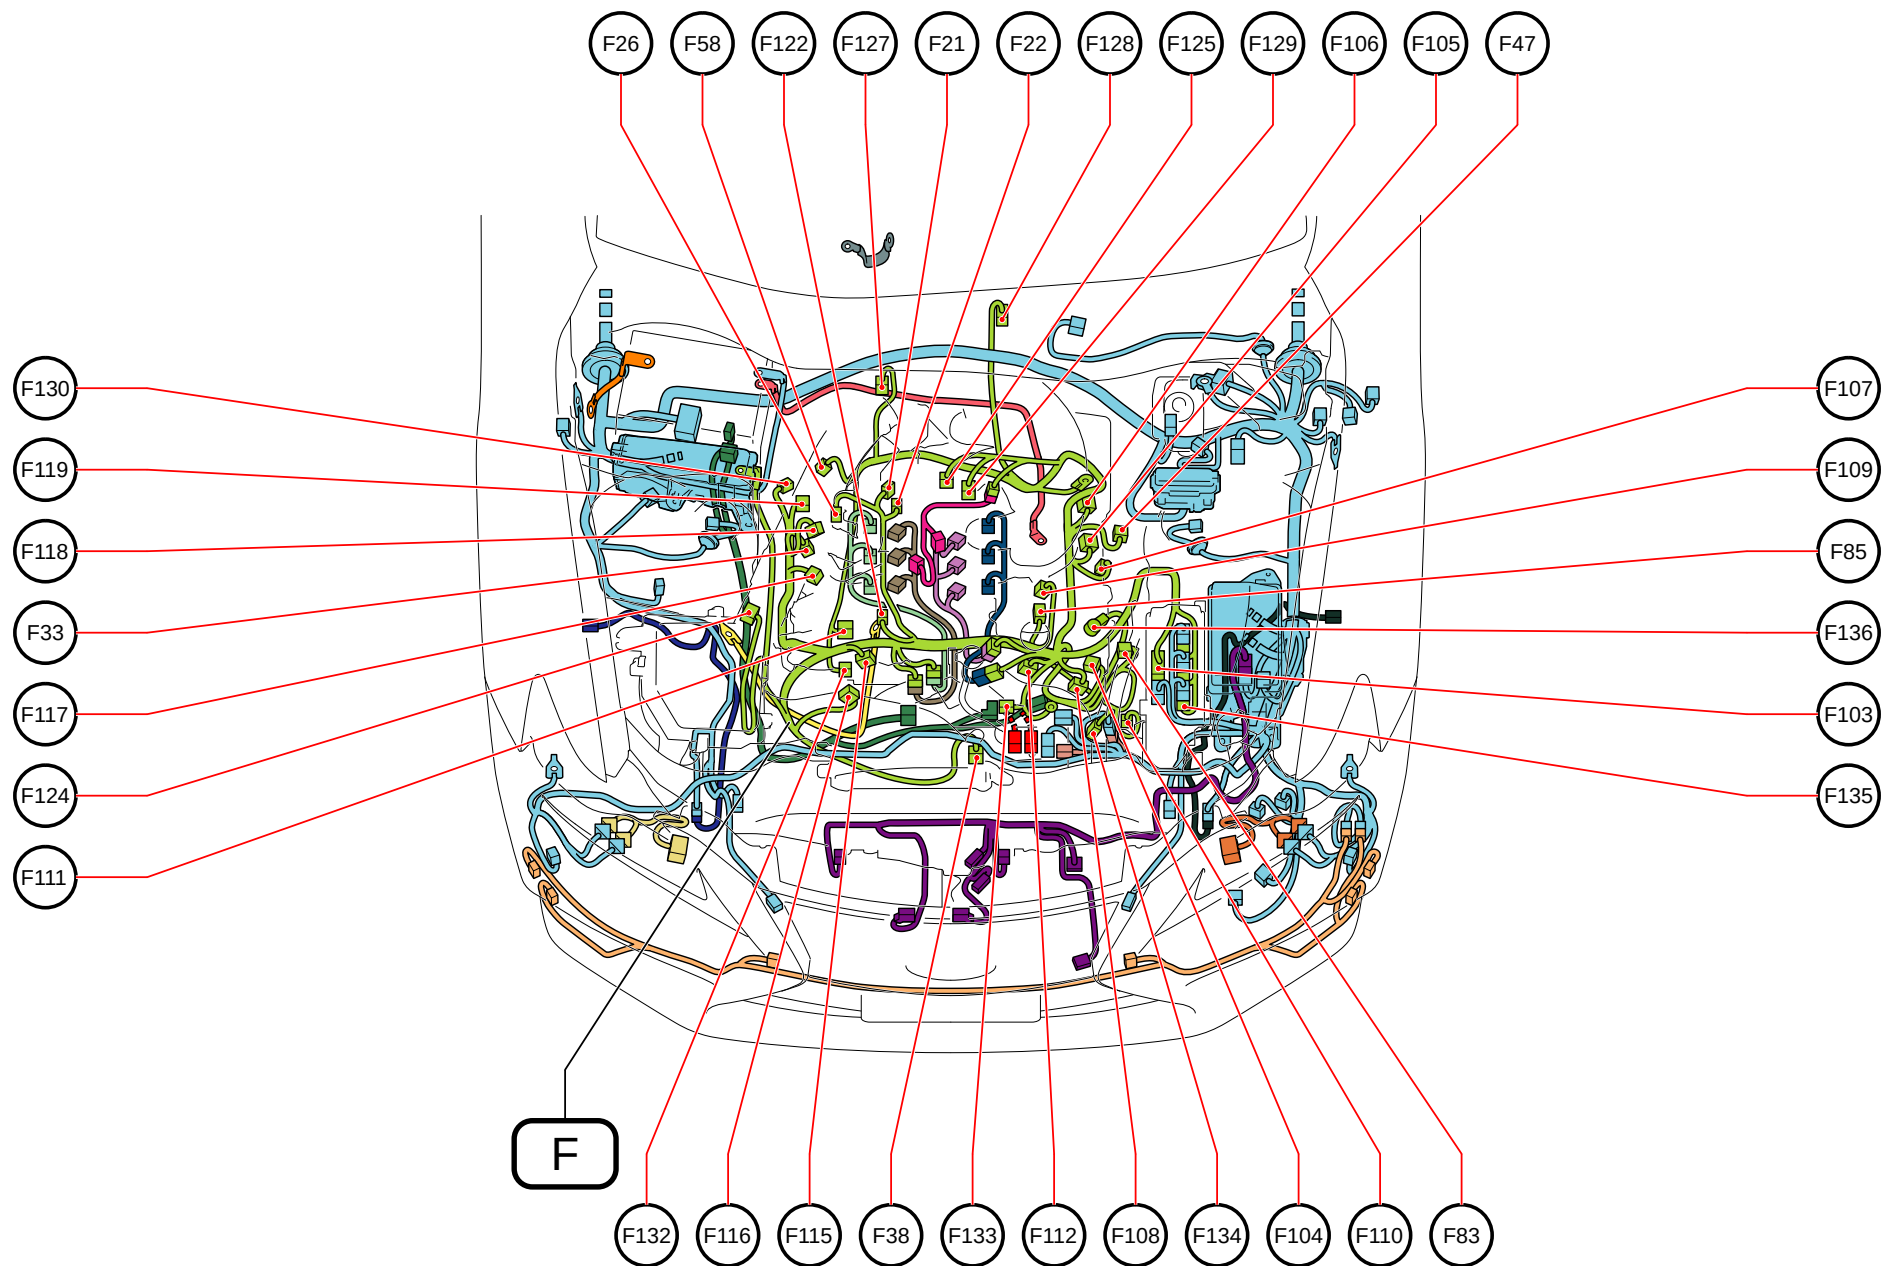


F21	Throttle Body with Motor Assembly
F22	Purge VSV
F26	VVT Sensor (Bank 1 Intake Side)
F33	VVT Sensor (Bank 1 Exhaust Side)
F38	Engine Oil Pressure Switch Assembly
F47	No. 2 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
F58	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
F83	Generator Assembly
F85	Starter Assembly
F103	ECM
F104	Ignition Coil Assembly No. 2
F105	Ignition Coil Assembly No. 4
F106	Ignition Coil Assembly No. 6
F107	VVT Sensor (Bank 2 Exhaust Side)
F108	Cam Timing Oil Control Valve Assembly LH (Bank 2 Exhaust Side)
F109	VVT Sensor (Bank 2 Intake Side)
F110	Cooler Compressor Assembly
F111	Crank Position Sensor
F112	Cam Timing Oil Control Valve Assembly LH (Bank 2 Intake Side)
F115	Cam Timing Oil Control Valve Assembly RH (Bank 1 Intake Side)
F116	Cam Timing Oil Control Valve Assembly RH (Bank 1 Exhaust Side)
F117	Ignition Coil Assembly No. 1
F118	Ignition Coil Assembly No. 3
F119	Ignition Coil Assembly No. 5
F122	Fuel Pressure Sensor (Low Pressure Side)
F124	Intake Mass Air Flow Meter Sub-Assembly
F125	Fuel Pressure Sensor
F127	Park/Neutral Position Switch Assembly
F128	ECT Solenoid (Transmission Wire)
F129	E.F.I. Engine Coolant Temperature Sensor
F130	Fuel Pump Assembly
F132	Engine Oil Level Sensor
F133	Water Inlet with Thermostat Sub-Assembly
F134	Cooler Compressor Assembly
F135	No. 5 Junction Connector
F136	Generator Assembly


Position of Parts in Engine Compartment (LHD 2GR-FKS)

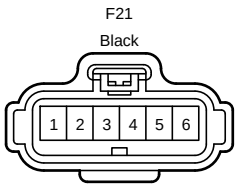


90980-11858

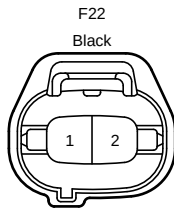


90980-11156

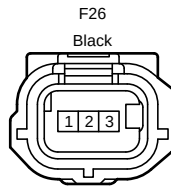

90980-12353

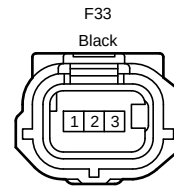

90980-12353

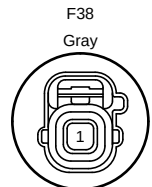


90980-11363




90980-10869




90980-10869

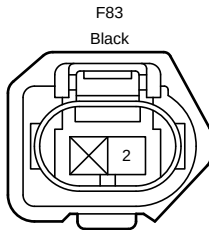


90980-12A88

 


90980-11400

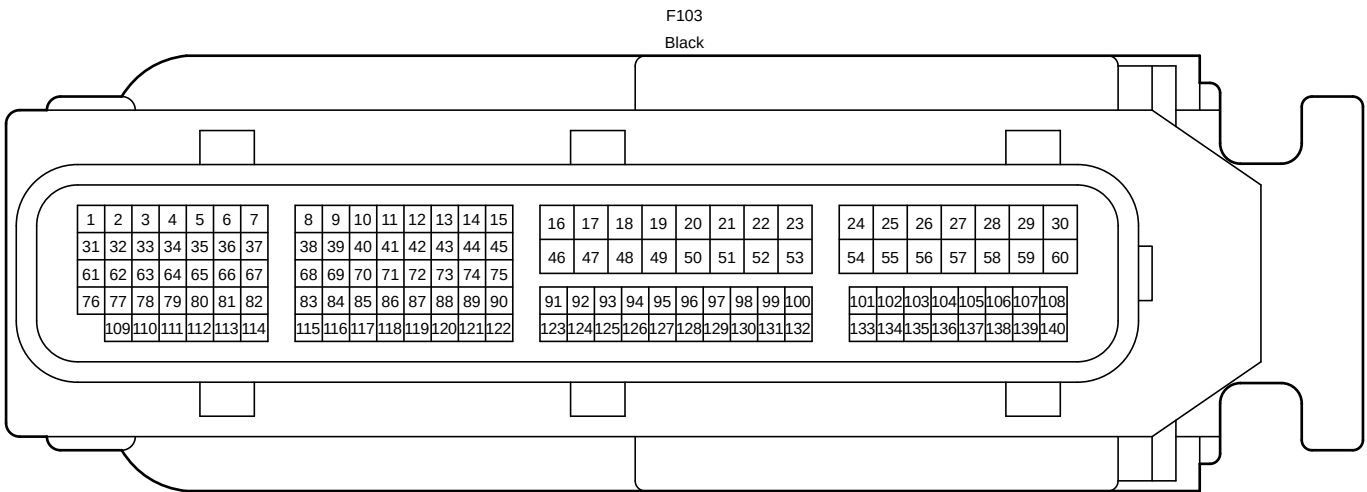


90980-12836

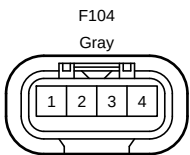


90980-12A29

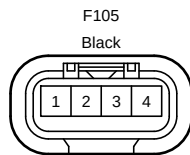


90980-12A29

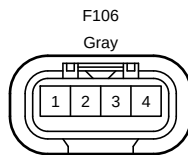


90980-12A29

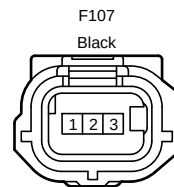


90980-12353

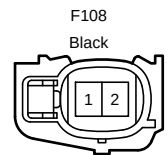


90980-11875

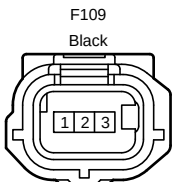


90980-12353

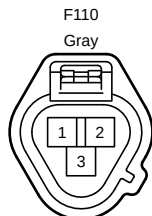


90980-11016

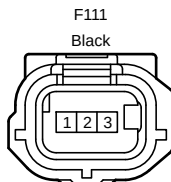

90980-12353

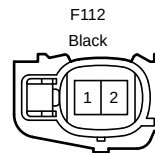


90980-11875

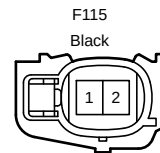


90980-11875


Position of Parts in Engine Compartment (LHD 2GR-FKS)

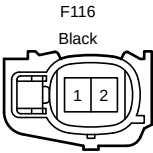


90980-11875

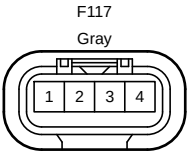


90980-12A29

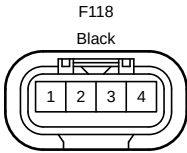


90980-12A29

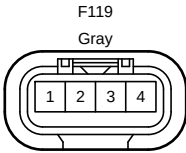


90980-12A29

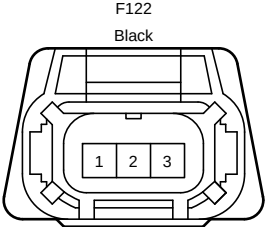


90980-12A19

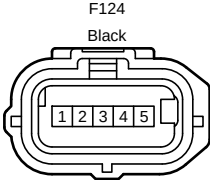


90980-12292

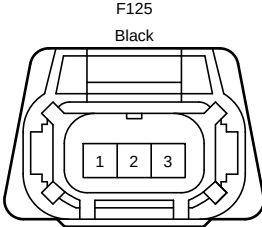


90980-12A19

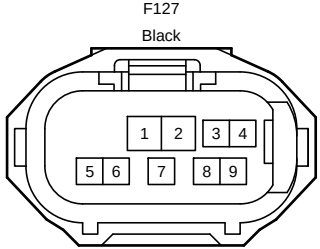


90980-12A23

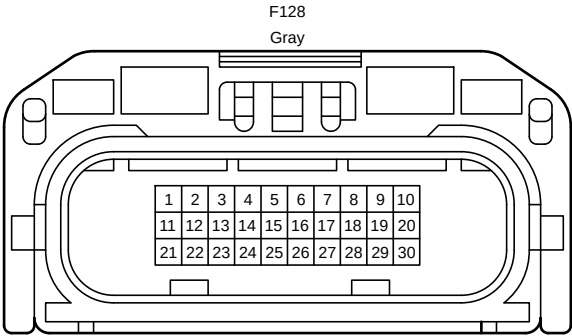


90980-12712

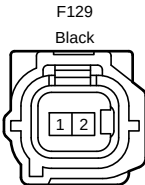


90980-12416

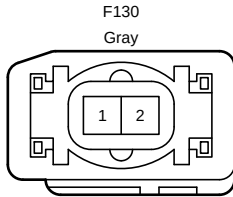


90980-12747

 


90980-11166

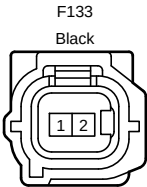

90980-12572

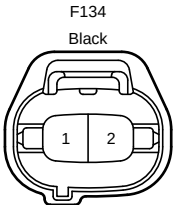

90980-11156

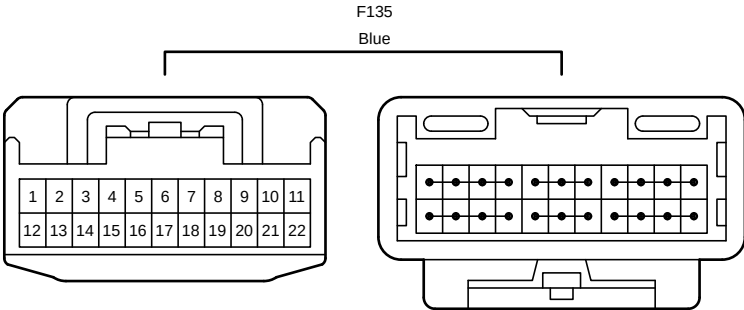

90980-12372

