

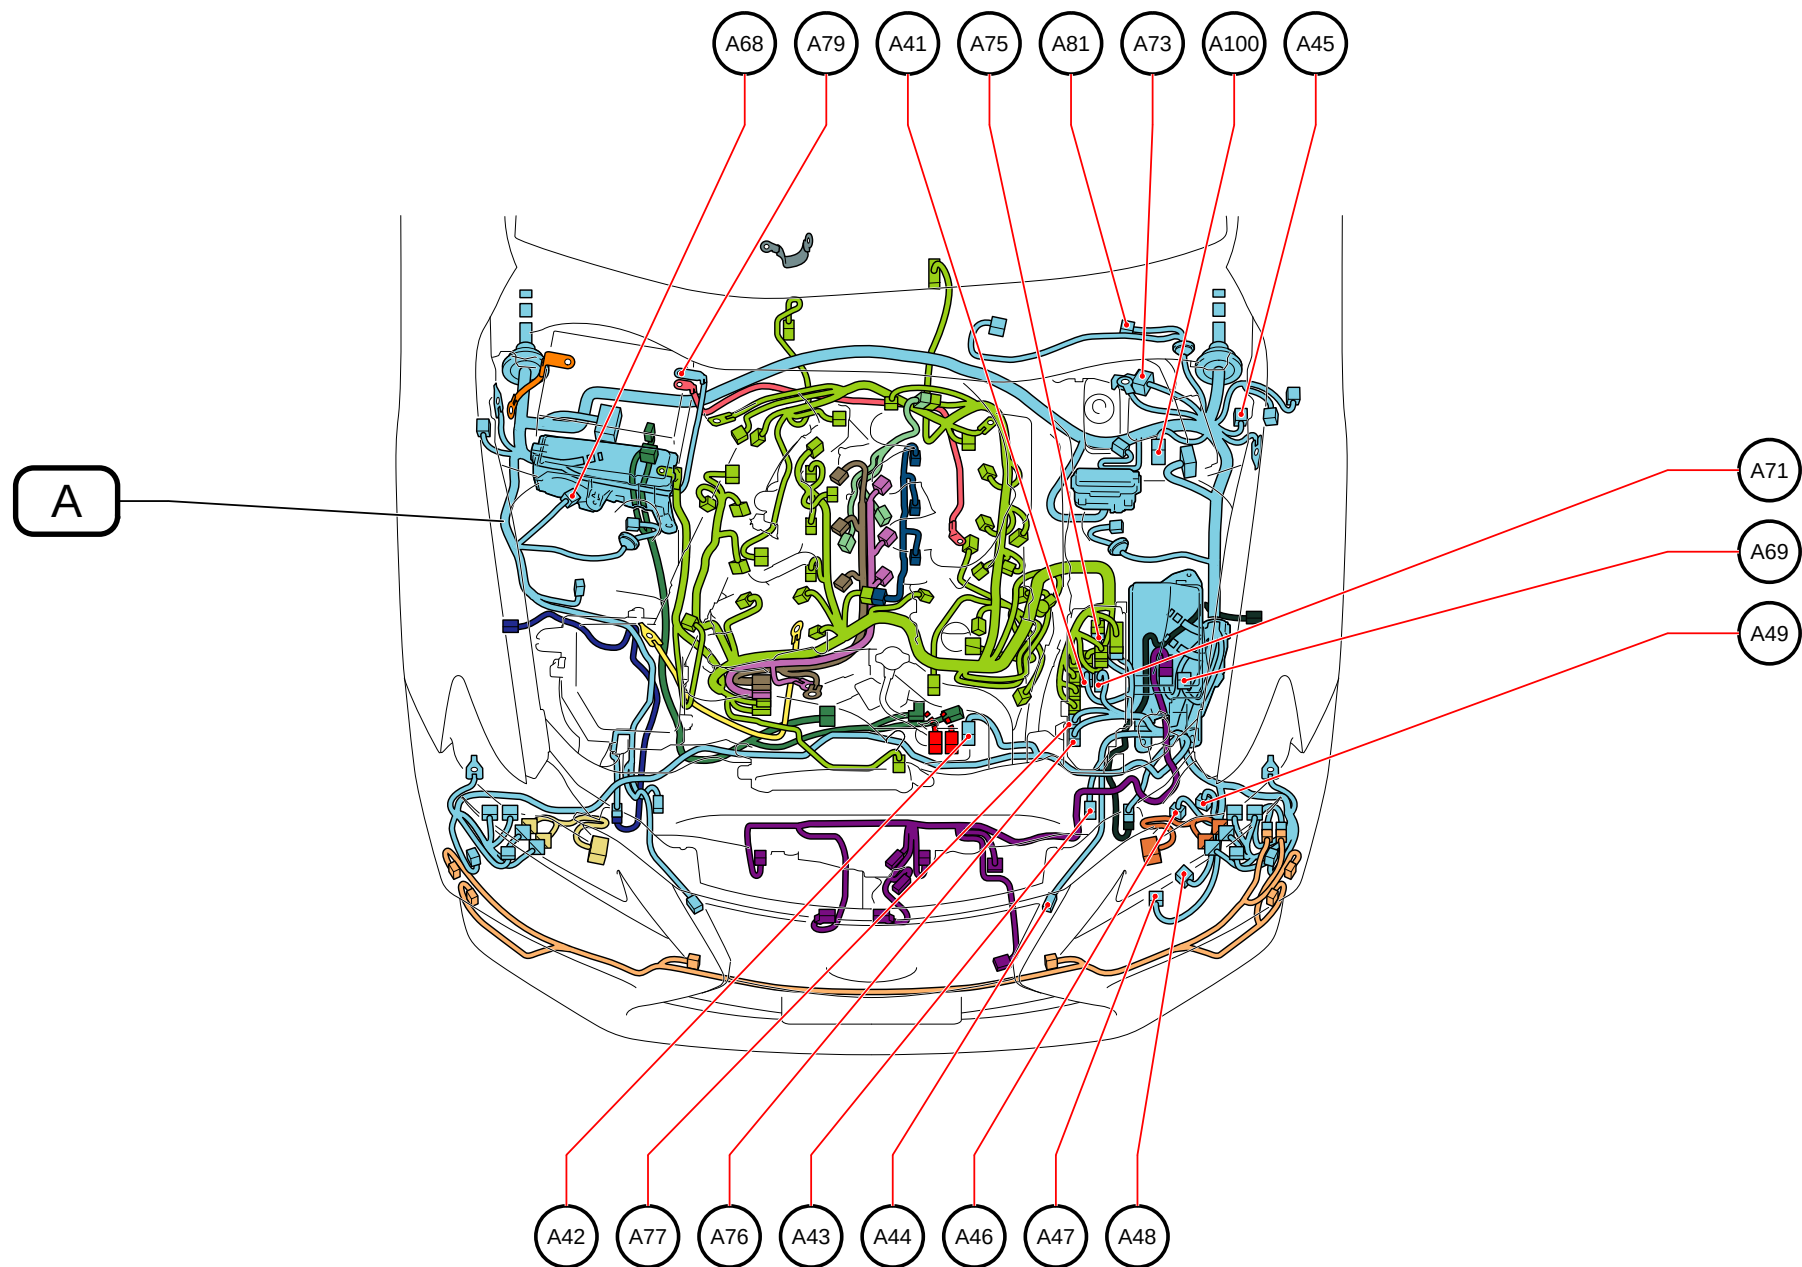
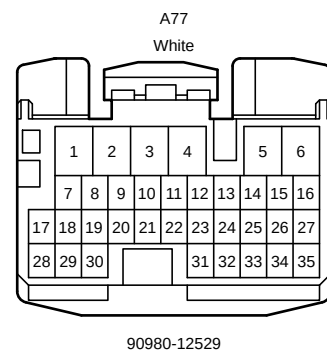
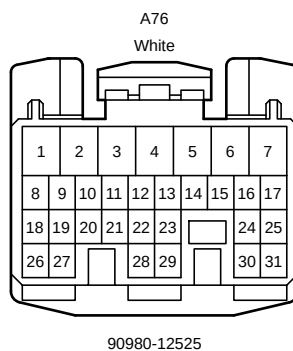
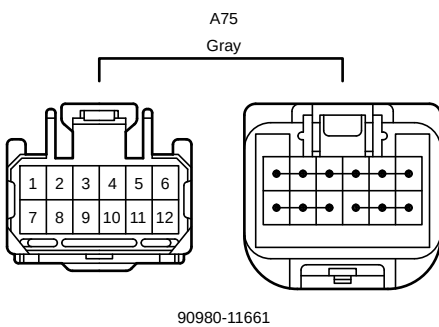
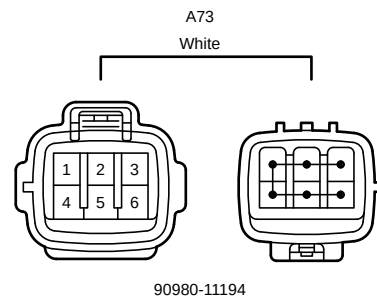
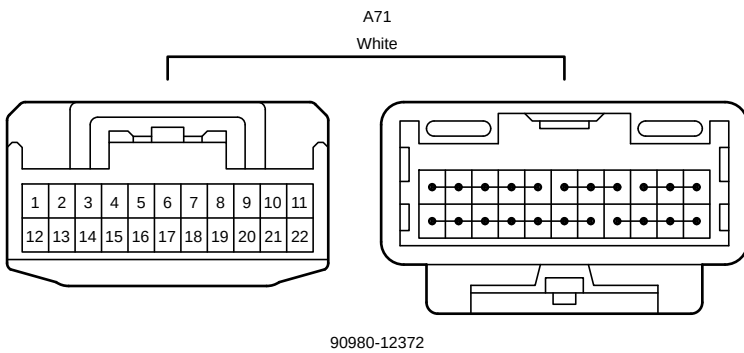
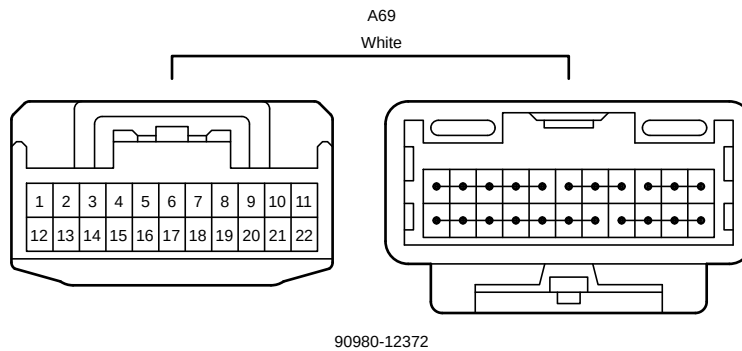
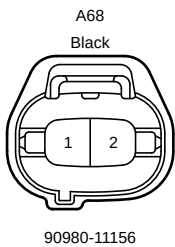
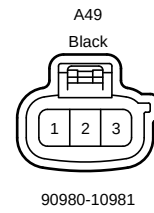
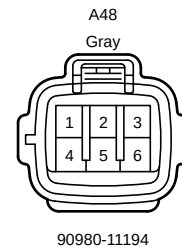
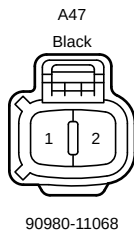
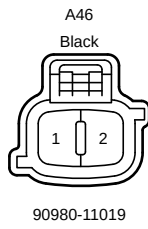
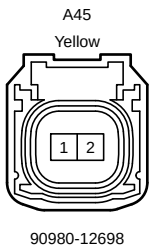
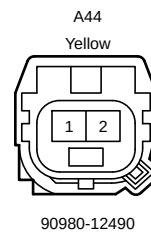
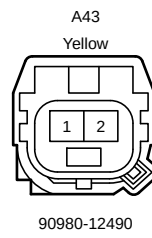


Position of Parts in Engine Compartment (LHD 2GR-FSE)

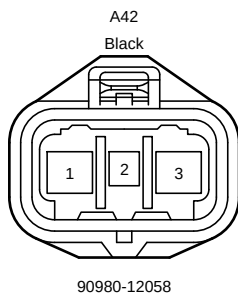

A41	Transmission Control ECU Assembly
A42	Cooling Fan ECU
A43	Front Airbag Sensor LH
A44	Pedestrian Protection Sensor LH
A45	Pop Up Hood Lifter Assembly LH
A46	Windshield Washer Motor and Pump Assembly
A47	Level Warning Switch Assembly
A48	Headlight Cleaner Control Relay
A49	Headlight Cleaner Motor and Pump Assembly
A68	No. 1 Wiring Harness Condenser Assembly
A69	No. 1 Junction Connector
A71	No. 2 Junction Connector
A73	No. 1 Ground Junction Connector
A75	No. 4 Junction Connector
A76	ECM
A77	ECM
A79	Battery
A81	Front Wiper Deicer (Windshield Glass)
A100	Brake Actuator Assembly

Position of Parts in Engine Compartment (LHD 2GR-FSE)

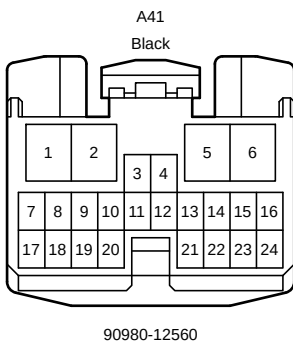

Position of Parts in Engine Compartment (LHD 2GR-FSE)

