



Position of Parts in Engine Compartment (LHD 4GR-FSE)

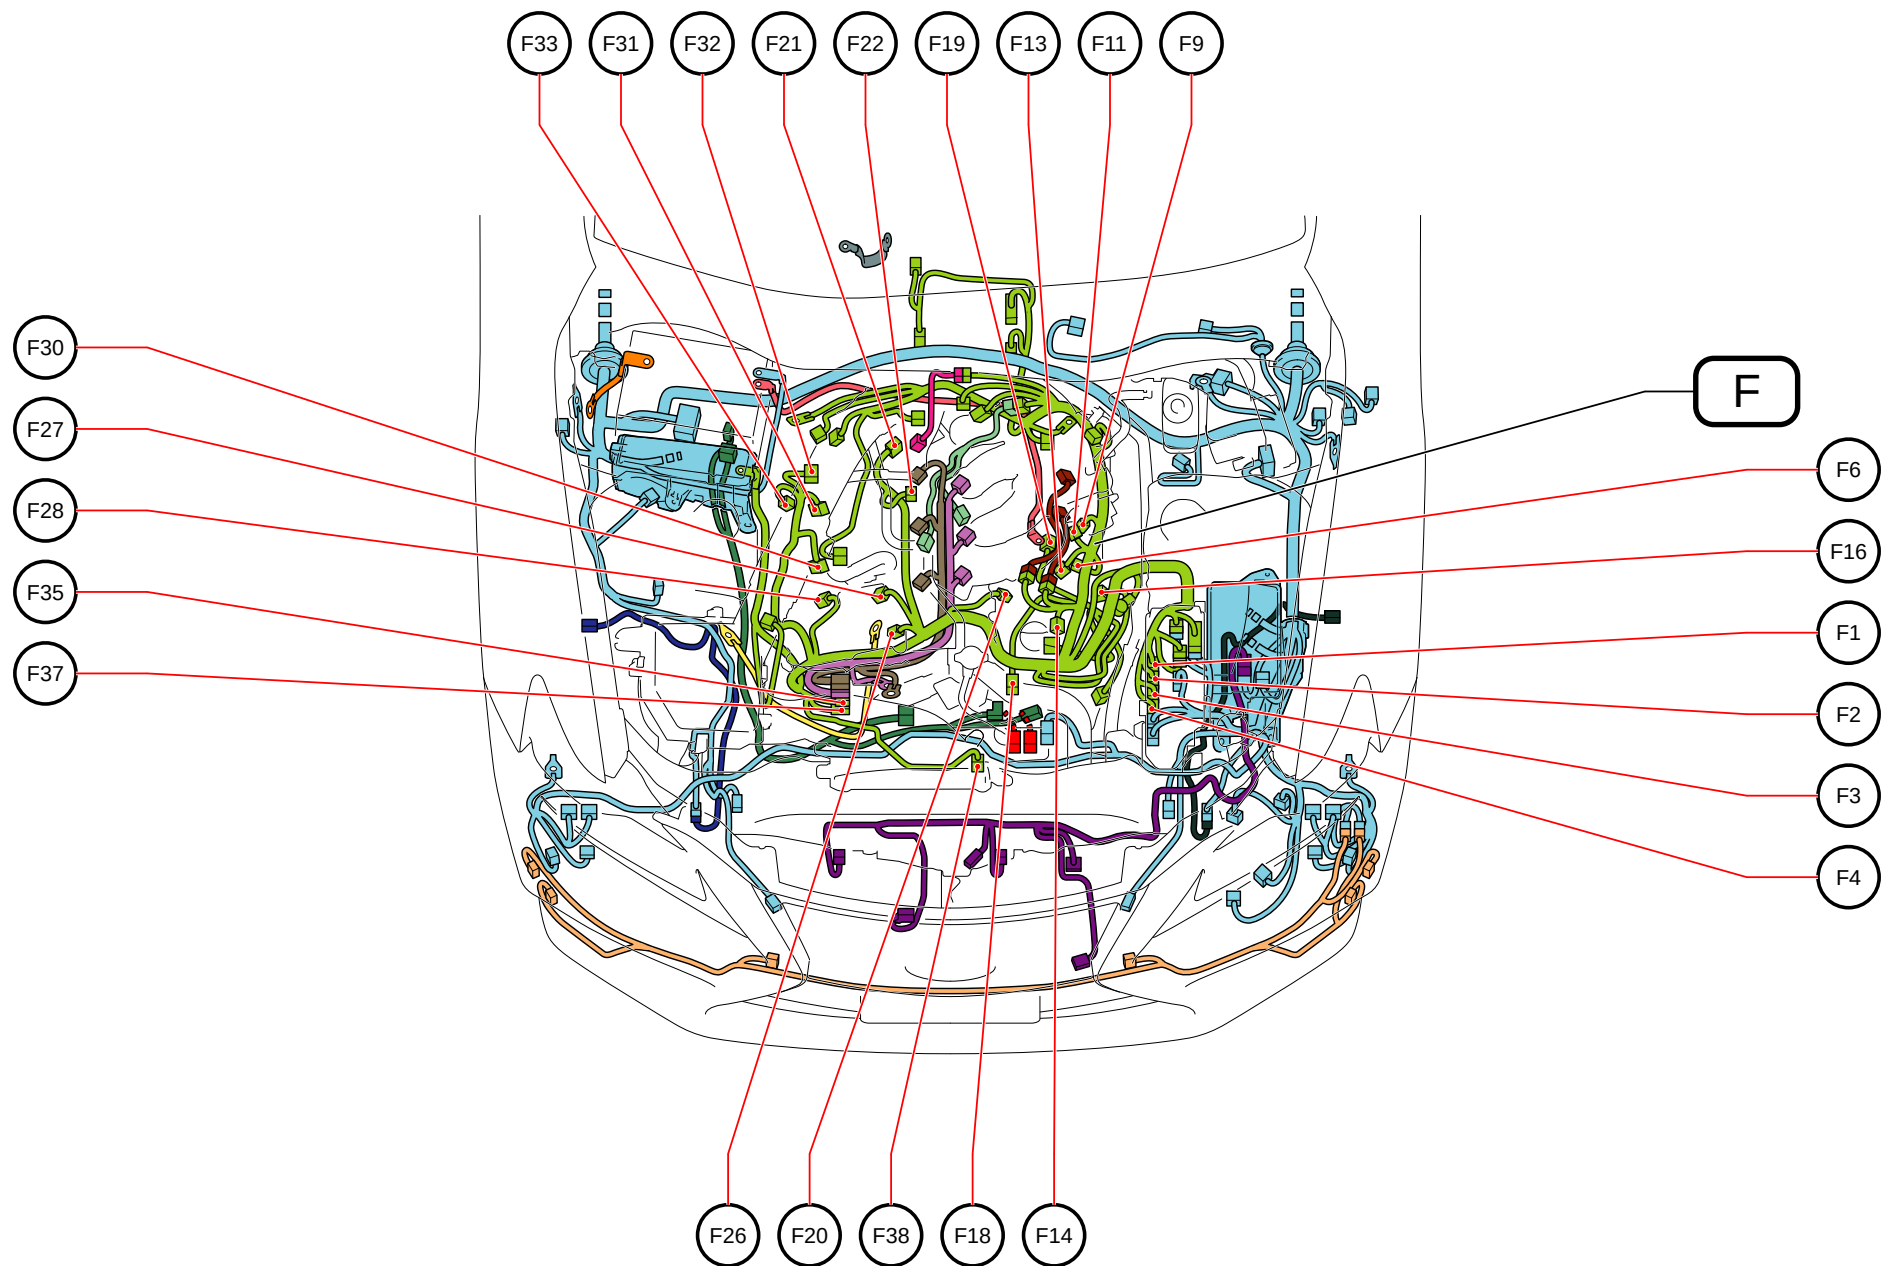


|     |                                                                |
|-----|----------------------------------------------------------------|
| F1  | ECM                                                            |
| F2  | ECM                                                            |
| F3  | ECM                                                            |
| F4  | ECM                                                            |
| F6  | Ignition Coil Assembly No. 2                                   |
| F9  | VVT Sensor (Bank 2 Exhaust Side)                               |
| F11 | VSV (ACIS)                                                     |
| F13 | Cam Timing Oil Control Valve Assembly LH (Bank 2 Exhaust Side) |
| F14 | VVT Sensor (Bank 2 Intake Side)                                |
| F16 | Generator Assembly                                             |
| F18 | Crank Position Sensor                                          |
| F19 | Starter Assembly                                               |
| F20 | Cam Timing Oil Control Valve Assembly LH (Bank 2 Intake Side)  |
| F21 | Throttle Body with Motor Assembly                              |
| F22 | Purge VSV                                                      |
| F26 | VVT Sensor (Bank 1 Intake Side)                                |
| F27 | Cam Timing Oil Control Valve Assembly RH (Bank 1 Intake Side)  |
| F28 | Cam Timing Oil Control Valve Assembly RH (Bank 1 Exhaust Side) |
| F30 | Ignition Coil Assembly No. 1                                   |
| F31 | Ignition Coil Assembly No. 3                                   |
| F32 | Ignition Coil Assembly No. 5                                   |
| F33 | VVT Sensor (Bank 1 Exhaust Side)                               |
| F35 | Injector Driver                                                |
| F37 | Injector Driver                                                |
| F38 | Engine Oil Pressure Switch Assembly                            |


**Position of Parts in Engine Compartment (LHD 4GR-FSE)**

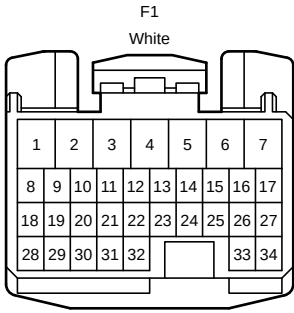


90980-12527

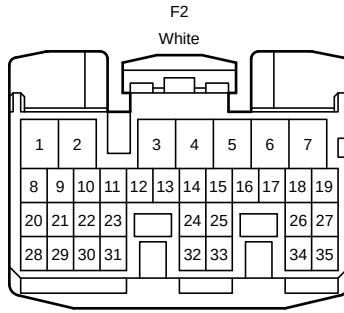


90980-12528

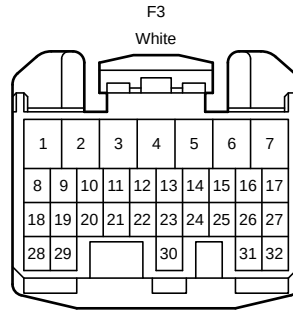


90980-12526

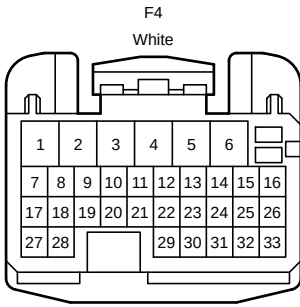


90980-12700

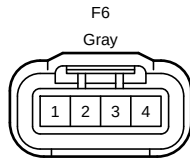

90980-11885

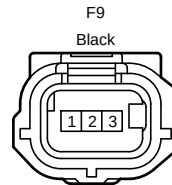


90980-12353

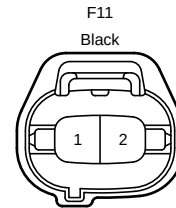


90980-11156




90980-11162

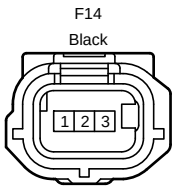


90980-12353

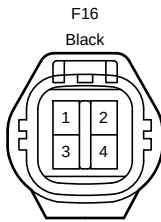

90980-11964

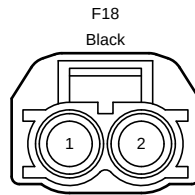


90980-12611

 


90980-11400




90980-11162

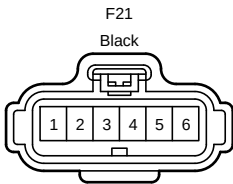


90980-11858

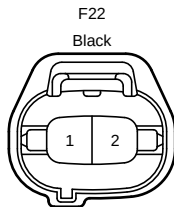

90980-11156

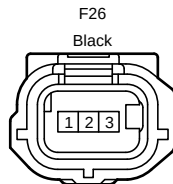


90980-12353

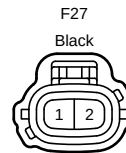


90980-11162




90980-11162

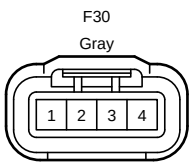


90980-11885

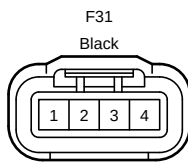


90980-11885

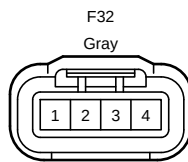

90980-11885

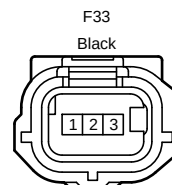

90980-12353

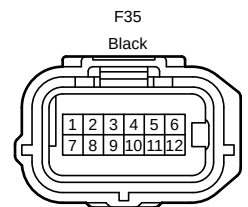

90980-12356

