


Position of Parts in Engine Compartment (RHD 4GR-FSE)

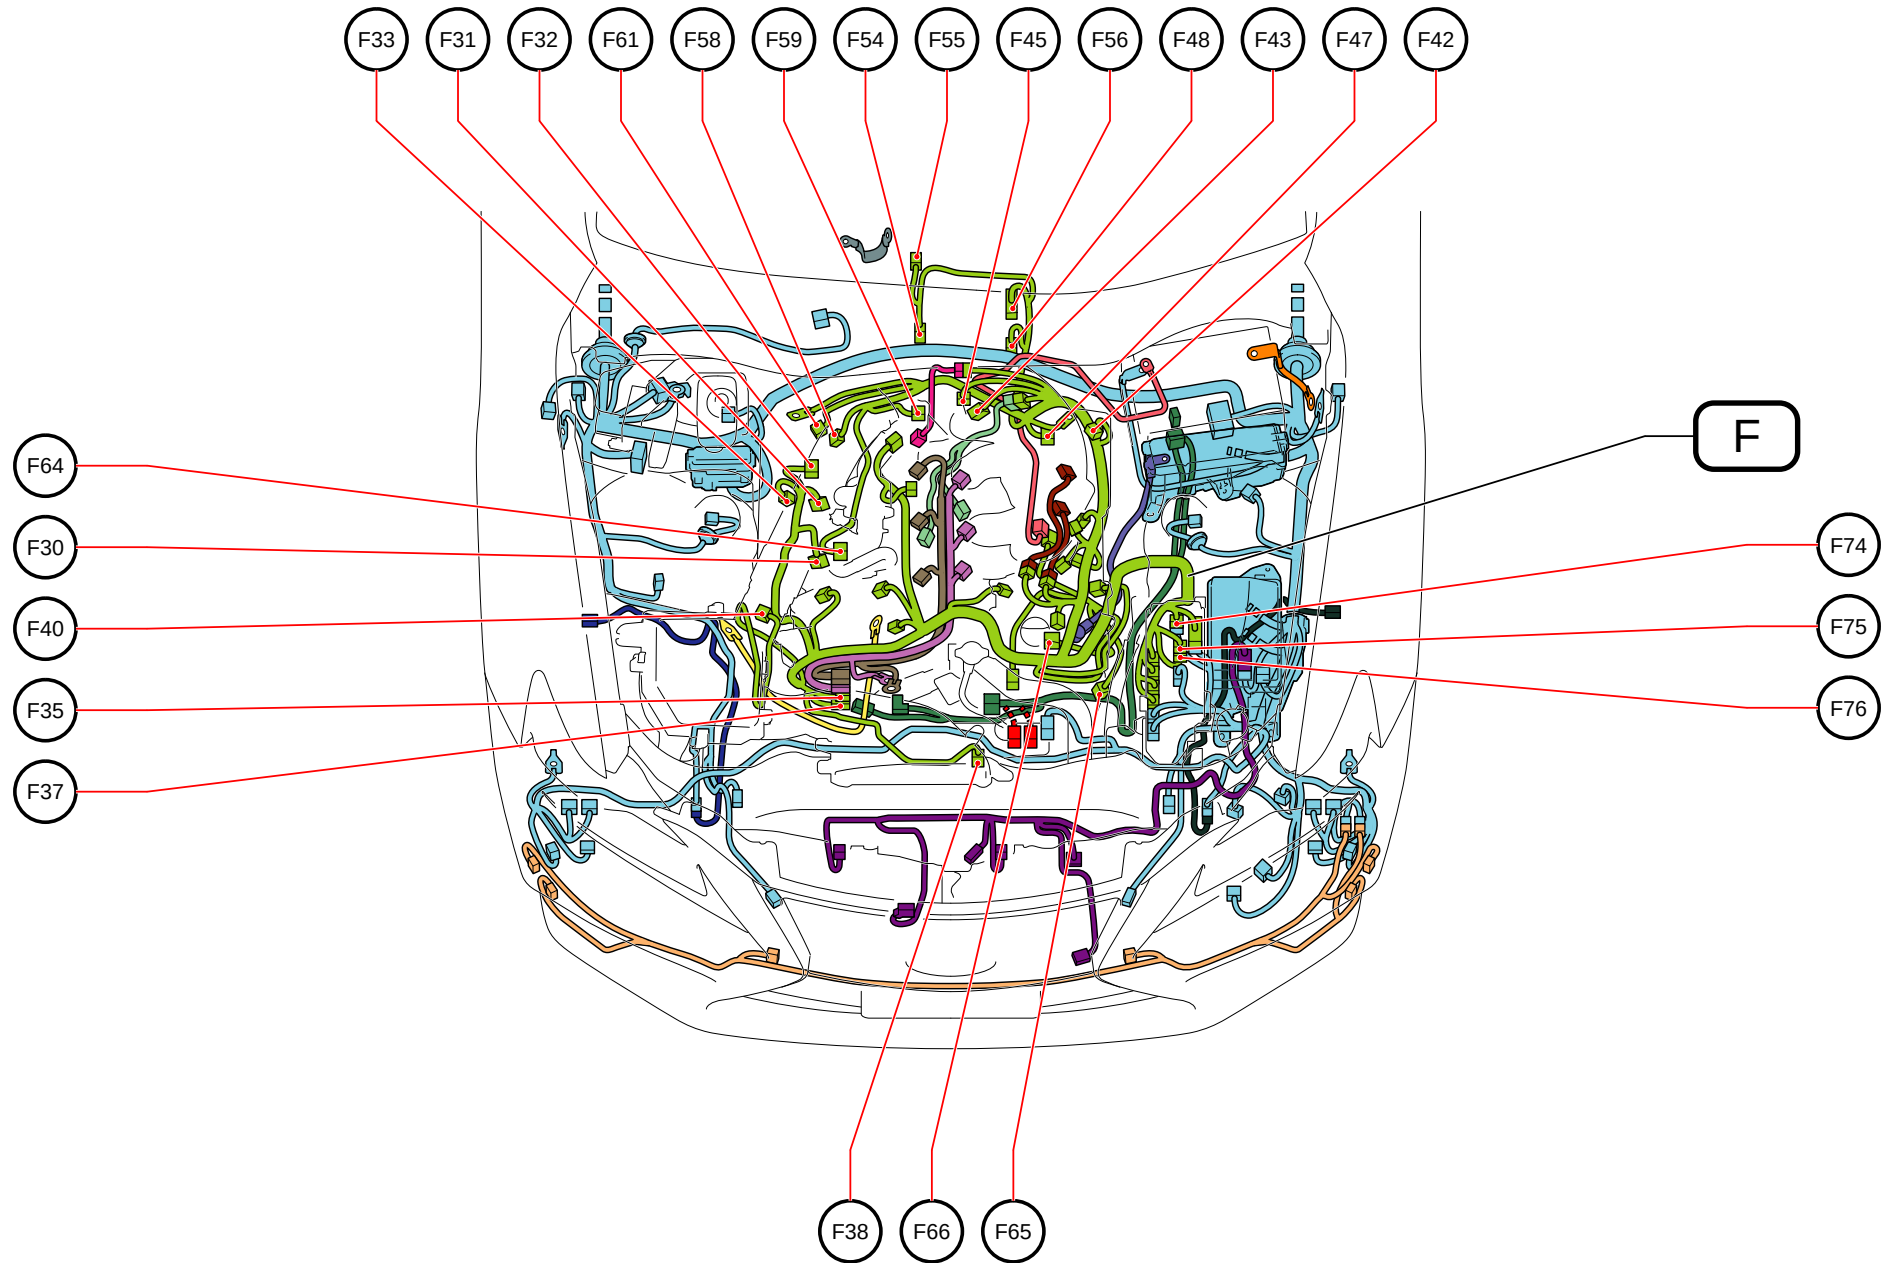

F30	Ignition Coil Assembly No. 1
F31	Ignition Coil Assembly No. 3
F32	Ignition Coil Assembly No. 5
F33	VVT Sensor (Bank 1 Exhaust Side)
F35	Injector Driver
F37	Injector Driver
F38	Engine Oil Pressure Switch Assembly
F40	Intake Mass Air Flow Meter Sub-Assembly
F42	Cold Start Fuel Injector Assembly
F43	Intake Air Control Valve Actuator (Intake Air Surge Tank Assembly)
F45	Fuel Pressure Sensor
F47	No. 2 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
F48	Transmission Revolution Sensor (Turbine)
F54	Park/Neutral Position Switch Assembly
F55	Transmission Revolution Sensor (Counter Gear)
F56	ECT Solenoid (Transmission Wire)
F58	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
F59	E.F.I. Engine Coolant Temperature Sensor
F61	Fuel Pump Assembly
F64	Engine Oil Level Sensor
F65	Cooler Compressor Assembly
F66	Cooler Compressor Assembly
F74	No. 4 Junction Connector
F75	No. 5 Junction Connector
F76	No. 5 Junction Connector

Position of Parts in Engine Compartment (RHD 4GR-FSE)

