


Position of Parts in Engine Compartment (RHD 4GR-FSE)

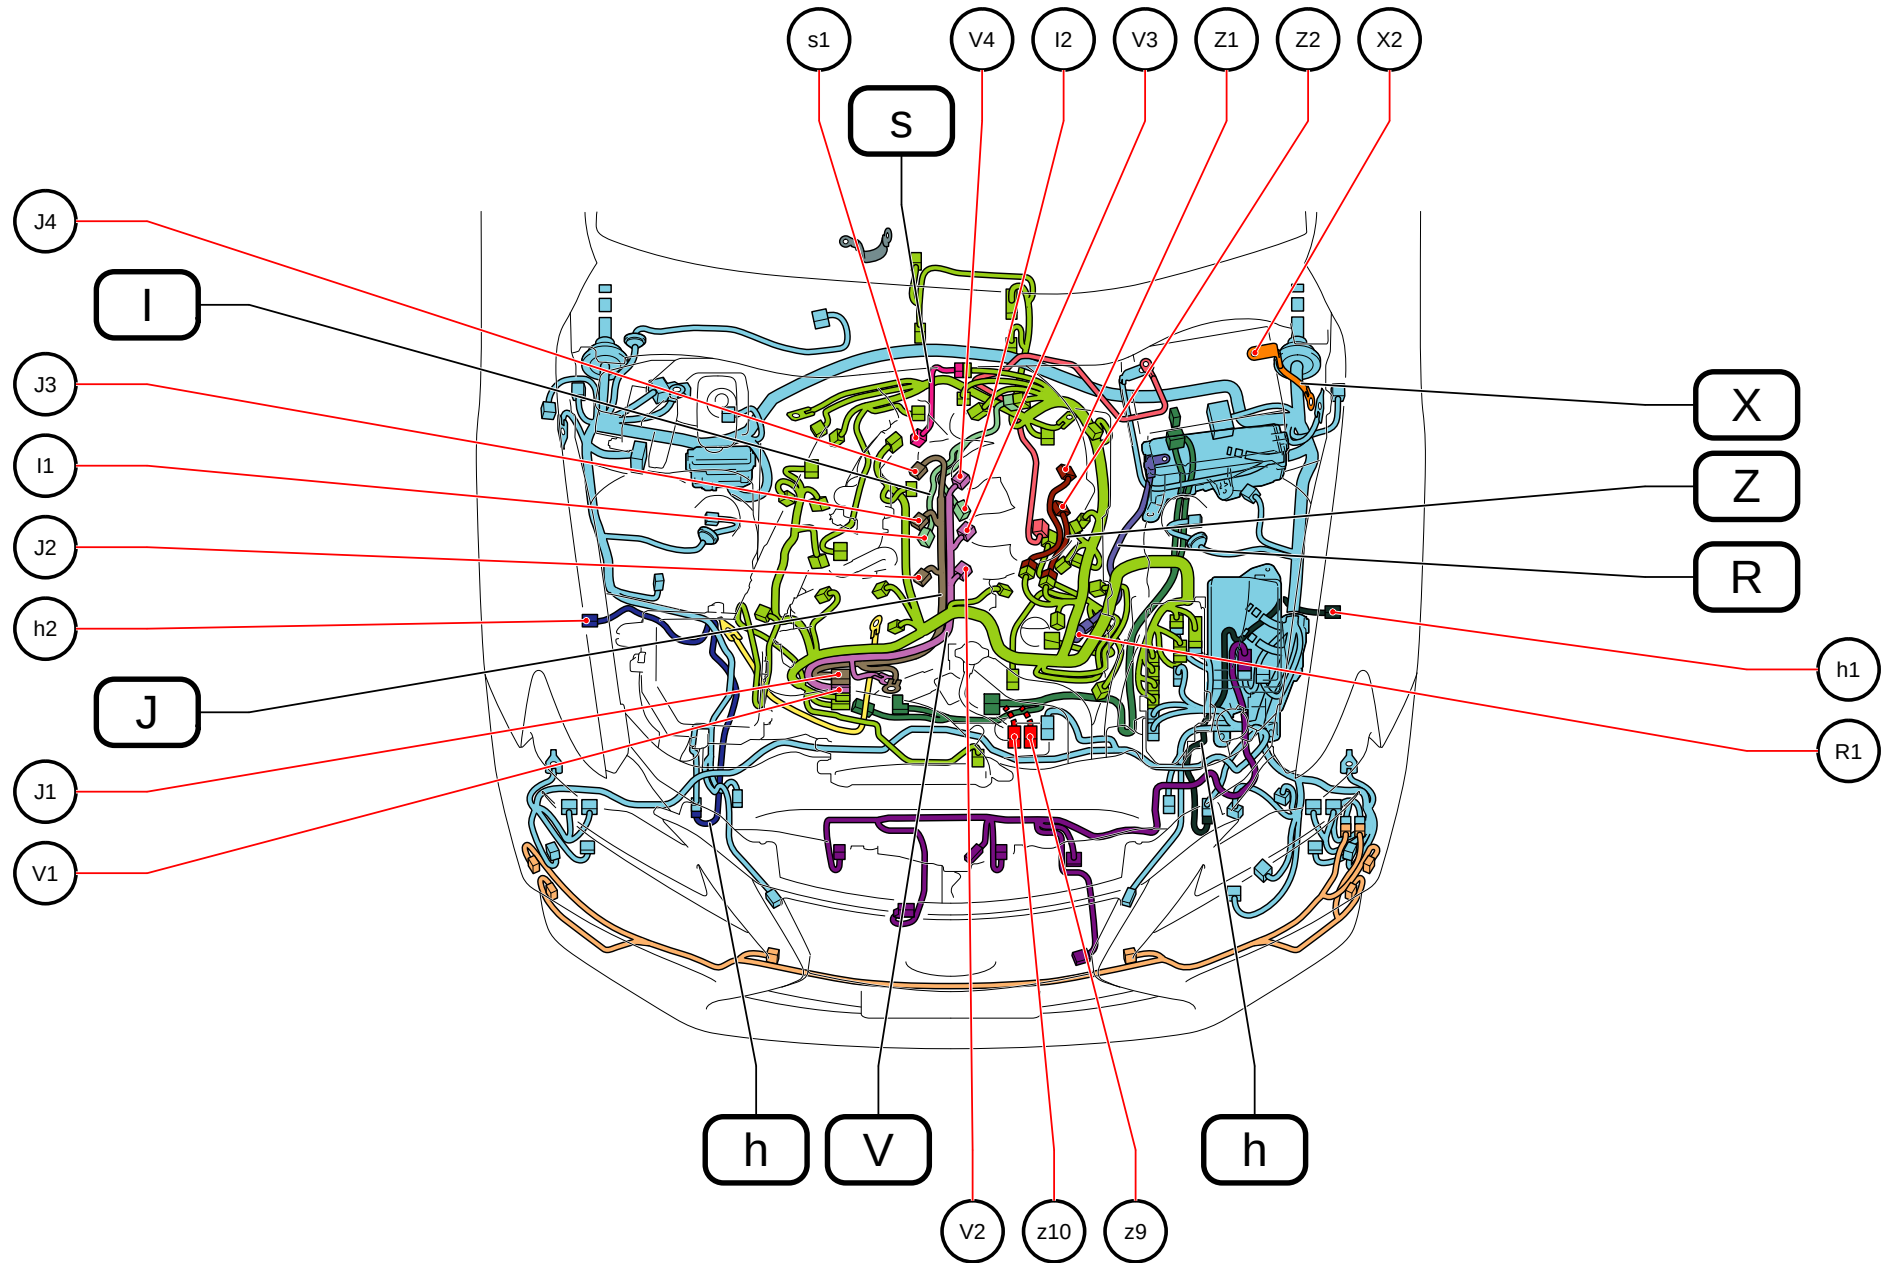

I1	Knock Control Sensor (Bank 1)
I2	Knock Control Sensor (Bank 2)
J1	Injector Driver
J2	Fuel Injector Assembly No. 1 (for Direct Injection)
J3	Fuel Injector Assembly No. 3 (for Direct Injection)
J4	Fuel Injector Assembly No. 5 (for Direct Injection)
R1	Generator Assembly
V1	Injector Driver
V2	Fuel Injector Assembly No. 2 (for Direct Injection)
V3	Fuel Injector Assembly No. 4 (for Direct Injection)
V4	Fuel Injector Assembly No. 6 (for Direct Injection)
X2	Battery
Z1	Ignition Coil Assembly No. 6
Z2	Ignition Coil Assembly No. 4
h1	Front Speed Sensor LH
h2	Front Speed Sensor RH
s1	Swirl Control Valve Position Sensor
z9	Cooling Fan ECU , No. 2 Cooling Fan Motor
z10	Cooling Fan ECU , Cooling Fan Motor

Position of Parts in Engine Compartment (RHD 4GR-FSE)

