



Position of Parts in Engine Compartment (LHD 8AR-FTS)

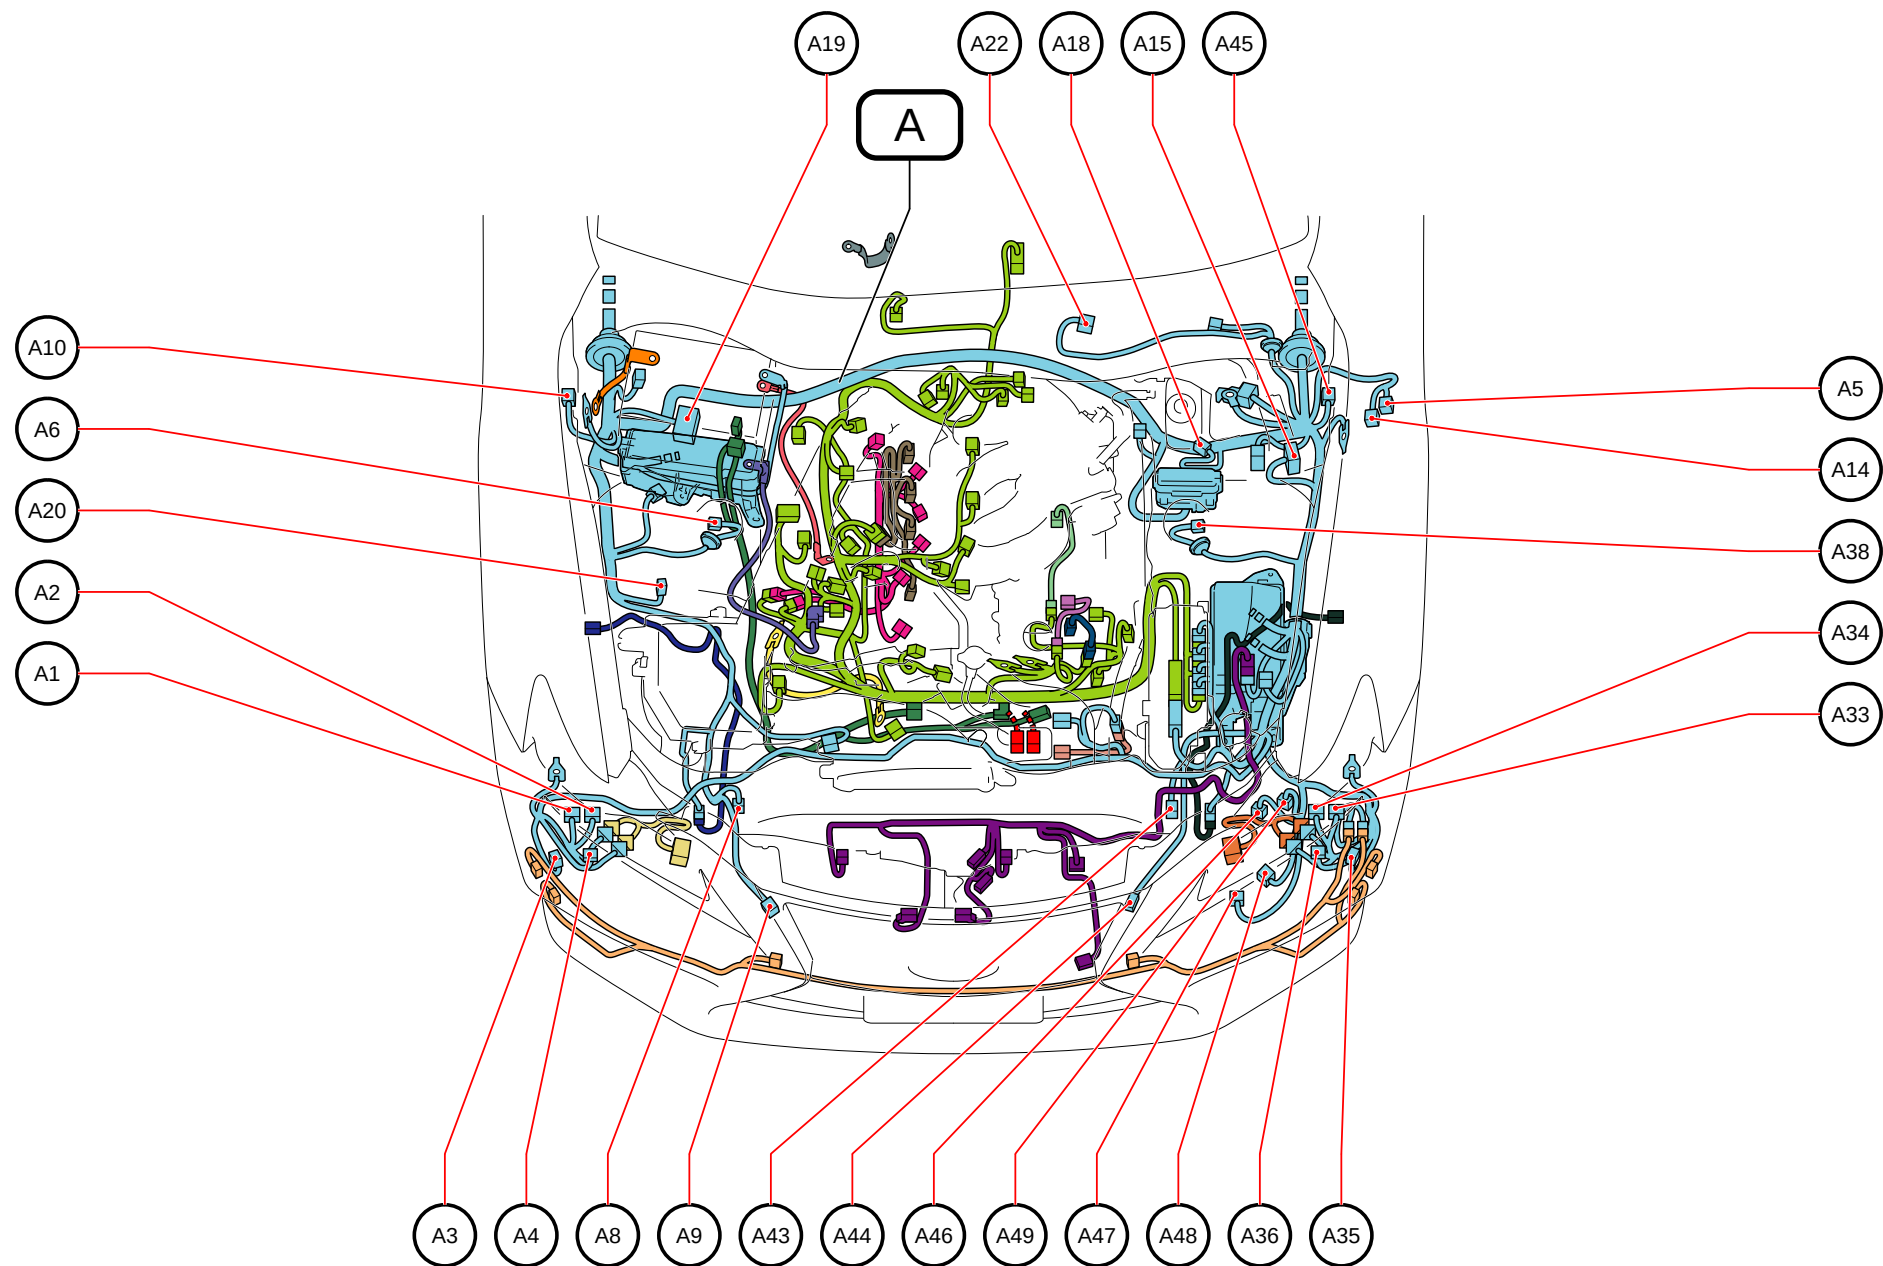


A1	Headlight Assembly RH
A2	Headlight Assembly RH
A3	Clearance Light Assembly RH
A4	Fog Light Assembly RH
A5	Front Tire Pressure Monitor Initiator
A6	Front Absorber Control Actuator RH
A8	Front Airbag Sensor RH
A9	Pedestrian Protection Sensor RH
A10	Pop Up Hood Lifter Assembly RH
A14	Wireless Door Lock Buzzer
A15	Brake Actuator Assembly
A18	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A19	Power Steering ECU Assembly
A20	Security Horn Assembly
A22	Windshield Wiper Motor Assembly
A33	Headlight Assembly LH
A34	Headlight Assembly LH
A35	Clearance Light Assembly LH
A36	Fog Light Assembly LH
A38	Front Absorber Control Actuator LH
A43	Front Airbag Sensor LH
A44	Pedestrian Protection Sensor LH
A45	Pop Up Hood Lifter Assembly LH
A46	Windshield Washer Motor and Pump Assembly
A47	Level Warning Switch Assembly
A48	Headlight Cleaner Control Relay
A49	Headlight Cleaner Motor and Pump Assembly


Position of Parts in Engine Compartment (LHD 8AR-FTS)

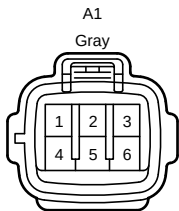


90980-11194
(Front Turn Signal Light, Headlight Leveling Actuator)

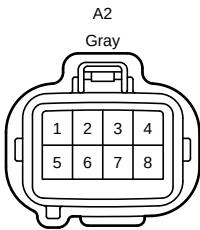


90980-10897
(Headlight)

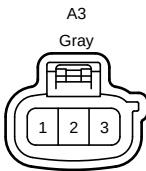


90980-10981

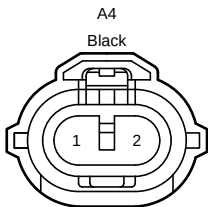


82824-60460

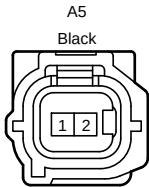


90980-12416

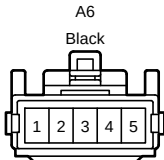


90980-10789

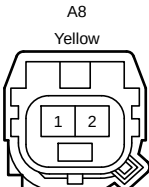


90980-12490

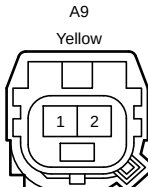


90980-12490

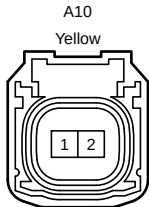

90980-12698

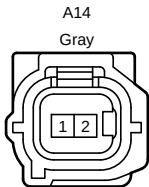


90980-12572

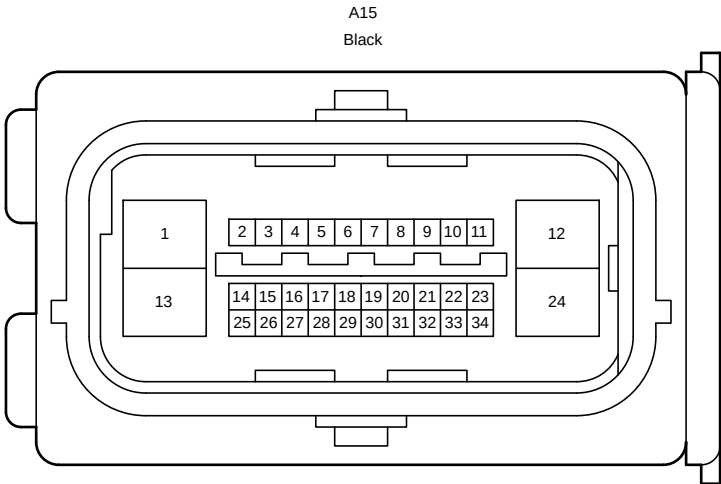

90980-12686




90980-11207

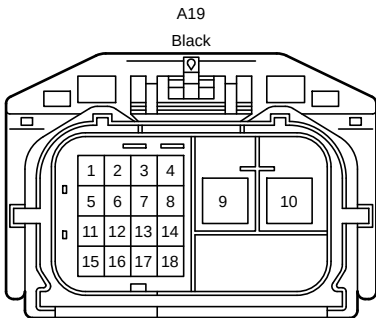


90980-12573



90980-10619

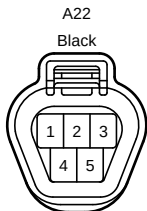

90980-11599

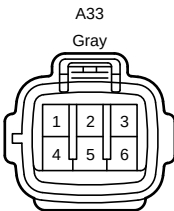

90980-11194
(Front Turn Signal Light, Headlight Leveling Actuator)

Position of Parts in Engine Compartment (LHD 8AR-FTS)

