


Position of Parts in Engine Compartment (LHD 8AR-FTS)

- * 1:w/ Front Fog Light
- * 2:w/o Front Fog Light
- * 5:Before Oct. 2016 Production
- * 6:From Oct. 2016 Production
- * 11:Before Sep. 2018 Production
- * 12:From Sep. 2018 Production

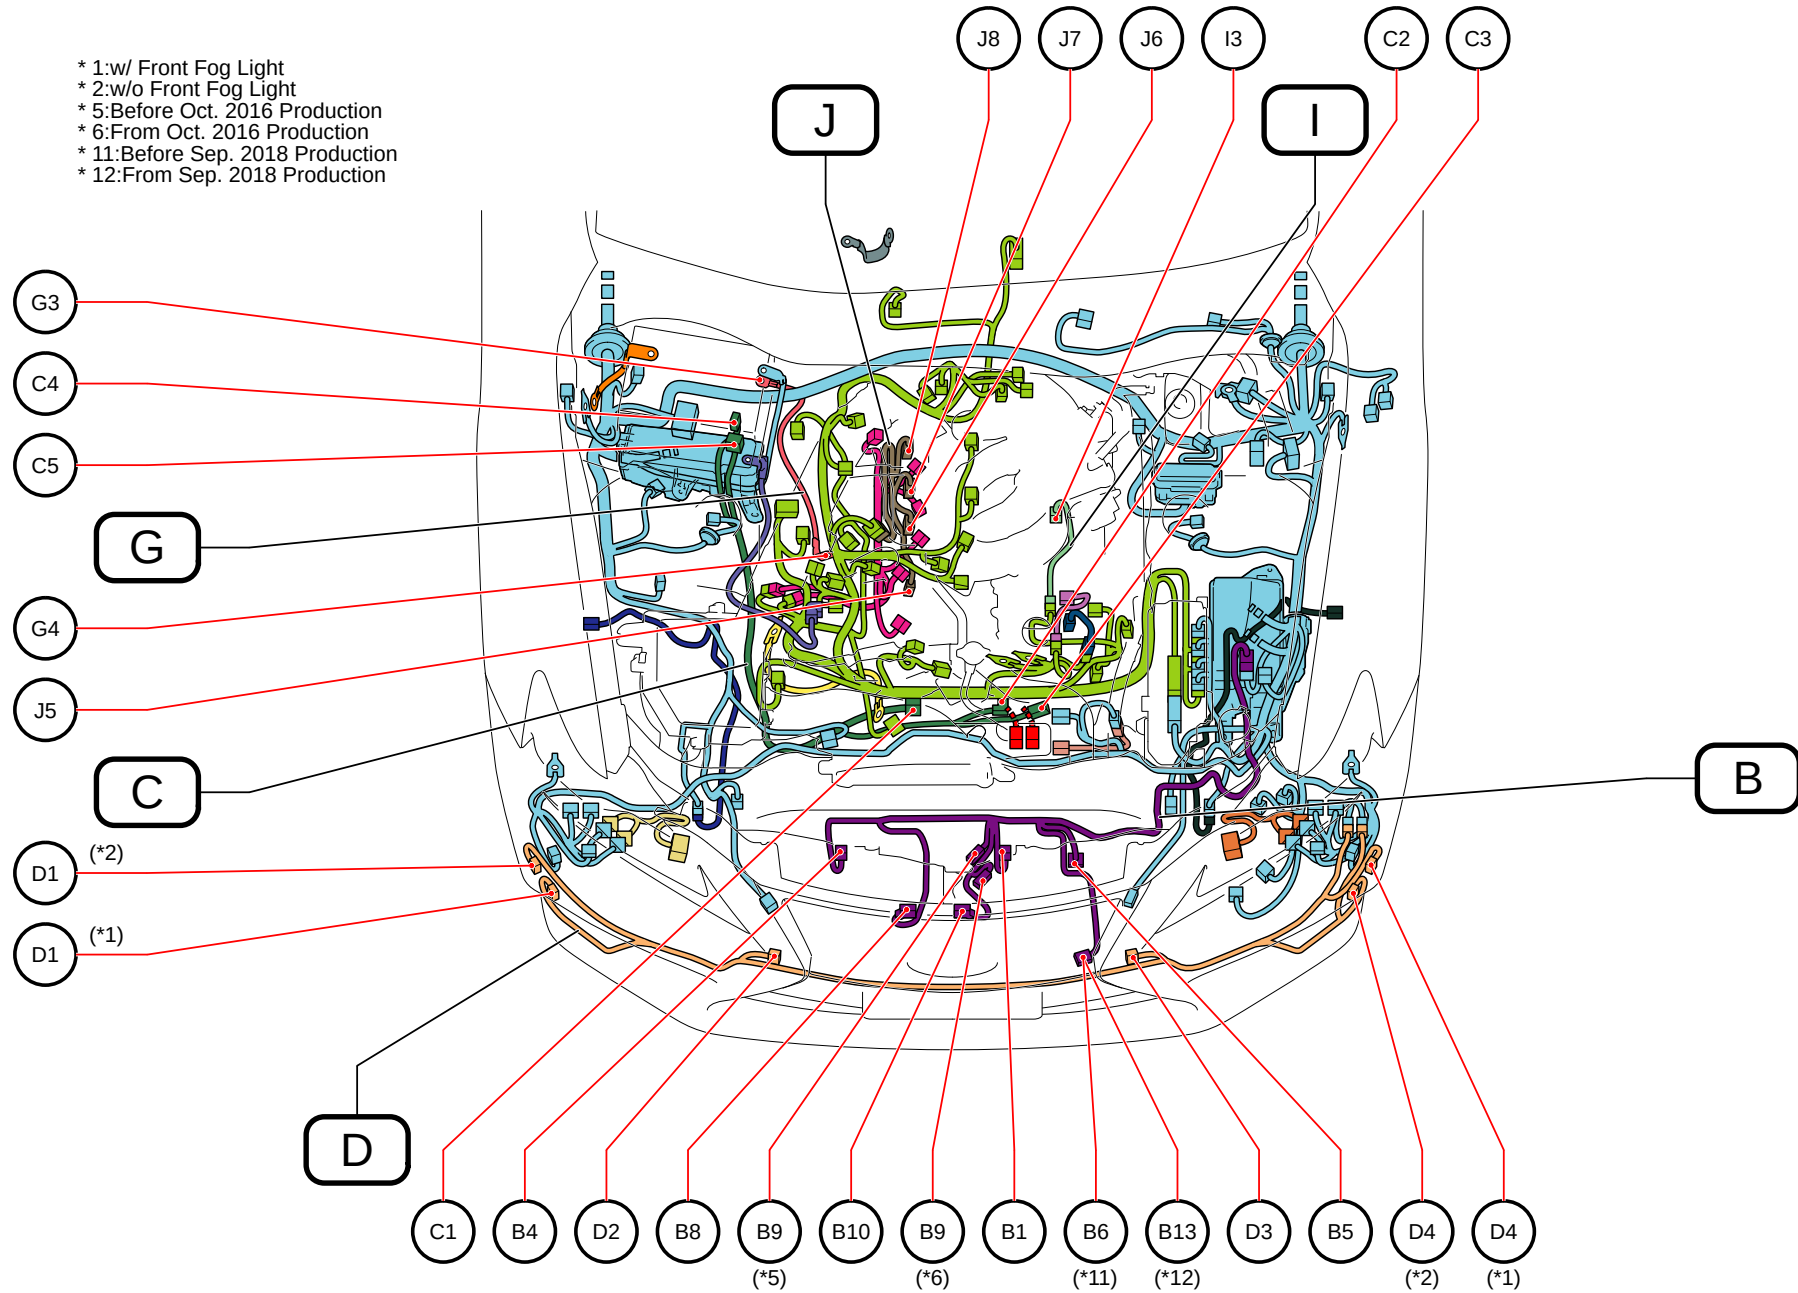

B1	High Pitched Horn Assembly
B4	Low Pitched Horn Assembly
B5	A/C Pressure Sensor
B6	Cooler (Ambient Temperature Sensor) Thermistor
B8	Millimeter Wave Radar Sensor Assembly
B9	Hood Courtesy Switch (Hood Lock Assembly)
B10	Millimeter Wave Radar Sensor Assembly
B13	Cooler (Ambient Temperature Sensor) Thermistor
C1	Power Steering Link Assembly
C2	Power Steering Link Assembly
C3	Power Steering Link Assembly
C4	Power Steering ECU Assembly
C5	Power Steering ECU Assembly
D1	Front No. 1 Ultrasonic Sensor RH
D2	Front No. 2 Ultrasonic Sensor Center RH
D3	Front No. 2 Ultrasonic Sensor Center LH
D4	Front No. 1 Ultrasonic Sensor LH
G3	Battery
G4	Starter Assembly
I3	Engine Oil Temperature Sensor (Temperature Sensor)
J5	Fuel Injector Assembly No. 1 (for Port Injection)
J6	Fuel Injector Assembly No. 2 (for Port Injection)
J7	Fuel Injector Assembly No. 3 (for Port Injection)
J8	Fuel Injector Assembly No. 4 (for Port Injection)

Position of Parts in Engine Compartment (LHD 8AR-FTS)

