


Position of Parts in Engine Compartment (LHD 8AR-FTS)

- * 3:Cooling Fan Motor 240W Type
- * 4:Cooling Fan Motor 300W Type
- * 5:Before Oct. 2016 Production
- * 6:From Oct. 2016 Production

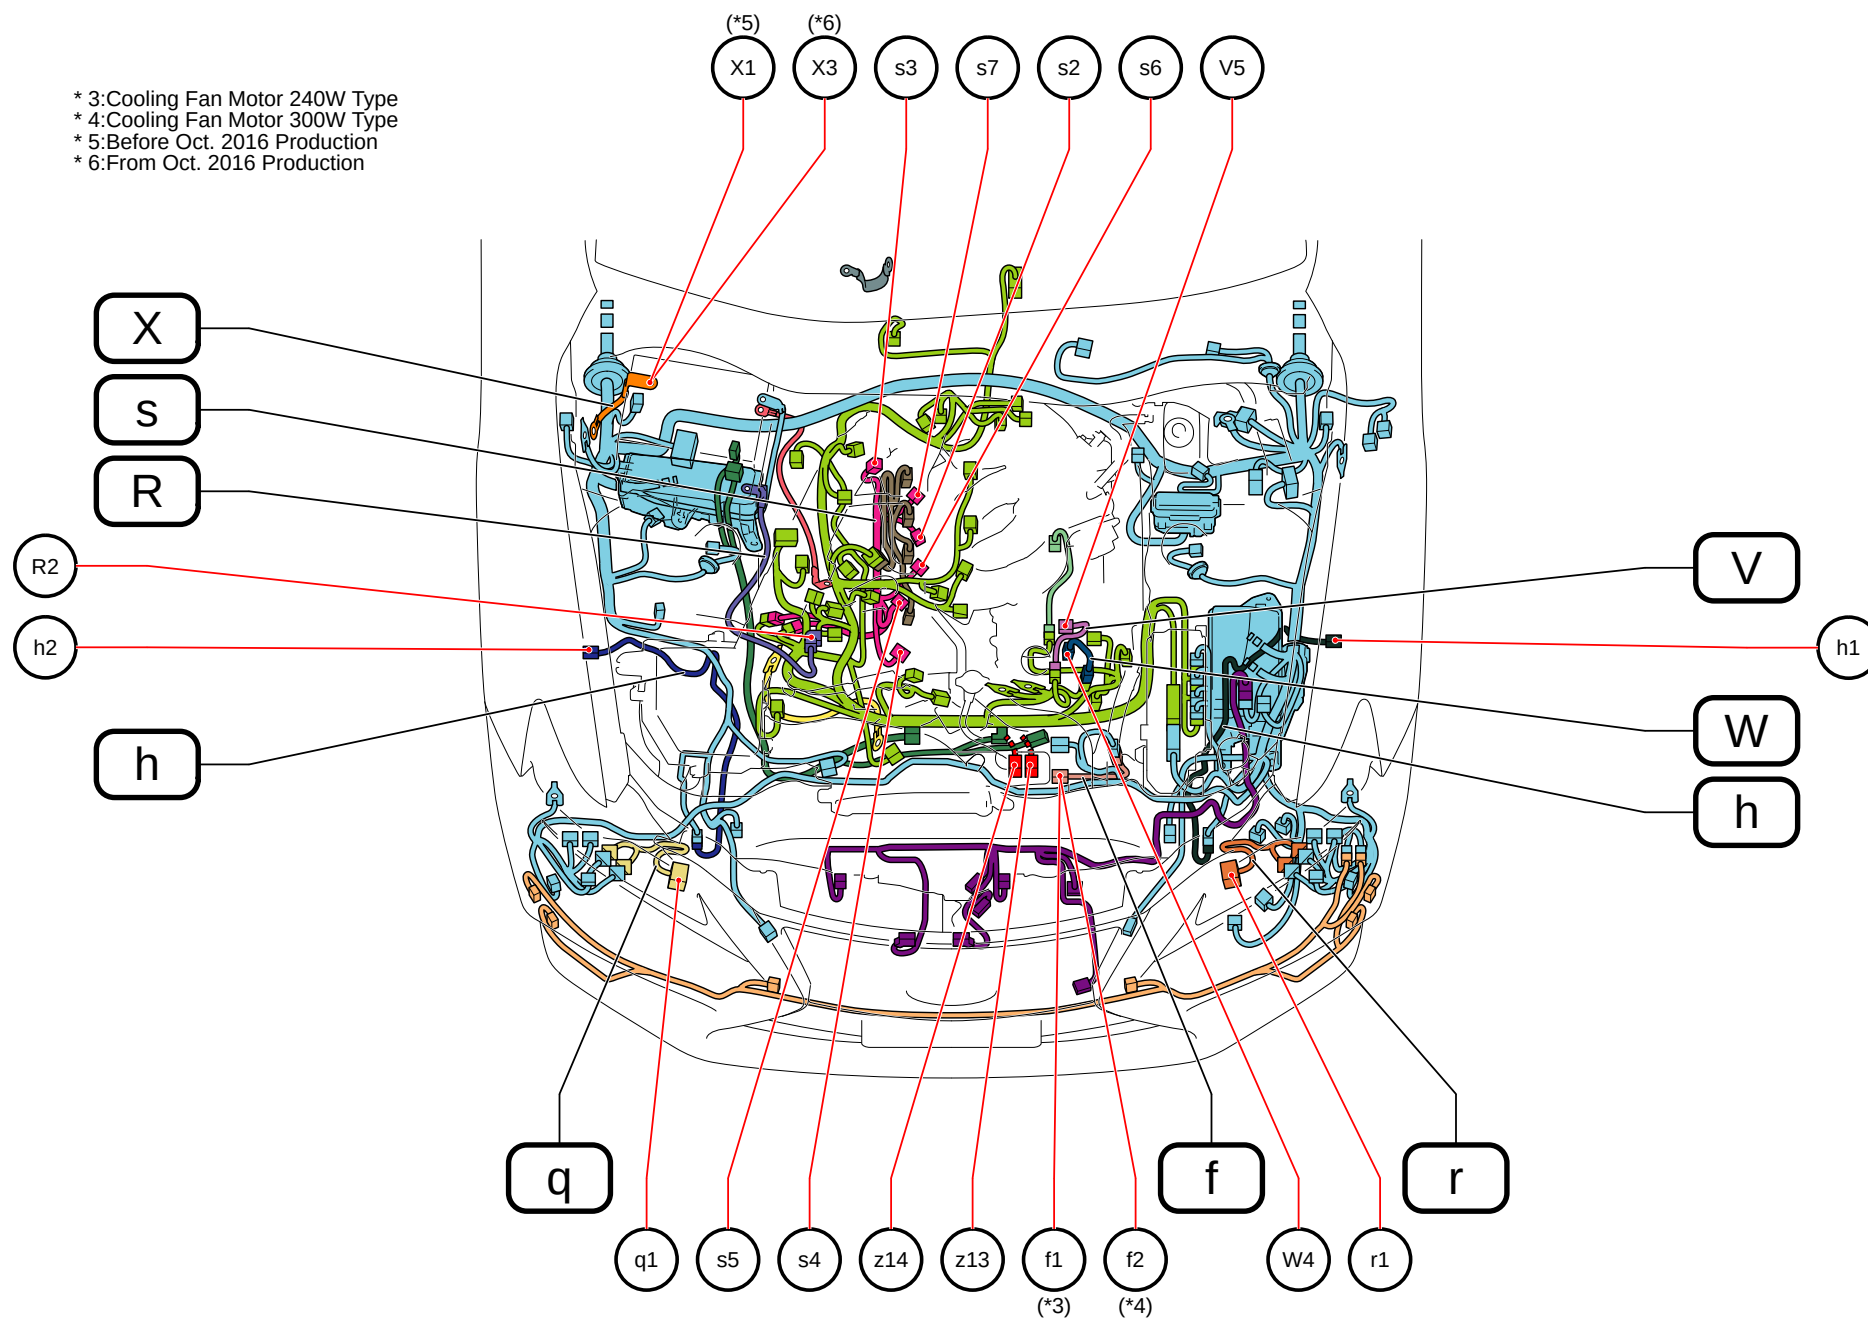

R2	Generator Assembly
V5	Engine Oil Pressure Switch Assembly
W4	No. 2 Vacuum Switching Valve Assembly
X1	Battery
X3	Battery
f1	No. 2 Cooling Fan ECU
f2	No. 2 Cooling Fan ECU
h1	Front Speed Sensor LH
h2	Front Speed Sensor RH
q1	Headlight Light Control ECU RH (Headlight Assembly RH)
r1	Headlight Light Control ECU LH (Headlight Assembly LH)
s2	Knock Control Sensor (Bank 1)
s3	Fuel Pressure Sensor (High Pressure Side)
s4	Fuel Injector Assembly No. 1 (for Direct Injection)
s5	Fuel Injector Assembly No. 2 (for Direct Injection)
s6	Fuel Injector Assembly No. 3 (for Direct Injection)
s7	Fuel Injector Assembly No. 4 (for Direct Injection)
z13	No. 1 Cooling Fan Motor , No. 1 Cooling Fan ECU
z14	No. 2 Cooling Fan Motor , No. 2 Cooling Fan ECU

Position of Parts in Engine Compartment (LHD 8AR-FTS)

