












Position of Parts in Engine Compartment (RHD 8AR-FTS)

- * 1:w/ Stop & Start System
- * 2:w/o Stop & Start System

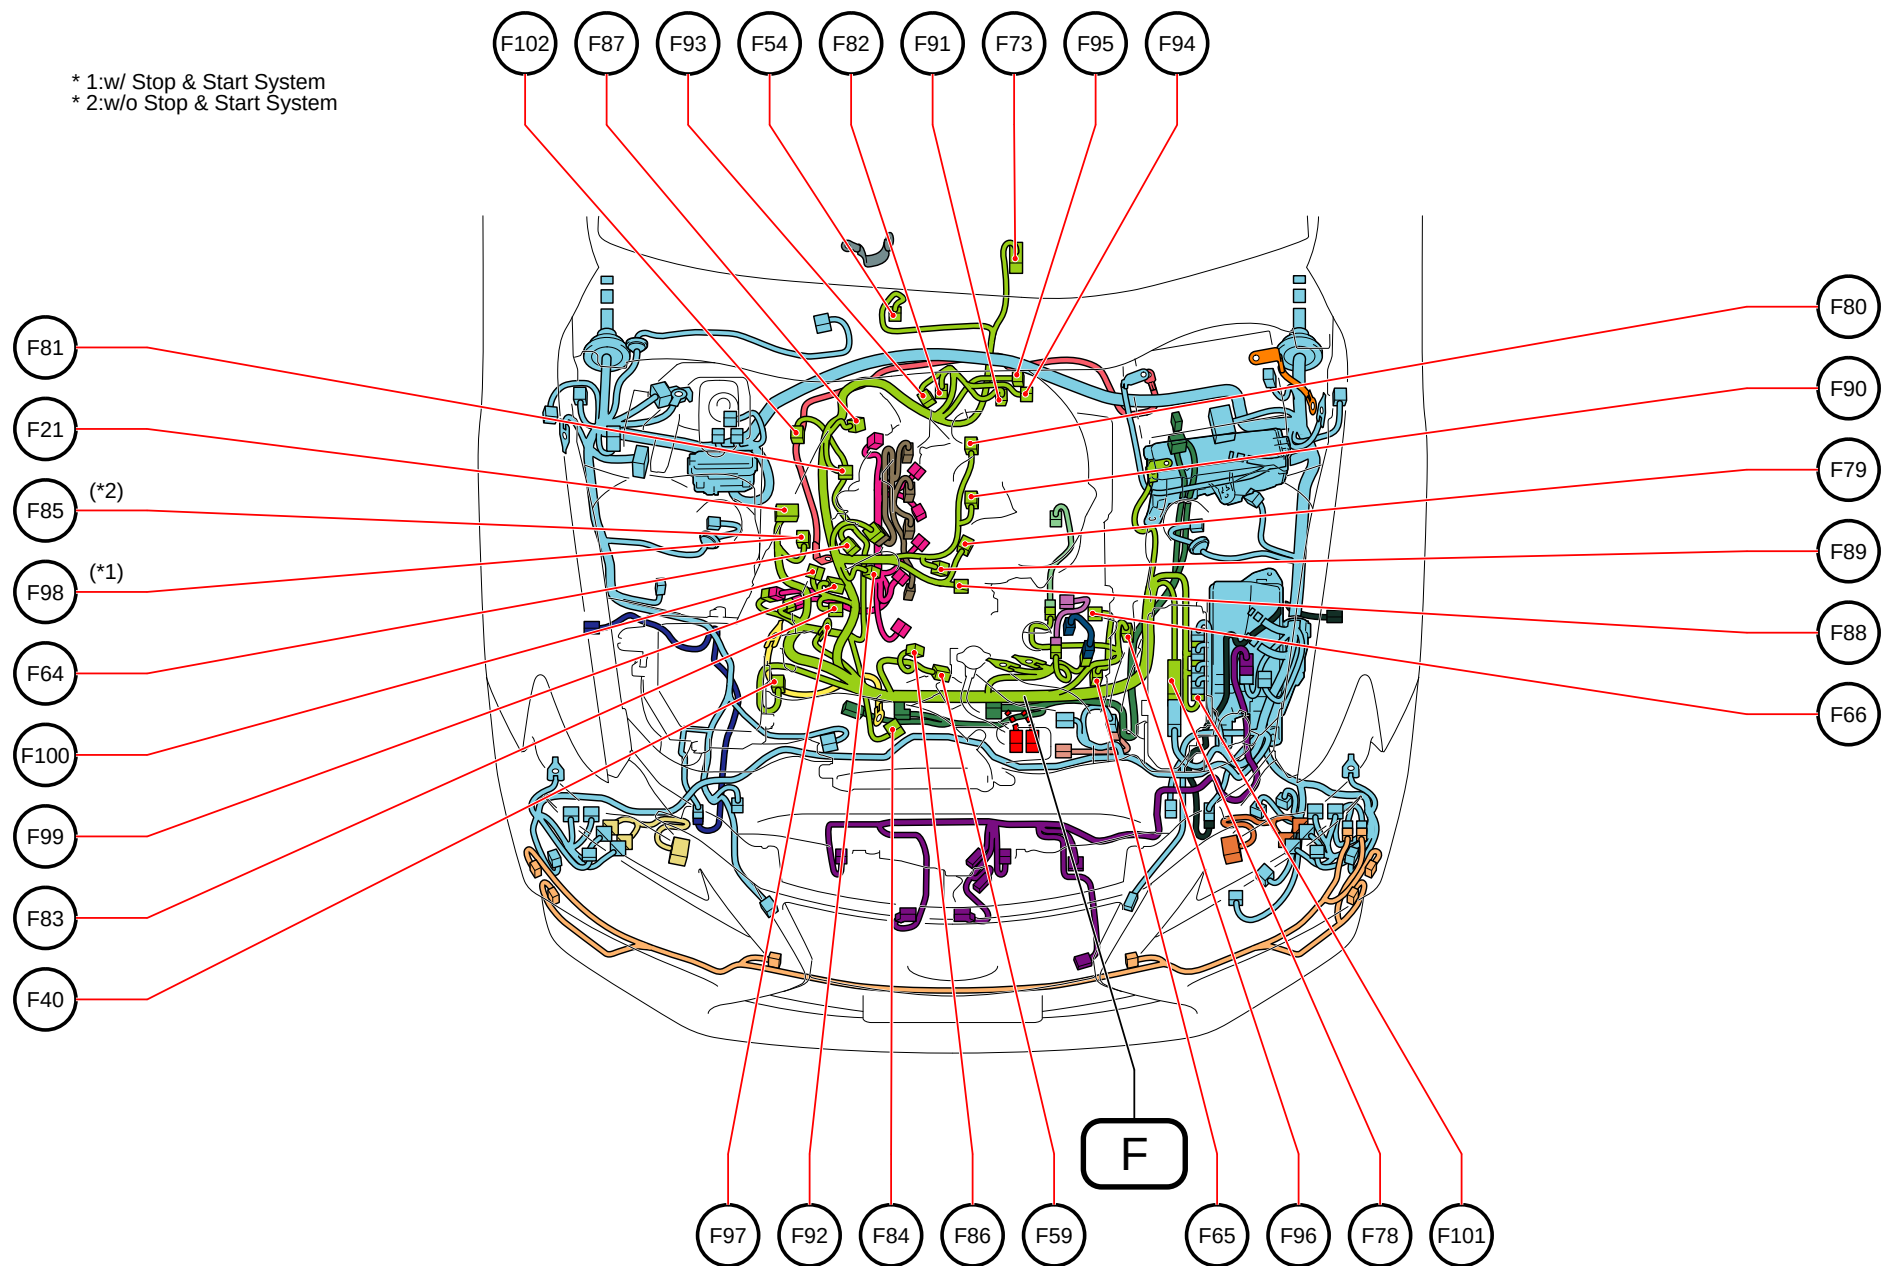

F21	Throttle Body with Motor Assembly
F40	Intake Mass Air Flow Meter Sub-Assembly
F54	Park/Neutral Position Switch Assembly
F59	E.F.I. Engine Coolant Temperature Sensor
F64	Engine Oil Level Sensor
F65	Cooler Compressor Assembly
F66	Cooler Compressor Assembly
F73	ECT Solenoid (Transmission Wire)
F78	ECM
F79	Ignition Coil Assembly No. 2
F80	Ignition Coil Assembly No. 4
F81	E.F.I. Vacuum Sensor Assembly
F82	Camshaft Position Sensor (Intake Side)
F83	Generator Assembly
F84	Crank Position Sensor
F85	Starter Assembly
F86	Camshaft Timing Oil Control Valve Assembly (Intake Side)
F87	Purge VSV
F88	Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
F89	Ignition Coil Assembly No. 1
F90	Ignition Coil Assembly No. 3
F91	Camshaft Position Sensor (Exhaust Side)
F92	Fuel Pressure Sensor (Low Pressure Side)
F93	Fuel Pump Assembly
F94	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
F95	Oxygen Sensor (Bank 1 Sensor 2)
F96	Oil Pressure Switching Valve Assembly
F97	Generator Assembly
F98	Starter Assembly
F99	Vacuum Regulating Valve Assembly
F100	E.F.I. Vacuum Sensor Assembly
F101	No. 15 Junction Connector
F102	Engine Water Pump Assembly

Position of Parts in Engine Compartment (RHD 8AR-FTS)

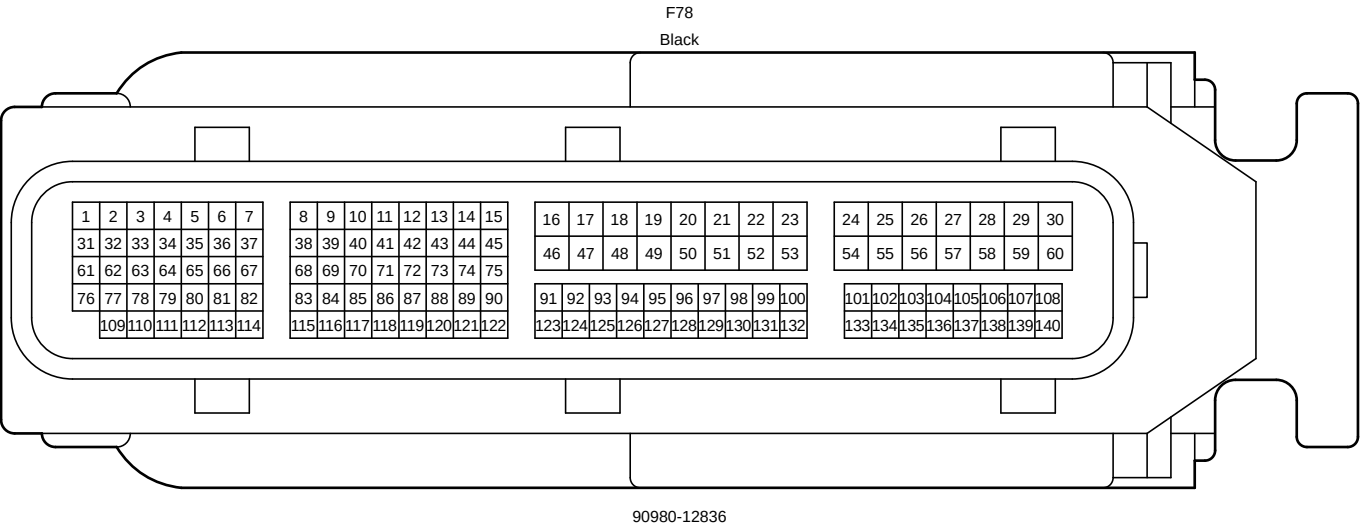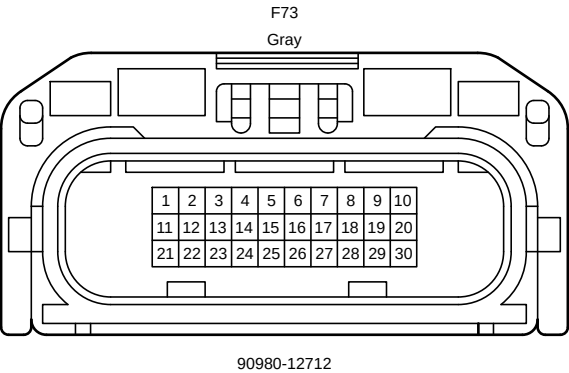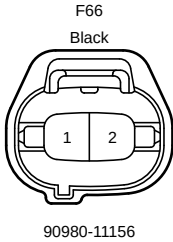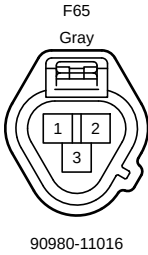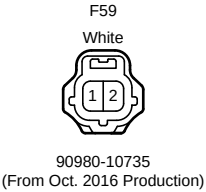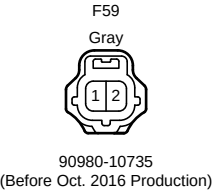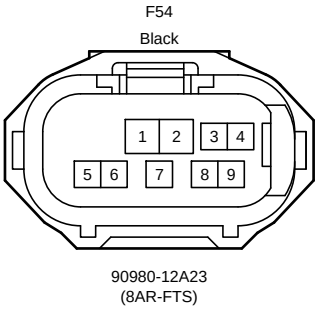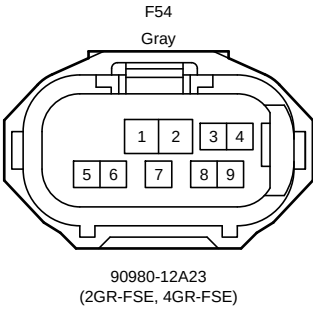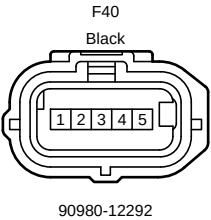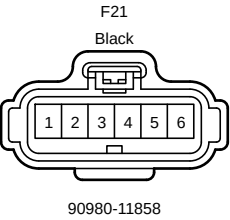

Position of Parts in Engine Compartment (RHD 8AR-FTS)

