



Position of Parts in Instrument Panel (RHD)

* 1:Refer to the Service Bulletin
for the installation position of the parts.
* 14:Before Oct. 2016 Production
* 15:From Oct. 2016 Production

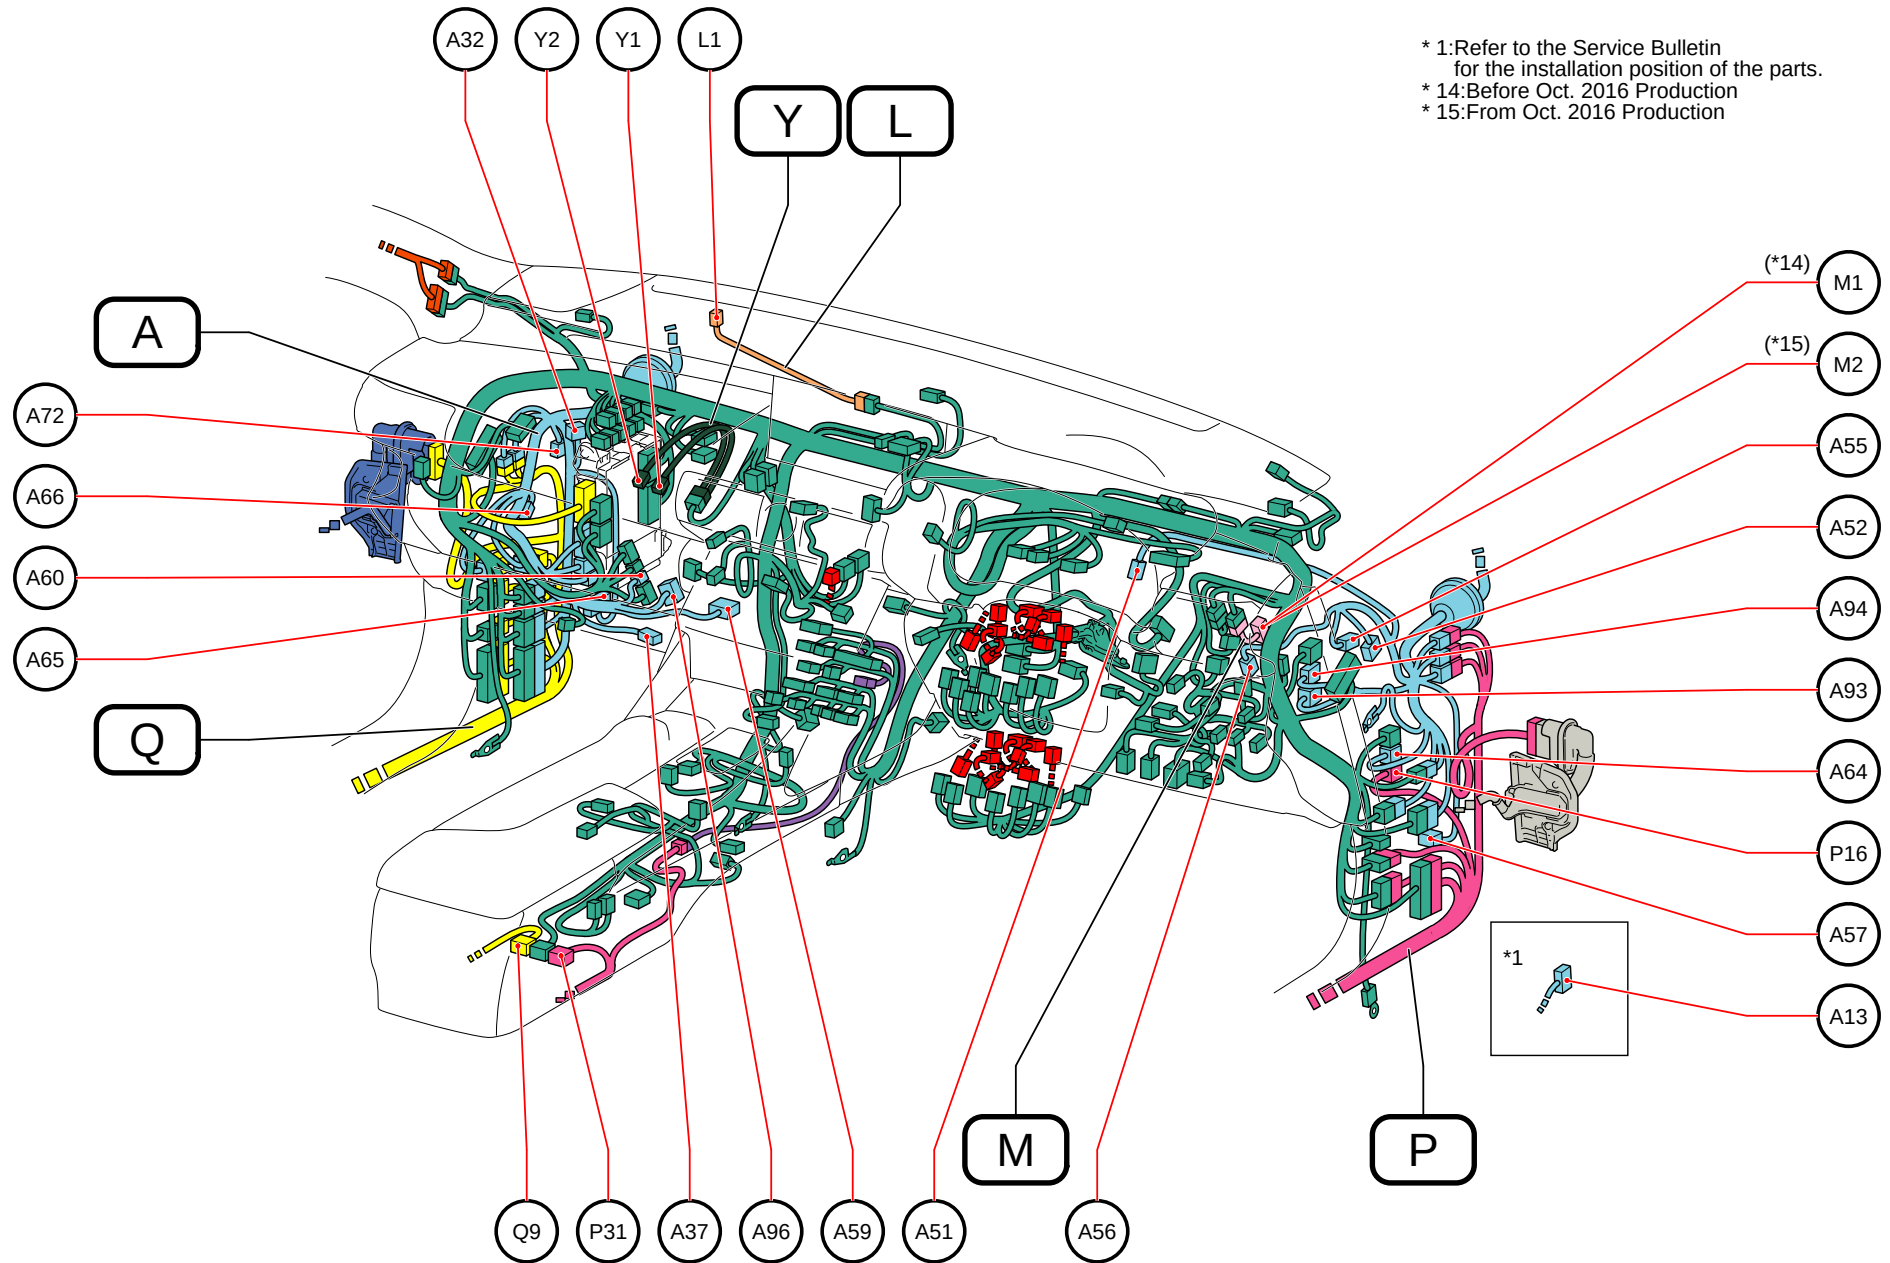


A13	Certification ECU
A32	Front Acceleration Sensor LH
A37	Front Foot Light LH (No. 1 Interior Illumination Light Assembly LH)
A51	Parking Brake Switch Assembly
A52	Accelerator Pedal Sensor Assembly
A55	Brake Pedal Load Sensing Switch (Brake Pedal Support Assembly)
A56	Stop Light Switch Assembly
A57	Kick Down Switch Assembly
A59	Blower Motor with Fan Sub-Assembly
A60	Front Steering Control ECU
A64	Absorber Control ECU
A65	Headlight Leveling ECU Assembly
A66	Diode (Park/Neutral Position Switch Assembly)
A72	No. 3 Junction Connector
A93	Engine Stop and Start ECU
A94	Engine Stop and Start ECU
A96	ECO-Run Vehicle Converter Assembly
L1	Automatic Light Control Sensor
M1	Driving Support ECU Assembly
M2	Driving Support ECU Assembly
P16	Absorber Control ECU
P31	Airbag Sensor Assembly
Q9	Airbag Sensor Assembly
Y1	Instrument Panel Passenger Airbag without Door Assembly
Y2	Instrument Panel Passenger Airbag without Door Assembly


Position of Parts in Instrument Panel (RHD)

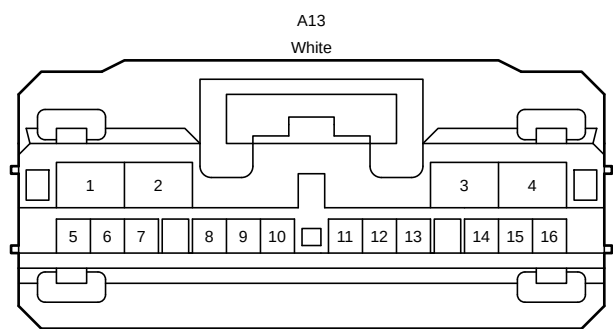


90980-12763

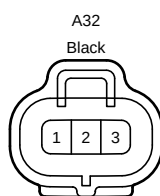


90980-10845

 


90980-11148

 


90980-10871

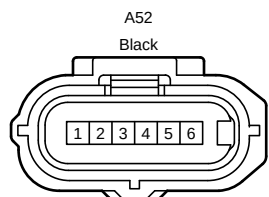


90980-12831

 


90980-10825

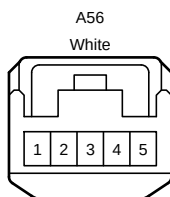


90980-12366

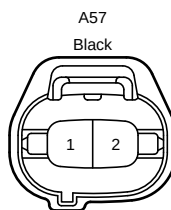


90980-11156

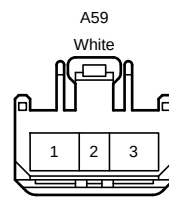


90980-11667
(Before Jun. 2014 Production)

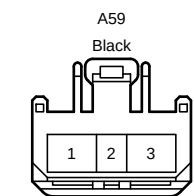


90980-11667
(From Jun. 2014 Production)

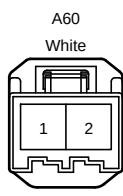


82824-30590

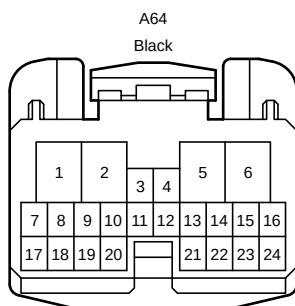


82824-50300

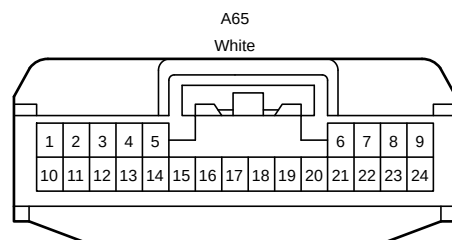


90980-12404

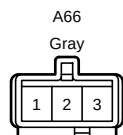

90980-11071

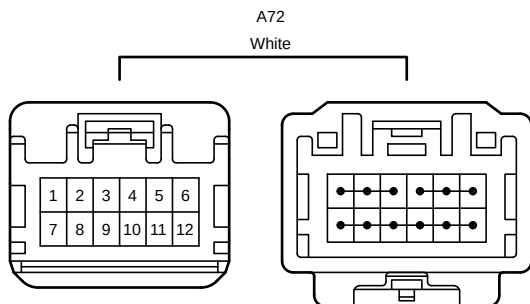

90980-12737

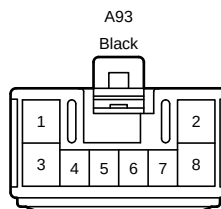

90980-11362

Position of Parts in Instrument Panel (RHD)

