 



Position of Parts in Seat (LHD)

* 1:w/ Seat Position Memory
* 2:w/o Seat Position Memory

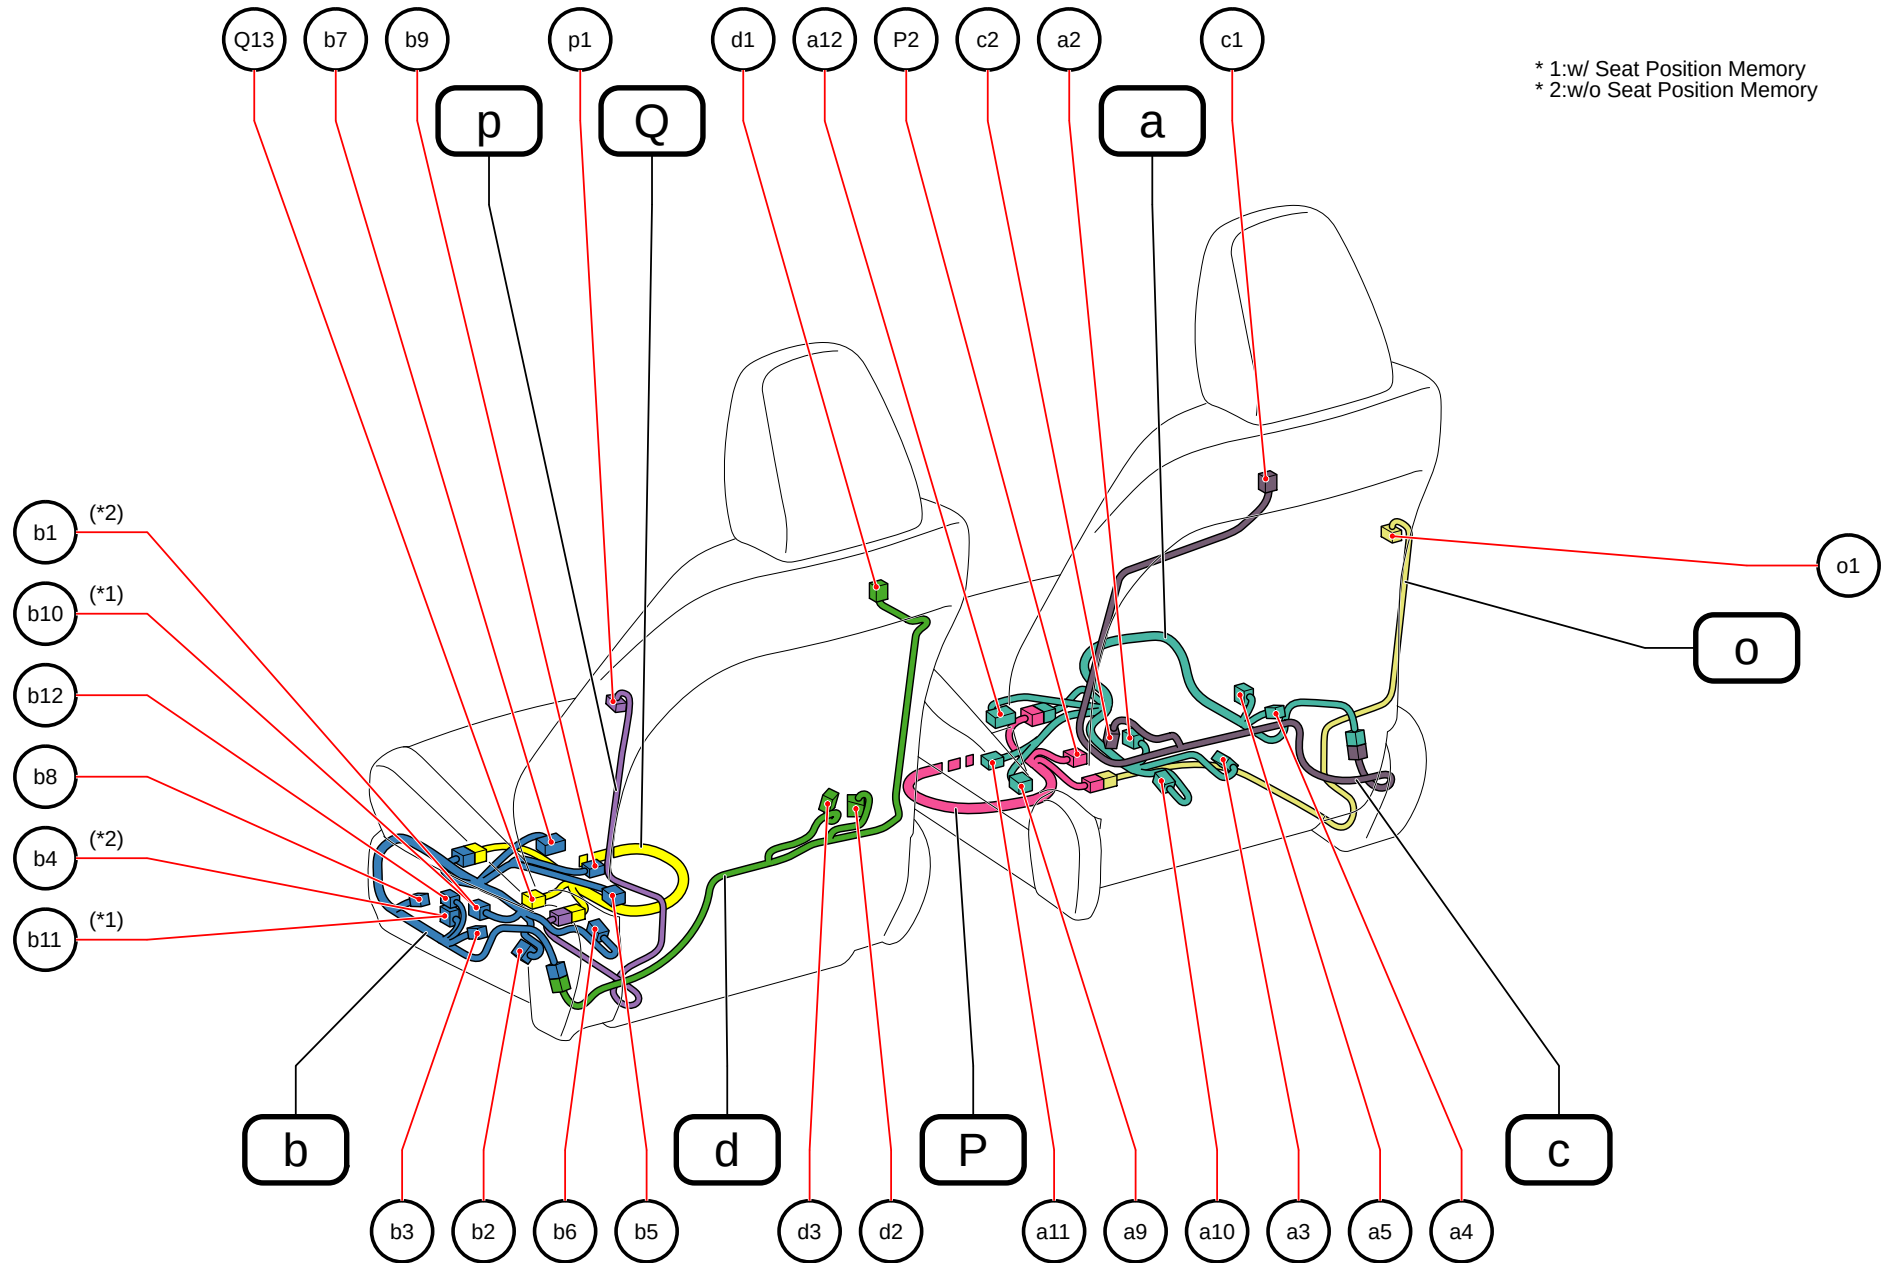

P2	Front Seat Inner Belt Assembly RH
Q13	Front Seat Airbag Assembly LH
a2	Power Seat Slide Motor RH (Front Seat Adjuster Assembly RH)
a3	Power Seat Tilt Motor RH (Front Seat Adjuster Assembly RH)
a4	Power Seat Lift Motor RH (Front Seat Adjuster Assembly RH)
a5	Front Power Seat Switch RH
a9	Seat Heater RH (Front Separate Type Seat Cushion Cover)
a10	Seat Cushion Climate Control Blower Assembly RH
a11	Front Seat Inner Belt Assembly RH
a12	No. 12 Junction Connector
b1	Power Seat Slide Motor LH (Front Seat Adjuster Assembly LH)
b2	Power Seat Tilt Motor LH (Front Seat Adjuster Assembly LH)
b3	Power Seat Lift Motor LH (Front Seat Adjuster Assembly LH)
b4	Front Power Seat Switch LH
b5	Seat Heater LH (Front Separate Type Seat Cushion Cover)
b6	Seat Cushion Climate Control Blower Assembly LH
b7	No. 13 Junction Connector
b8	Front Lumbar Power Seat Switch
b9	Front Seat Inner Belt Assembly LH
b10	Power Seat Slide Motor LH (Front Seat Adjuster Assembly LH)
b11	Front Power Seat Switch LH
b12	Front Power Seat Switch LH
c1	Seat Back Climate Control Blower RH
c2	Power Seat Reclining Motor RH (Front Separate Type Seat Back Spring Assembly)
d1	Seat Back Climate Control Blower LH
d2	Power Seat Reclining Motor LH (Front Separate Type Seat Back Spring Assembly)
d3	Power Seat Lumbar Support Motor LH (Front Seat Back Spring Sub-Assembly LH)
o1	Front Seat Airbag Assembly RH
p1	Front Seat Airbag Assembly LH

 
Position of Parts in Seat (LHD)

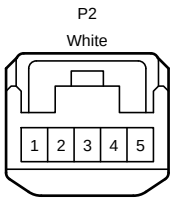


90980-12366



 
90980-10942




90980-10825

 


90980-12341

 


90980-10825

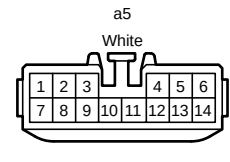 


90980-10807

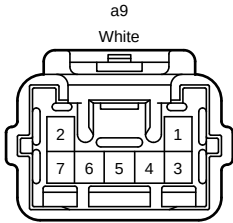 


90980-11528

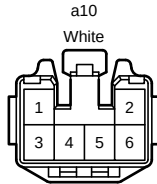 


90980-12180

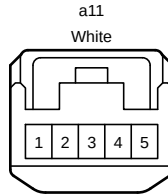 


90980-12366

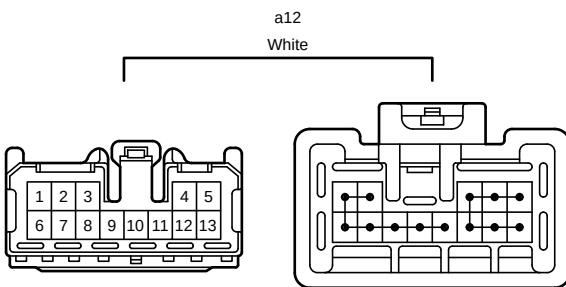 


90980-12346

 


90980-10825

 


90980-12341

 


90980-10825

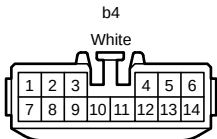 


90980-10807

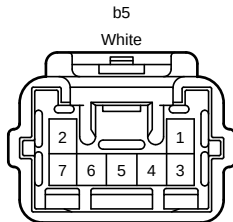 


90980-11528

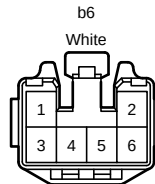 


90980-12180

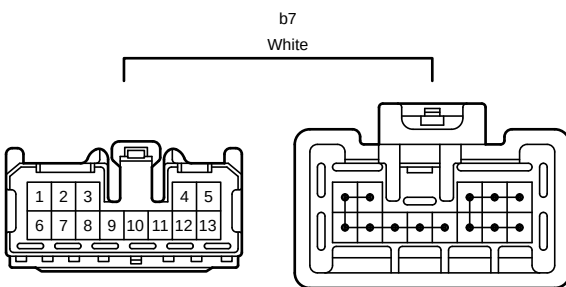 

90980-12346

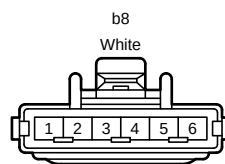 


90980-10933

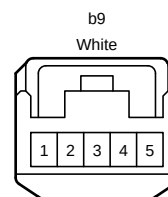 


90980-12366

 
Position of Parts in Seat (LHD)

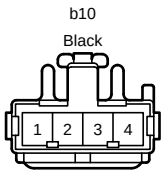


90980-11841

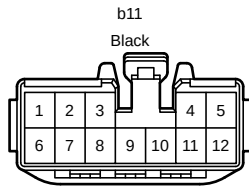 


90980-11782

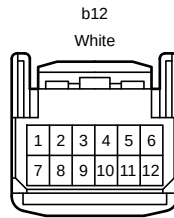 


90980-12552

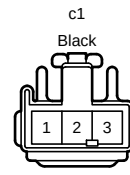 


90980-10908

 


90980-12341

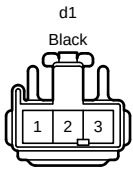 


90980-10908

 


90980-12341

 

90980-12341

 

90980-12452

 

90980-12452