



Position of Parts in Engine Compartment (LHD)

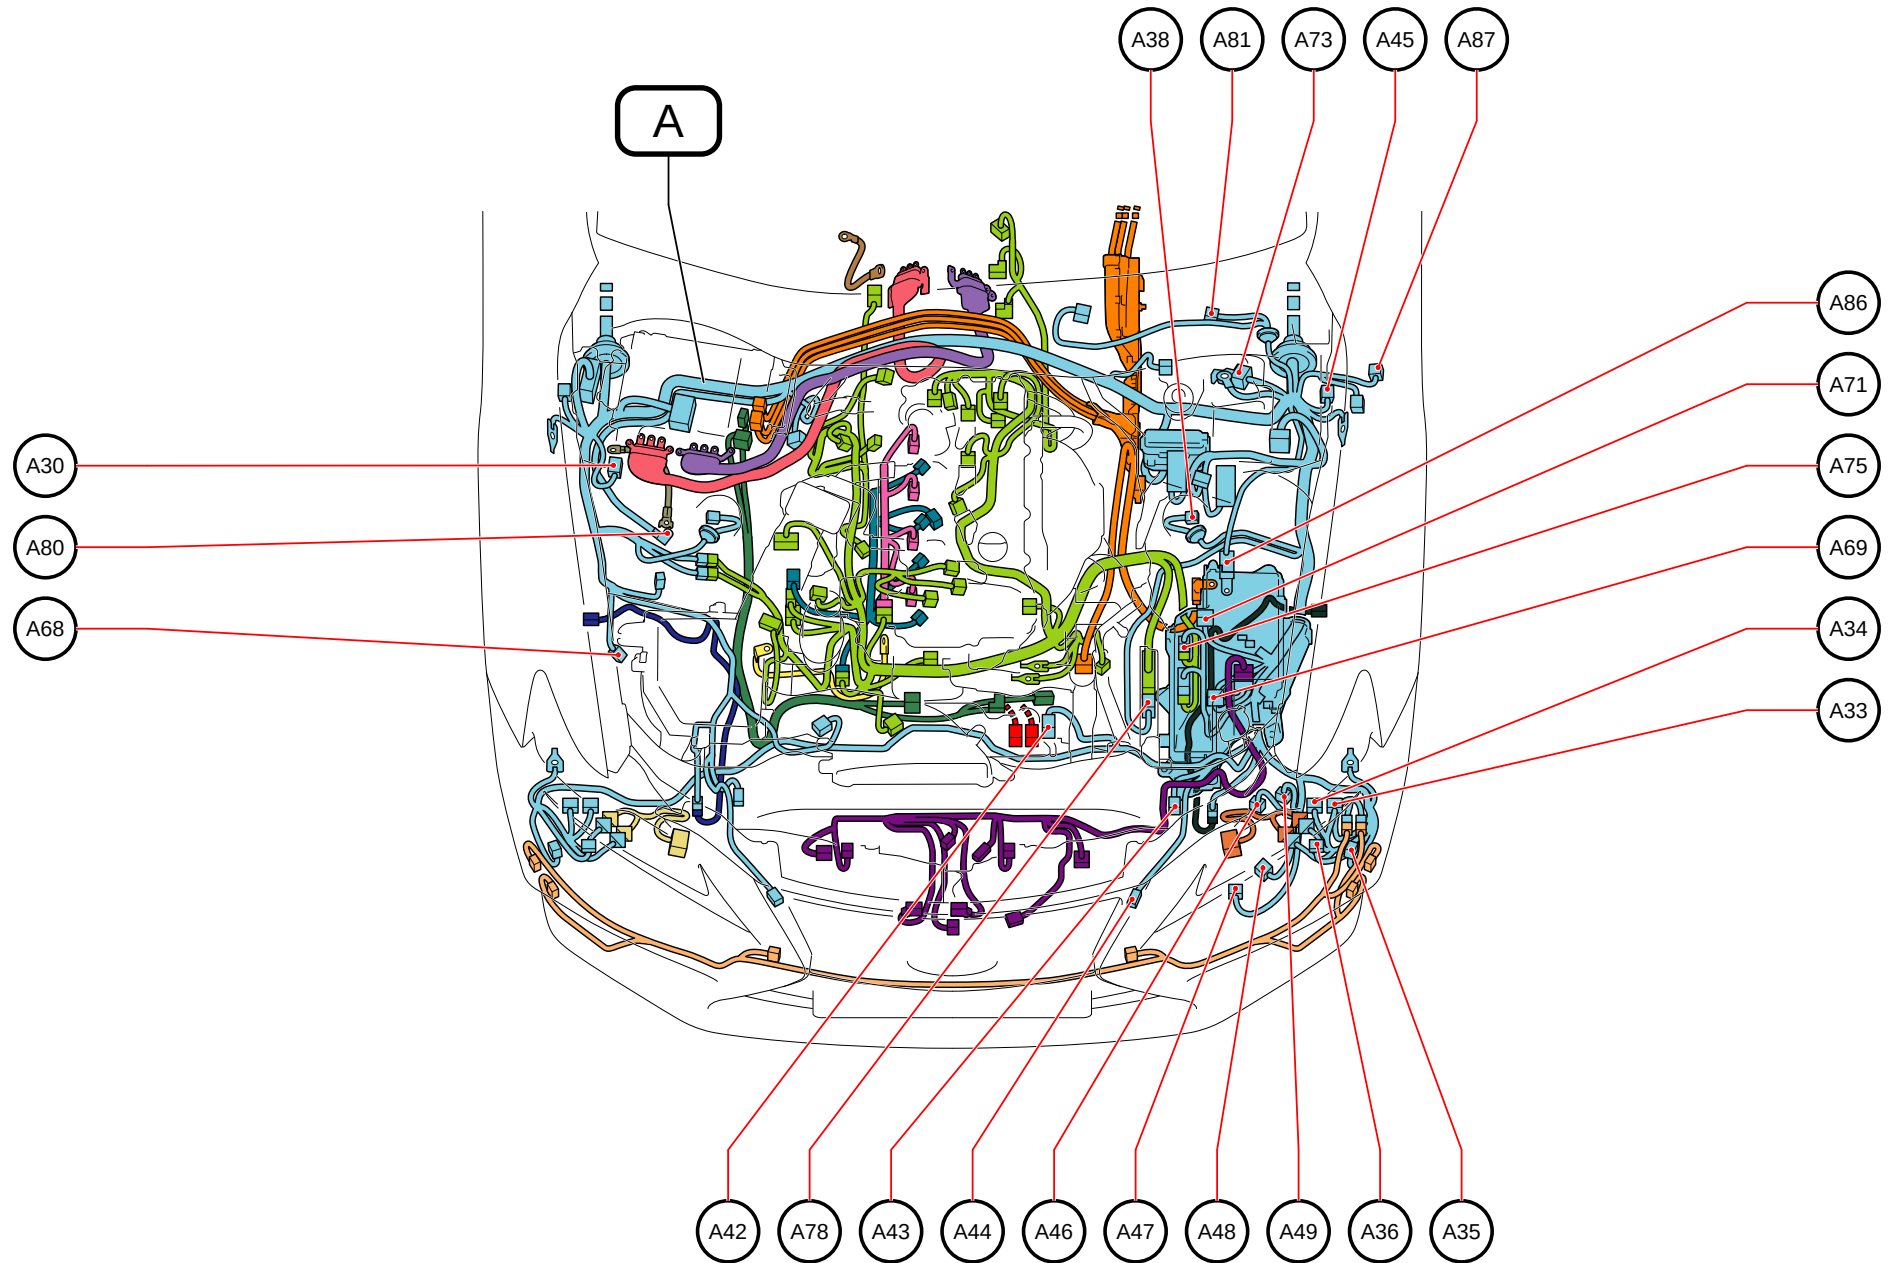

A30	Inverter with Converter Assembly
A33	Headlight Assembly LH
A34	Headlight Assembly LH
A35	Clearance Light Assembly LH
A36	Fog Light Assembly LH
A38	Front Absorber Control Actuator LH
A42	Cooling Fan ECU
A43	Front Airbag Sensor LH
A44	Pedestrian Protection Sensor LH
A45	Pop Up Hood Lifter Assembly LH
A46	Windshield Washer Motor and Pump Assembly
A47	Level Warning Switch Assembly
A48	Headlight Cleaner Control Relay
A49	Headlight Cleaner Motor and Pump Assembly
A68	No. 1 Wiring Harness Condenser Assembly
A69	No. 1 Junction Connector
A71	No. 2 Junction Connector
A73	No. 1 Ground Junction Connector
A75	No. 4 Junction Connector
A78	ECM
A80	Inverter with Converter Assembly
A81	Front Wiper Deicer (Windshield Glass)
A86	Terminal Block Assembly
A87	Front Tire Pressure Monitor Initiator

Position of Parts in Engine Compartment (LHD)

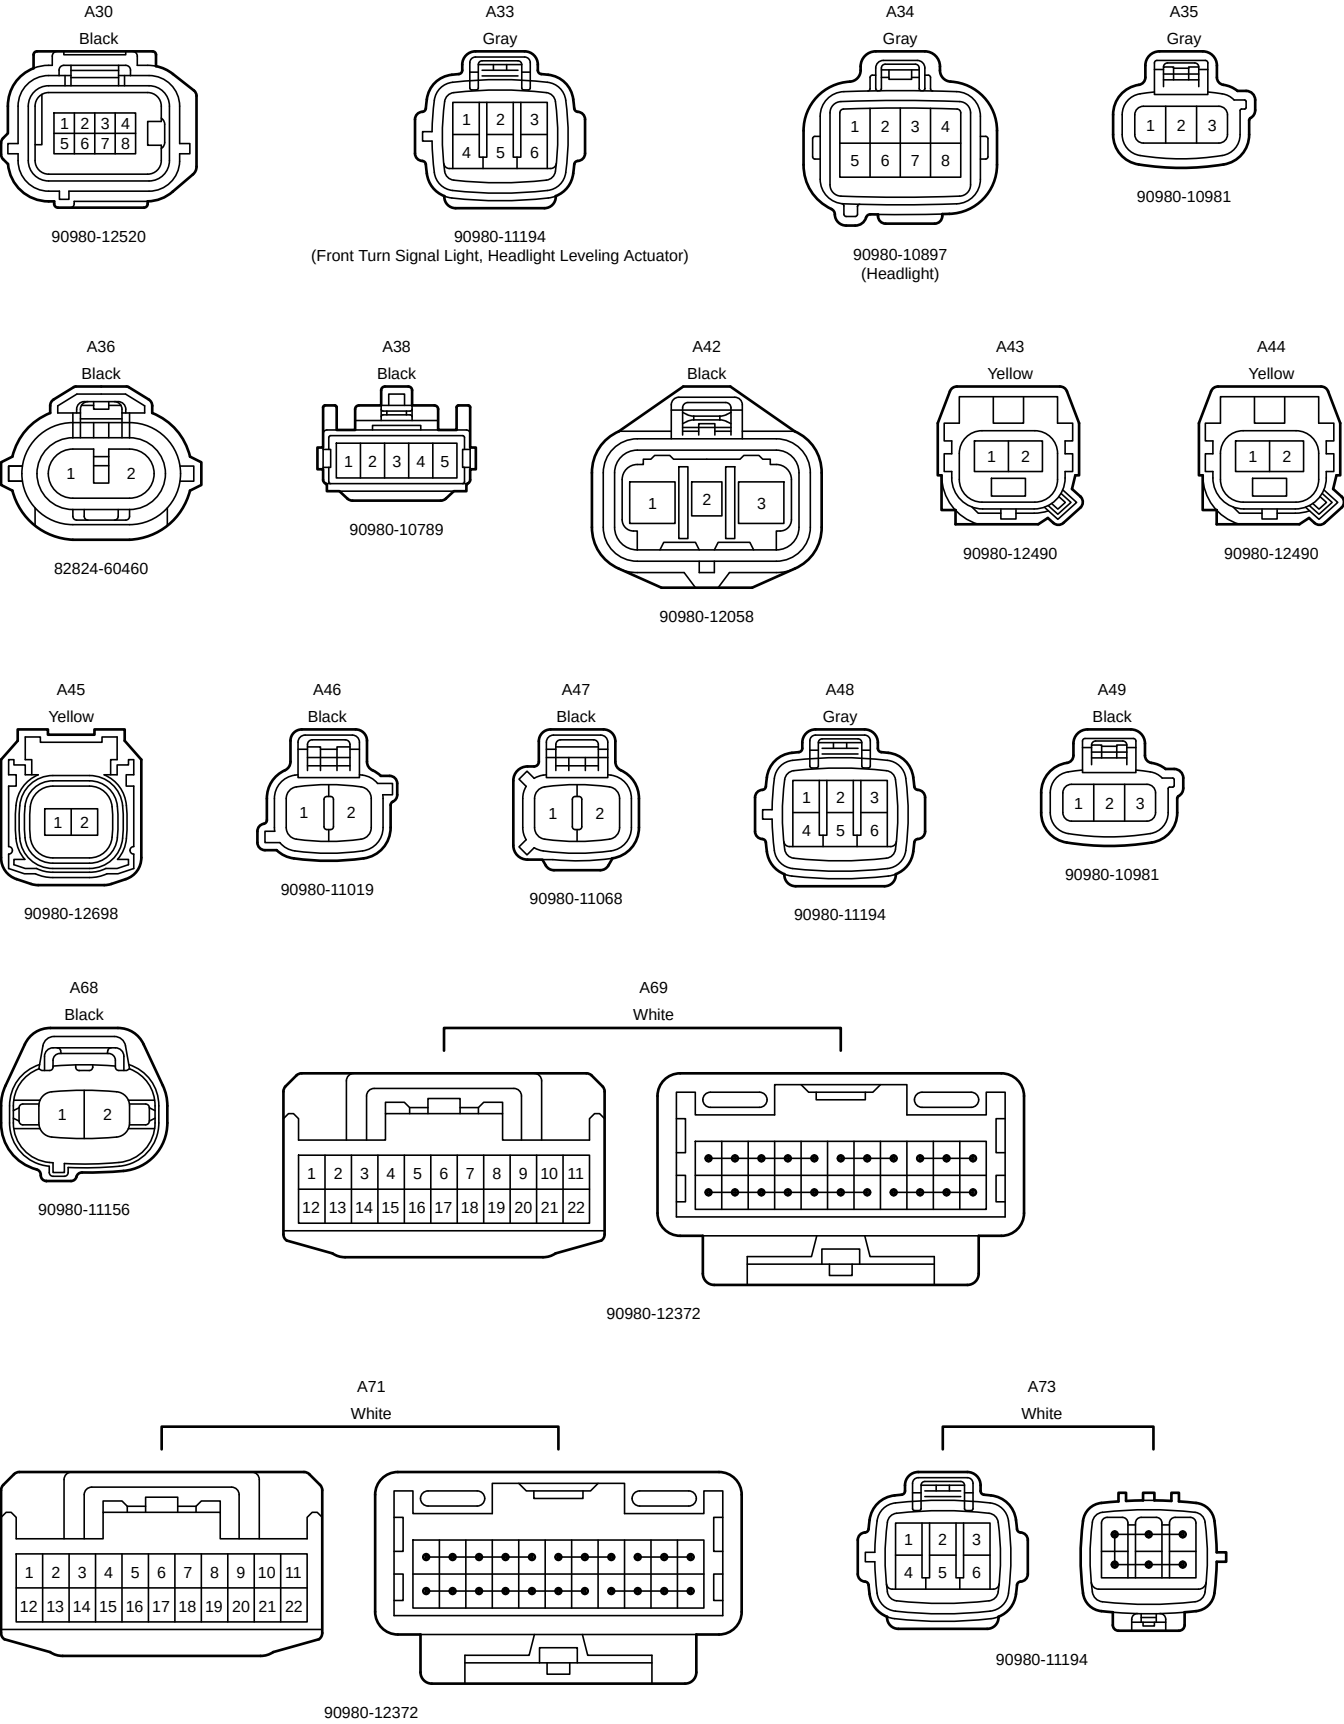

Position of Parts in Engine Compartment (LHD)

