



Position of Parts in Engine Compartment (RHD)

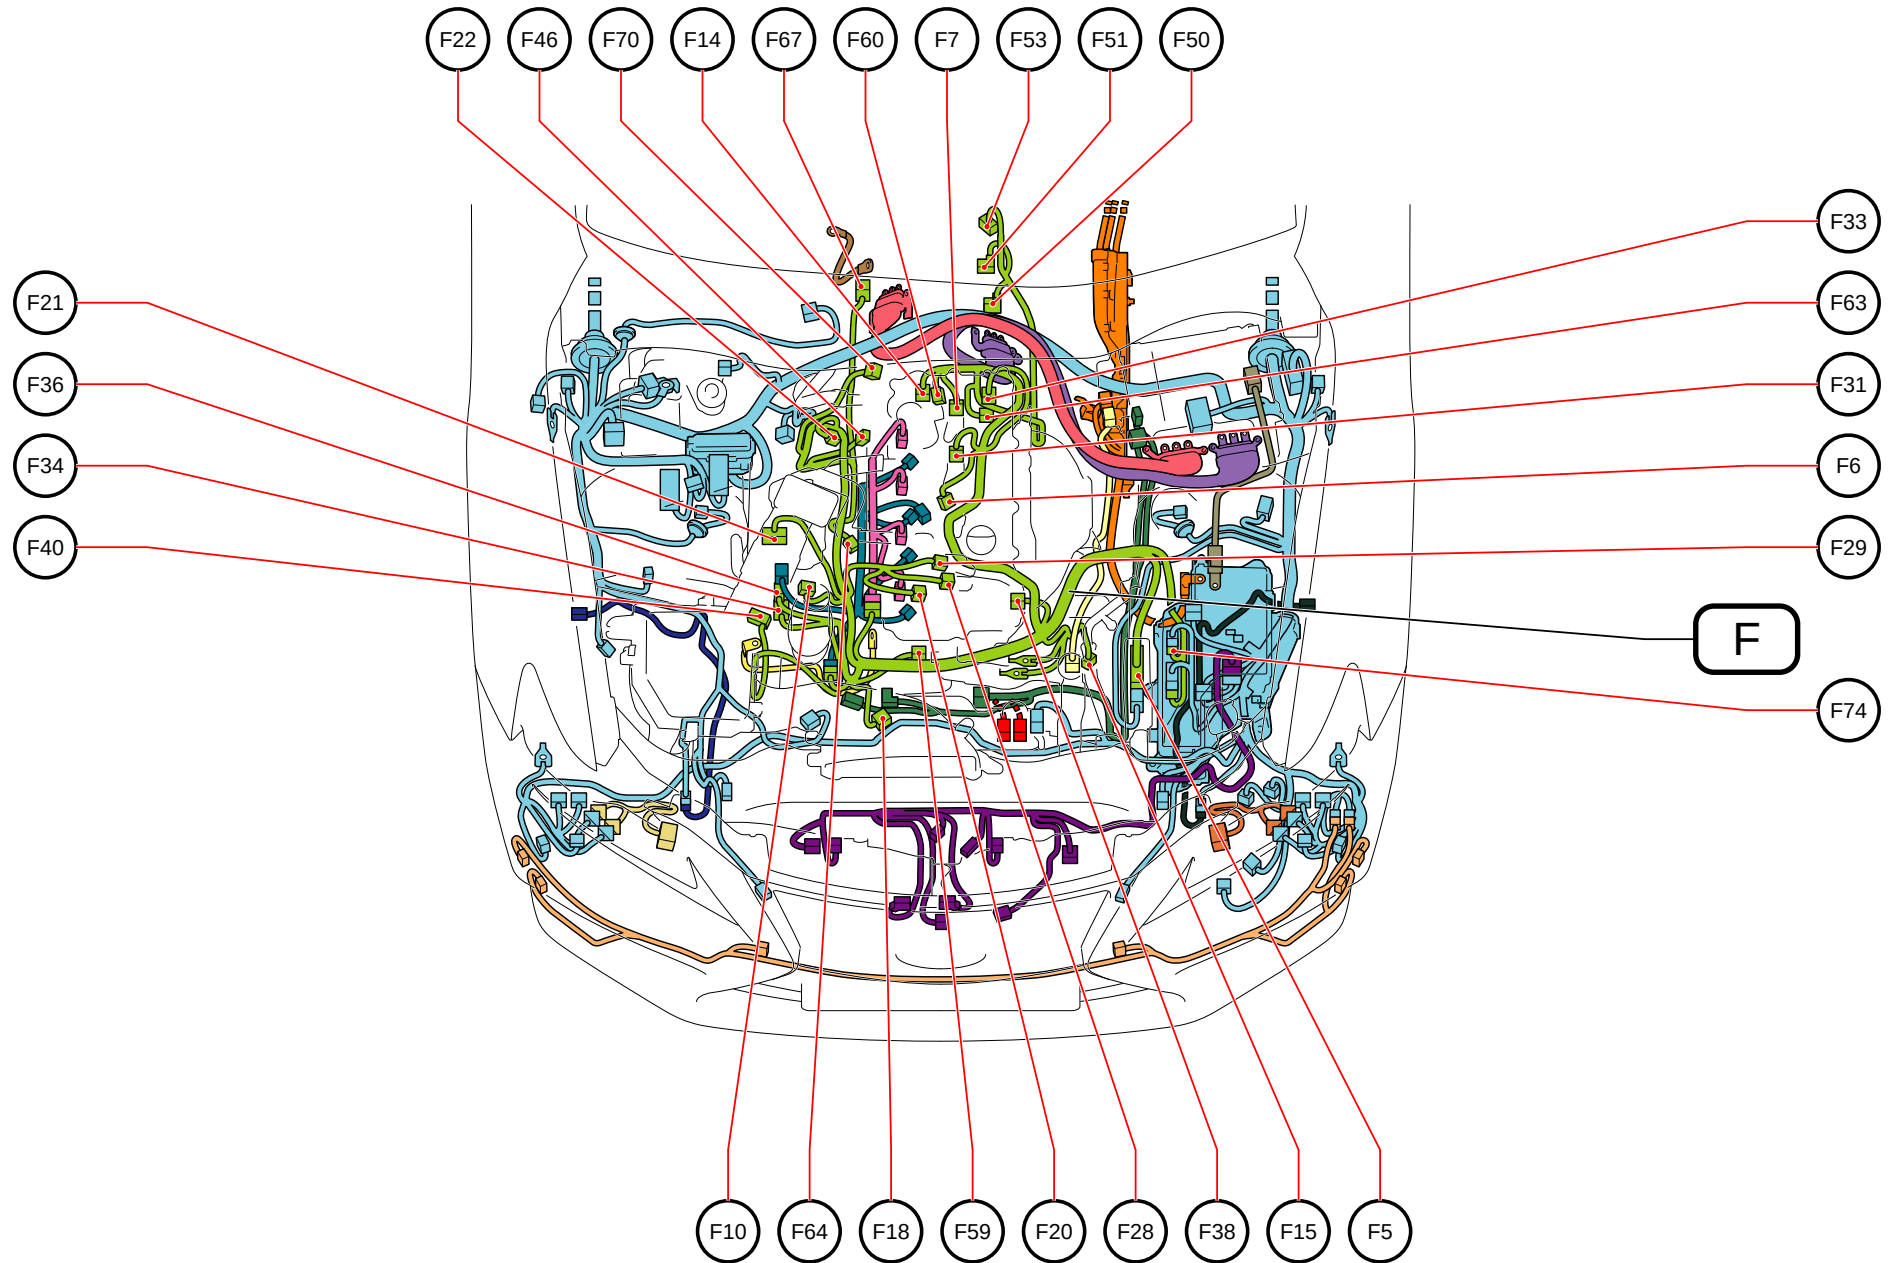


F5	ECM
F6	Ignition Coil Assembly No. 2
F7	Ignition Coil Assembly No. 4
F10	E.F.I. Vacuum Sensor Assembly
F14	VVT Sensor (Bank 1 Intake Side)
F15	Compressor with Motor Assembly
F18	Crank Position Sensor
F20	Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
F21	Throttle Body with Motor Assembly
F22	Purge VSV
F28	Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
F29	Ignition Coil Assembly No. 1
F31	Ignition Coil Assembly No. 3
F33	VVT Sensor (Bank 1 Exhaust Side)
F34	Injector Driver
F36	Injector Driver
F38	Engine Oil Pressure Switch Assembly
F40	Intake Mass Air Flow Meter Sub-Assembly
F46	Fuel Pressure Sensor
F50	Hybrid Vehicle Transmission Assembly
F51	Hybrid Vehicle Transmission Assembly
F53	Oxygen Sensor (Bank 1 Sensor 2)
F59	E.F.I. Engine Coolant Temperature Sensor
F60	Fuel Pump with Seal Sub-Assembly
F63	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
F64	Engine Oil Level Sensor
F67	Shift Lever Position Sensor
F70	EGR Valve Assembly
F74	No. 4 Junction Connector


Position of Parts in Engine Compartment (RHD)

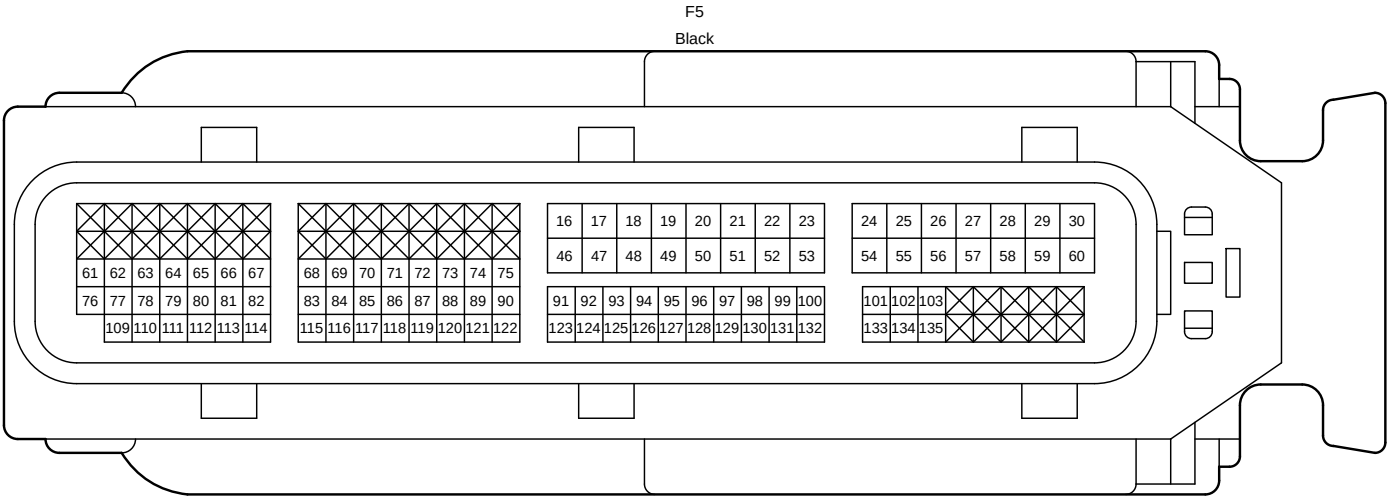


90980-12974

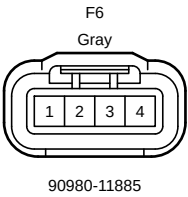


90980-11885

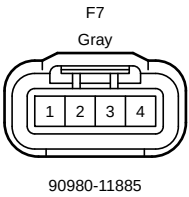


90980-11885

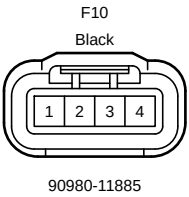


90980-11885

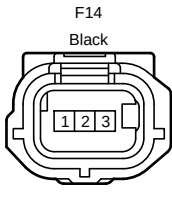

90980-12353

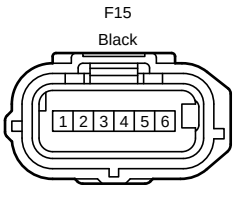


90980-12303

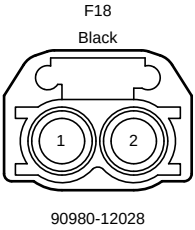


90980-12028



90980-11162

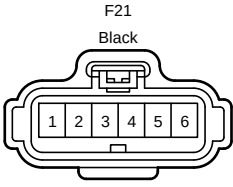


90980-11858

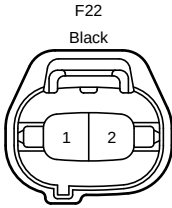


90980-11156




90980-11162

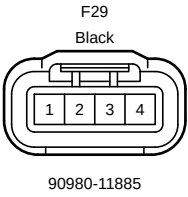


90980-11885

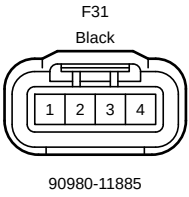


90980-11885

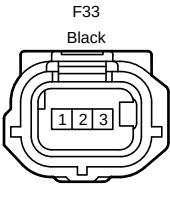


90980-12353

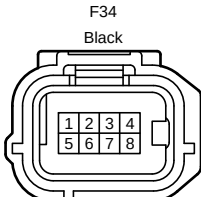


90980-12520

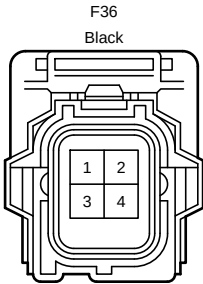


90980-12704

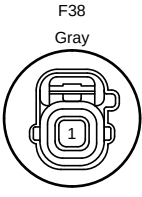


90980-11363

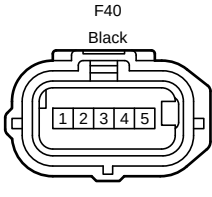

90980-12292

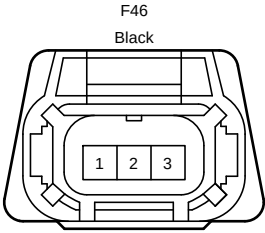

90980-12A19

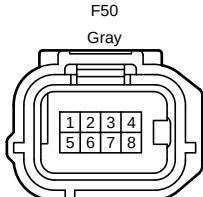

90980-12520

Position of Parts in Engine Compartment (RHD)

