

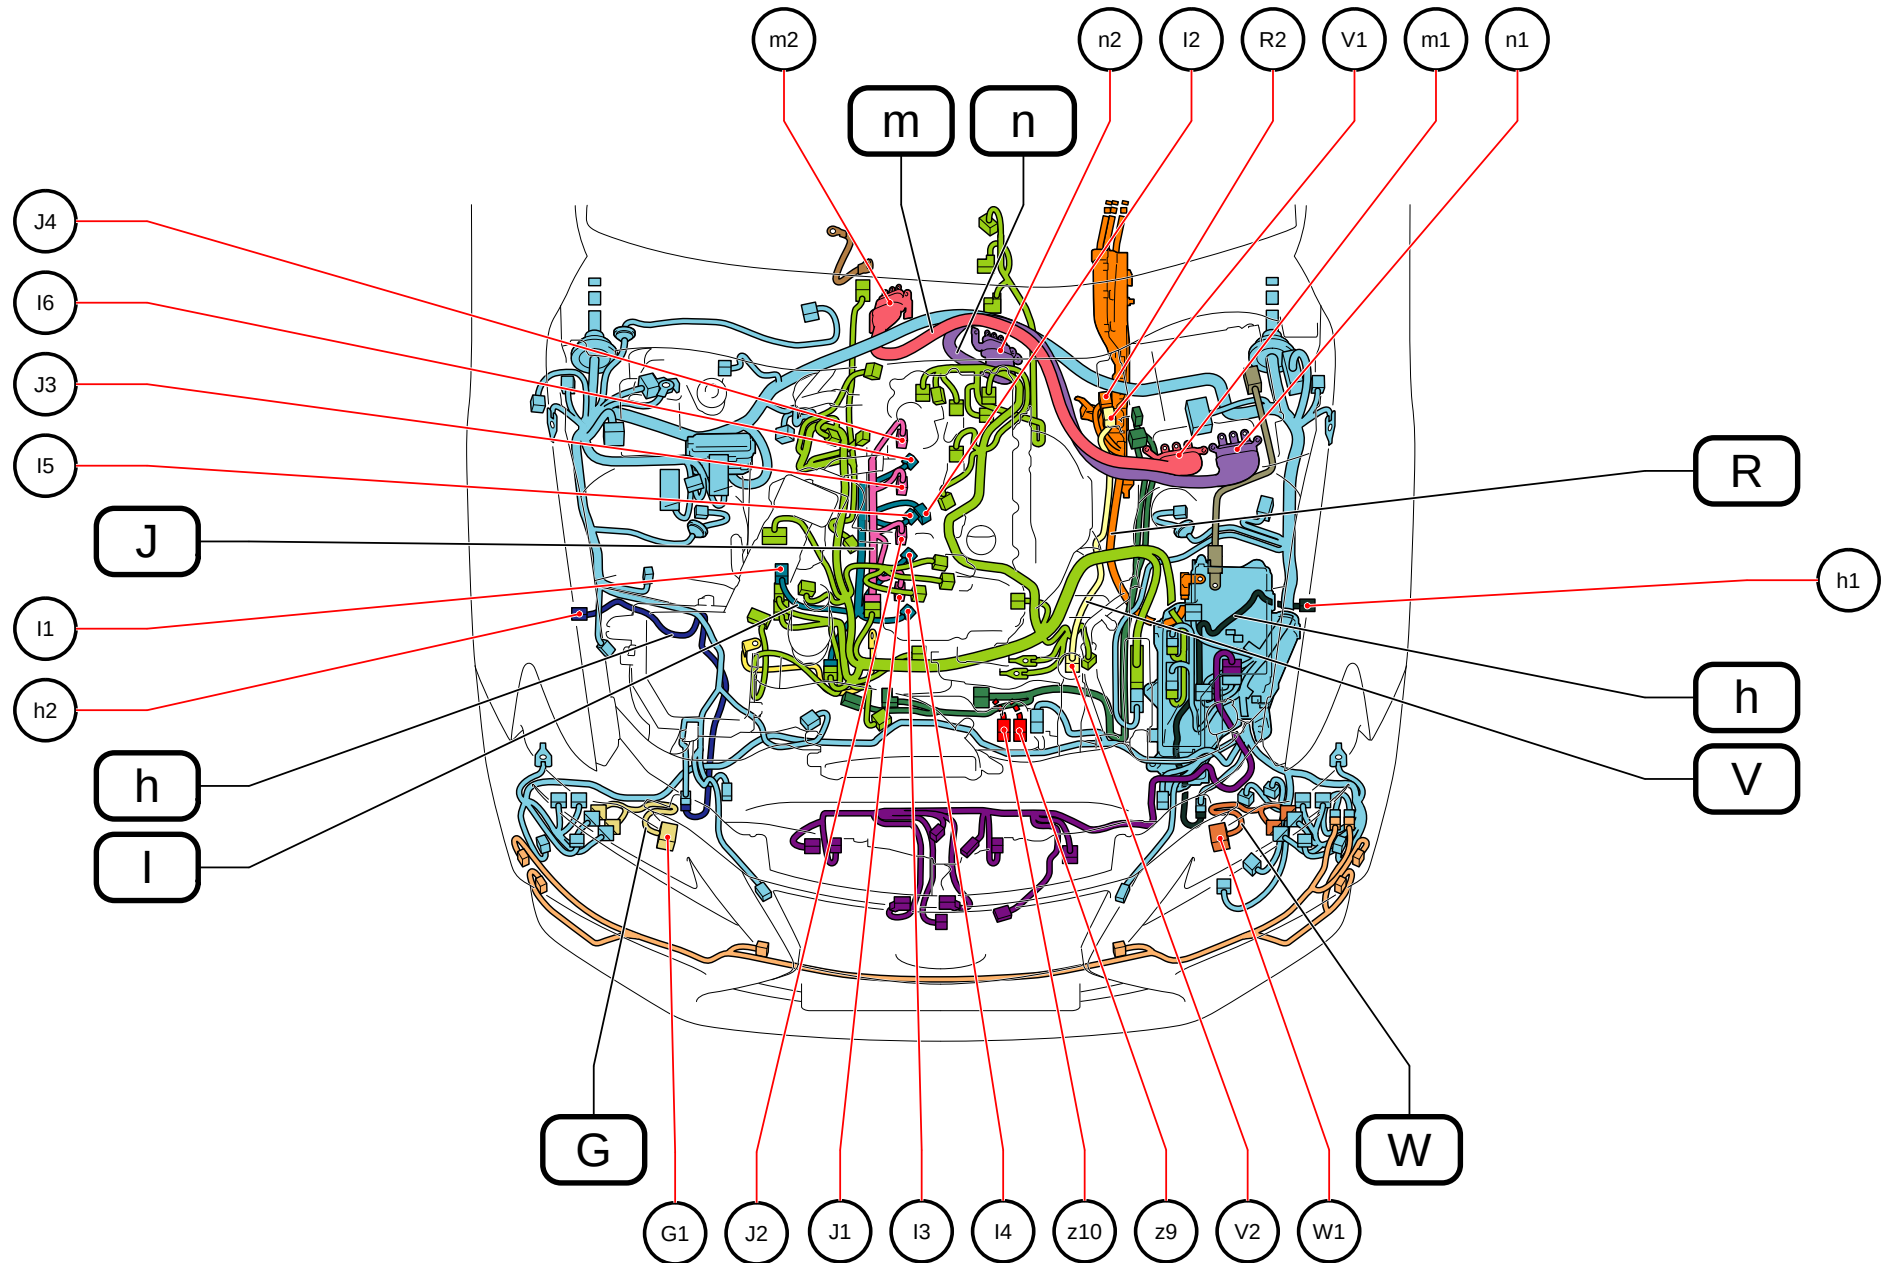
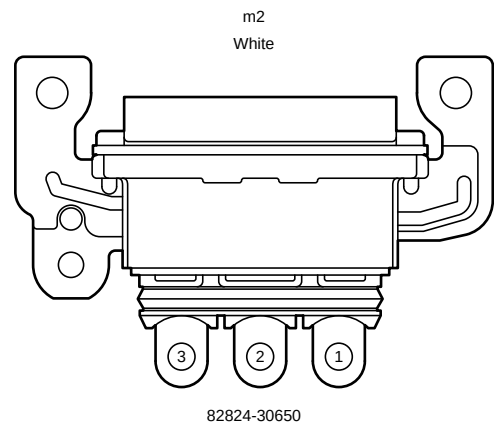
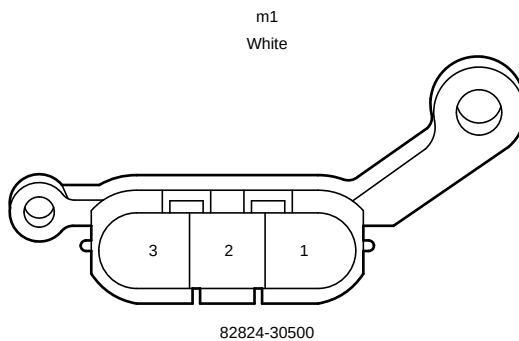
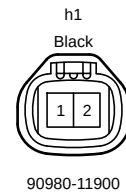
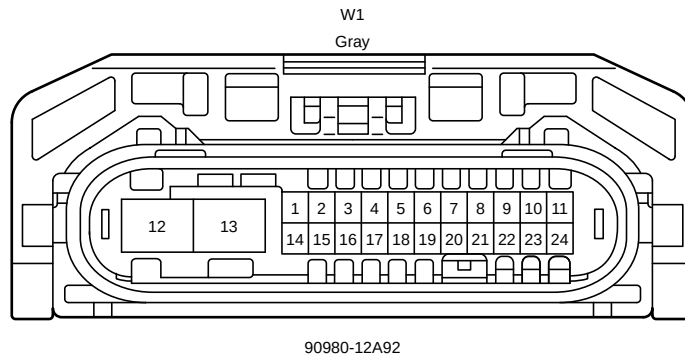
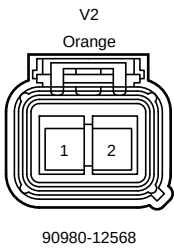
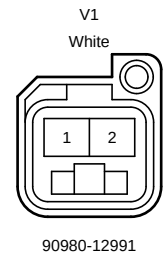
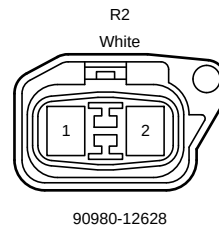
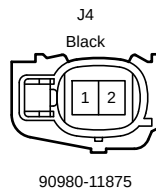
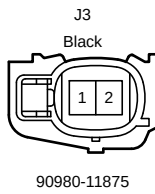
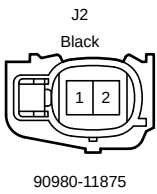
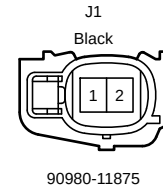
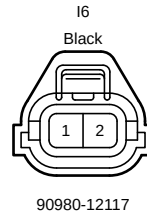
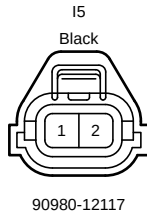
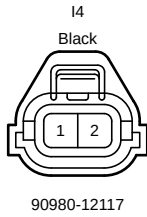
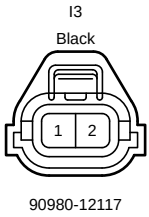
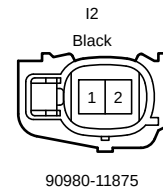


Position of Parts in Engine Compartment (RHD)

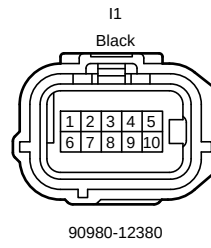

G1	Headlight Light Control ECU RH (Headlight Assembly RH)
I1	Injector Driver
I2	Knock Control Sensor
I3	Fuel Injector Assembly No. 1 (for Direct Injection)
I4	Fuel Injector Assembly No. 2 (for Direct Injection)
I5	Fuel Injector Assembly No. 3 (for Direct Injection)
I6	Fuel Injector Assembly No. 4 (for Direct Injection)
J1	Fuel Injector Assembly No. 1 (for Port Injection)
J2	Fuel Injector Assembly No. 2 (for Port Injection)
J3	Fuel Injector Assembly No. 3 (for Port Injection)
J4	Fuel Injector Assembly No. 4 (for Port Injection)
R2	Inverter with Converter Assembly
V1	Inverter with Converter Assembly
V2	Compressor with Motor Assembly
W1	Headlight Light Control ECU LH (Headlight Assembly LH)
h1	Front Speed Sensor LH
h2	Front Speed Sensor RH
m1	Inverter with Converter Assembly
m2	Hybrid Vehicle Transmission Assembly
n1	Inverter with Converter Assembly
n2	Hybrid Vehicle Transmission Assembly
z9	Cooling Fan ECU , No. 2 Cooling Fan Motor
z10	Cooling Fan ECU , Cooling Fan Motor

Position of Parts in Engine Compartment (RHD)

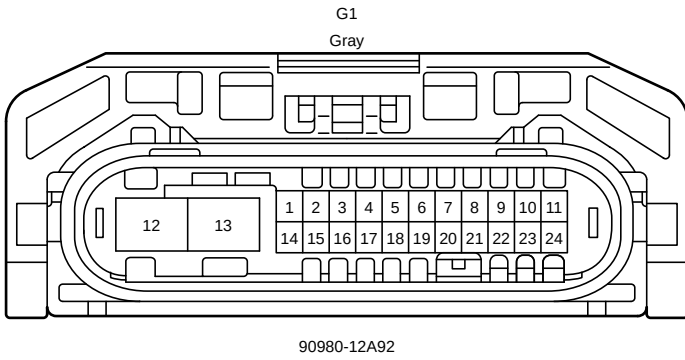

Position of Parts in Engine Compartment (RHD)

