

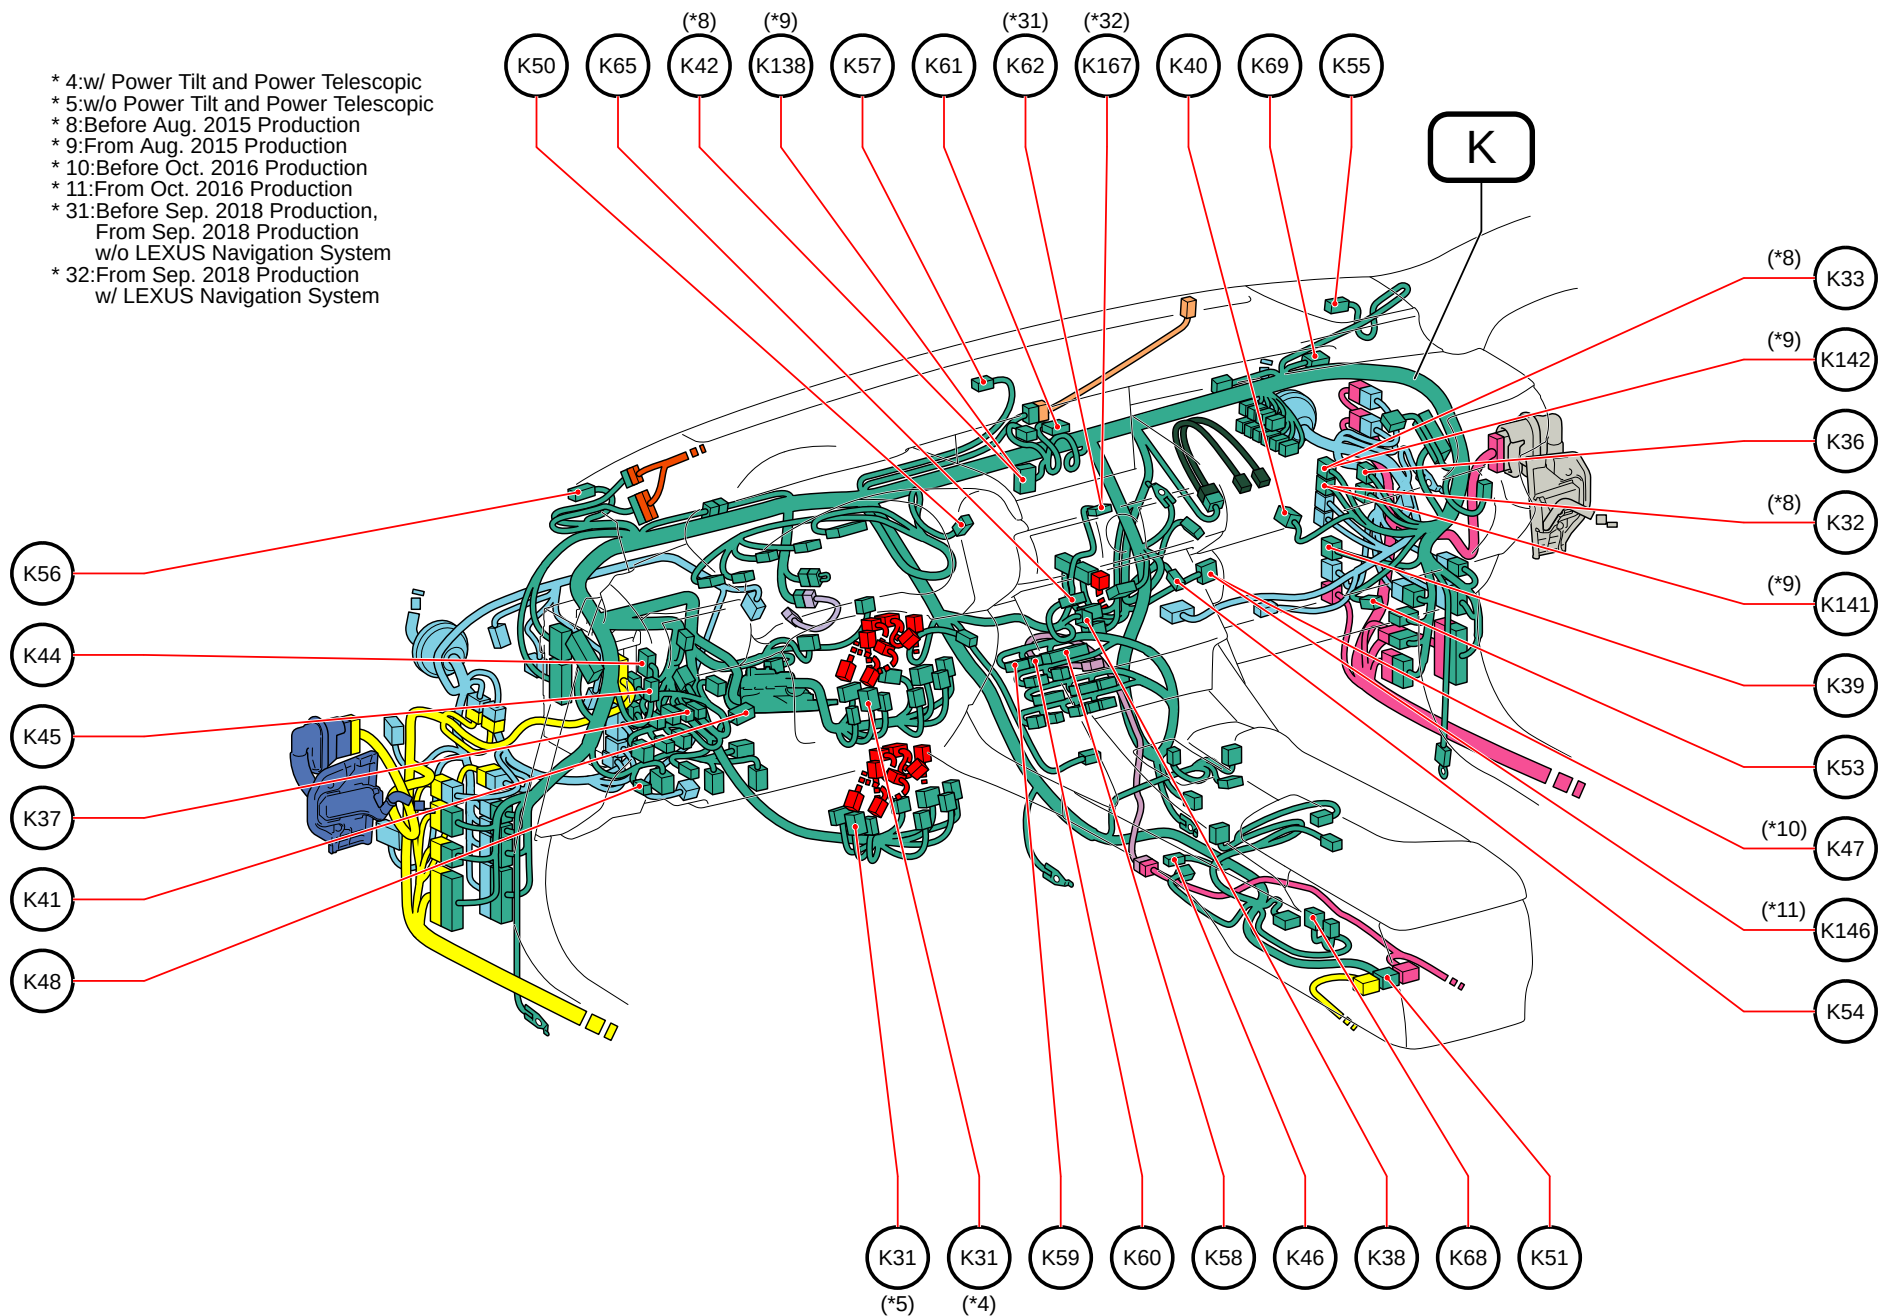
 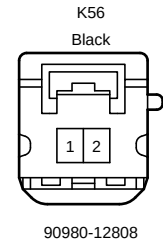
 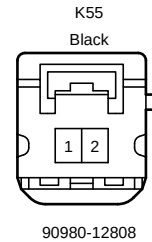


 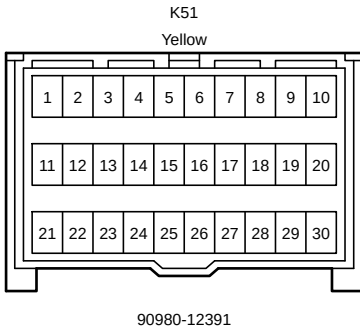
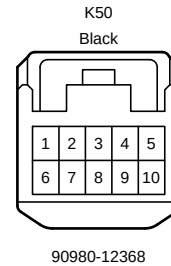

 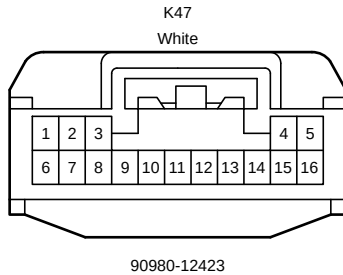
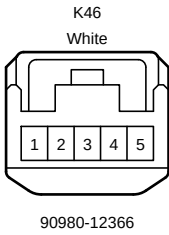

 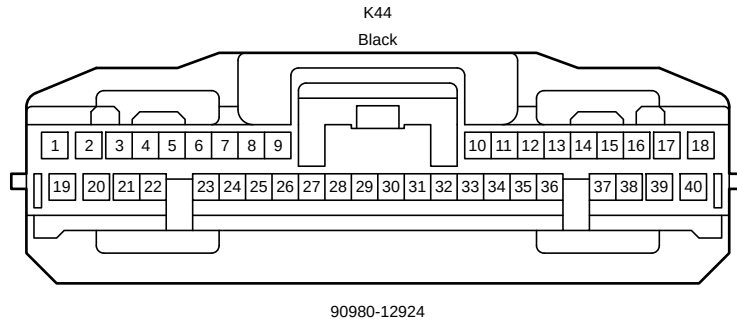
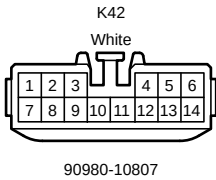

 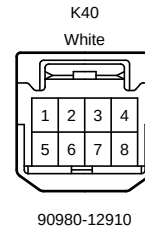
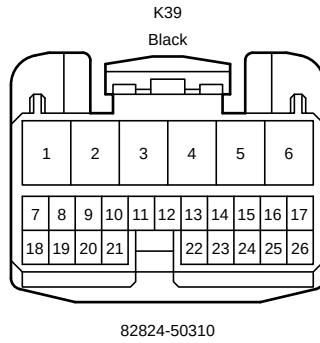

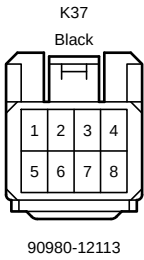
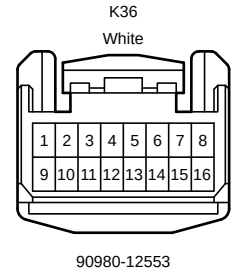
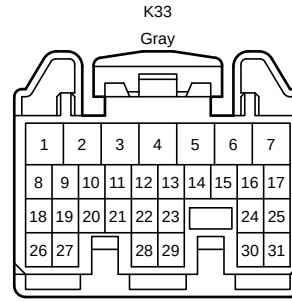


Position of Parts in Instrument Panel (LHD)

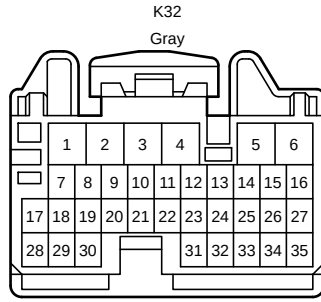

K31	Spiral Cable with Sensor Sub-Assembly
K32	Power Management Control ECU
K33	Power Management Control ECU
K36	Stereo Component Equalizer Assembly
K37	Vehicle Sound Switch
K38	No. 1 Speaker with Box Assembly
K39	Absorber Control ECU
K40	Brake Control Power Supply Assembly
K41	Skid Control Buzzer Assembly
K42	Double Lock Door Control Relay Assembly
K44	Clearance Warning ECU Assembly
K45	No. 1 Clearance Warning Buzzer
K46	Shift Lock Control ECU (Transmission Floor Shift Assembly)
K47	Network Gateway ECU
K48	Lower No. 1 Instrument Panel Airbag Assembly
K50	Power Switch
K51	Airbag Sensor Assembly
K53	Lower No. 2 Instrument Panel Airbag Assembly
K54	Glove Box Light Assembly
K55	Front No. 2 Speaker Assembly RH
K56	Front No. 2 Speaker Assembly LH
K57	Front No. 3 Speaker Assembly
K58	Radio Receiver Assembly
K59	Radio Receiver Assembly
K60	Radio Receiver Assembly
K61	Multi-Display Assembly
K62	Clock Assembly
K65	A/C Control Assembly
K68	No. 1 Stereo Jack Adapter Assembly
K69	Radio Setting Condenser
K138	Double Lock Door Control Relay Assembly
K141	Hybrid Vehicle Control ECU
K142	Hybrid Vehicle Control ECU
K146	Network Gateway ECU
K167	Clock Assembly

Position of Parts in Instrument Panel (LHD)

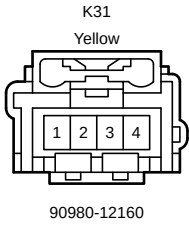

Position of Parts in Instrument Panel (LHD)

