

 
F RELAY LOCATIONS

Junction Connector


Right Kick Panel (See Page 20)

(CAN RH)


J96
Junction
Connector







J94
Junction
Connector

 


J82
Junction
Connector

 

J81
Junction
Connector

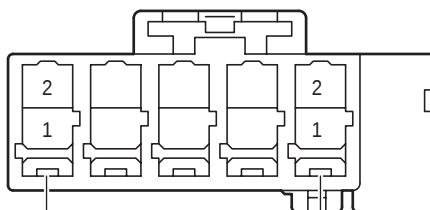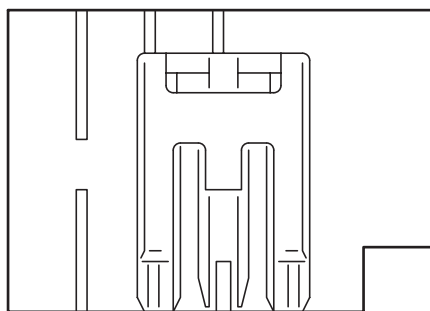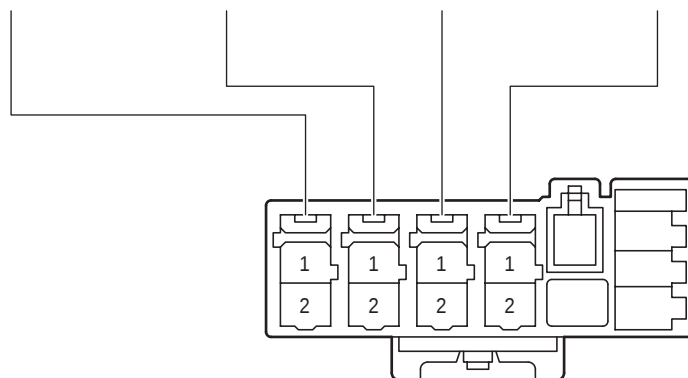 

J97
Junction
Connector

 

J84
Junction
Connector

