

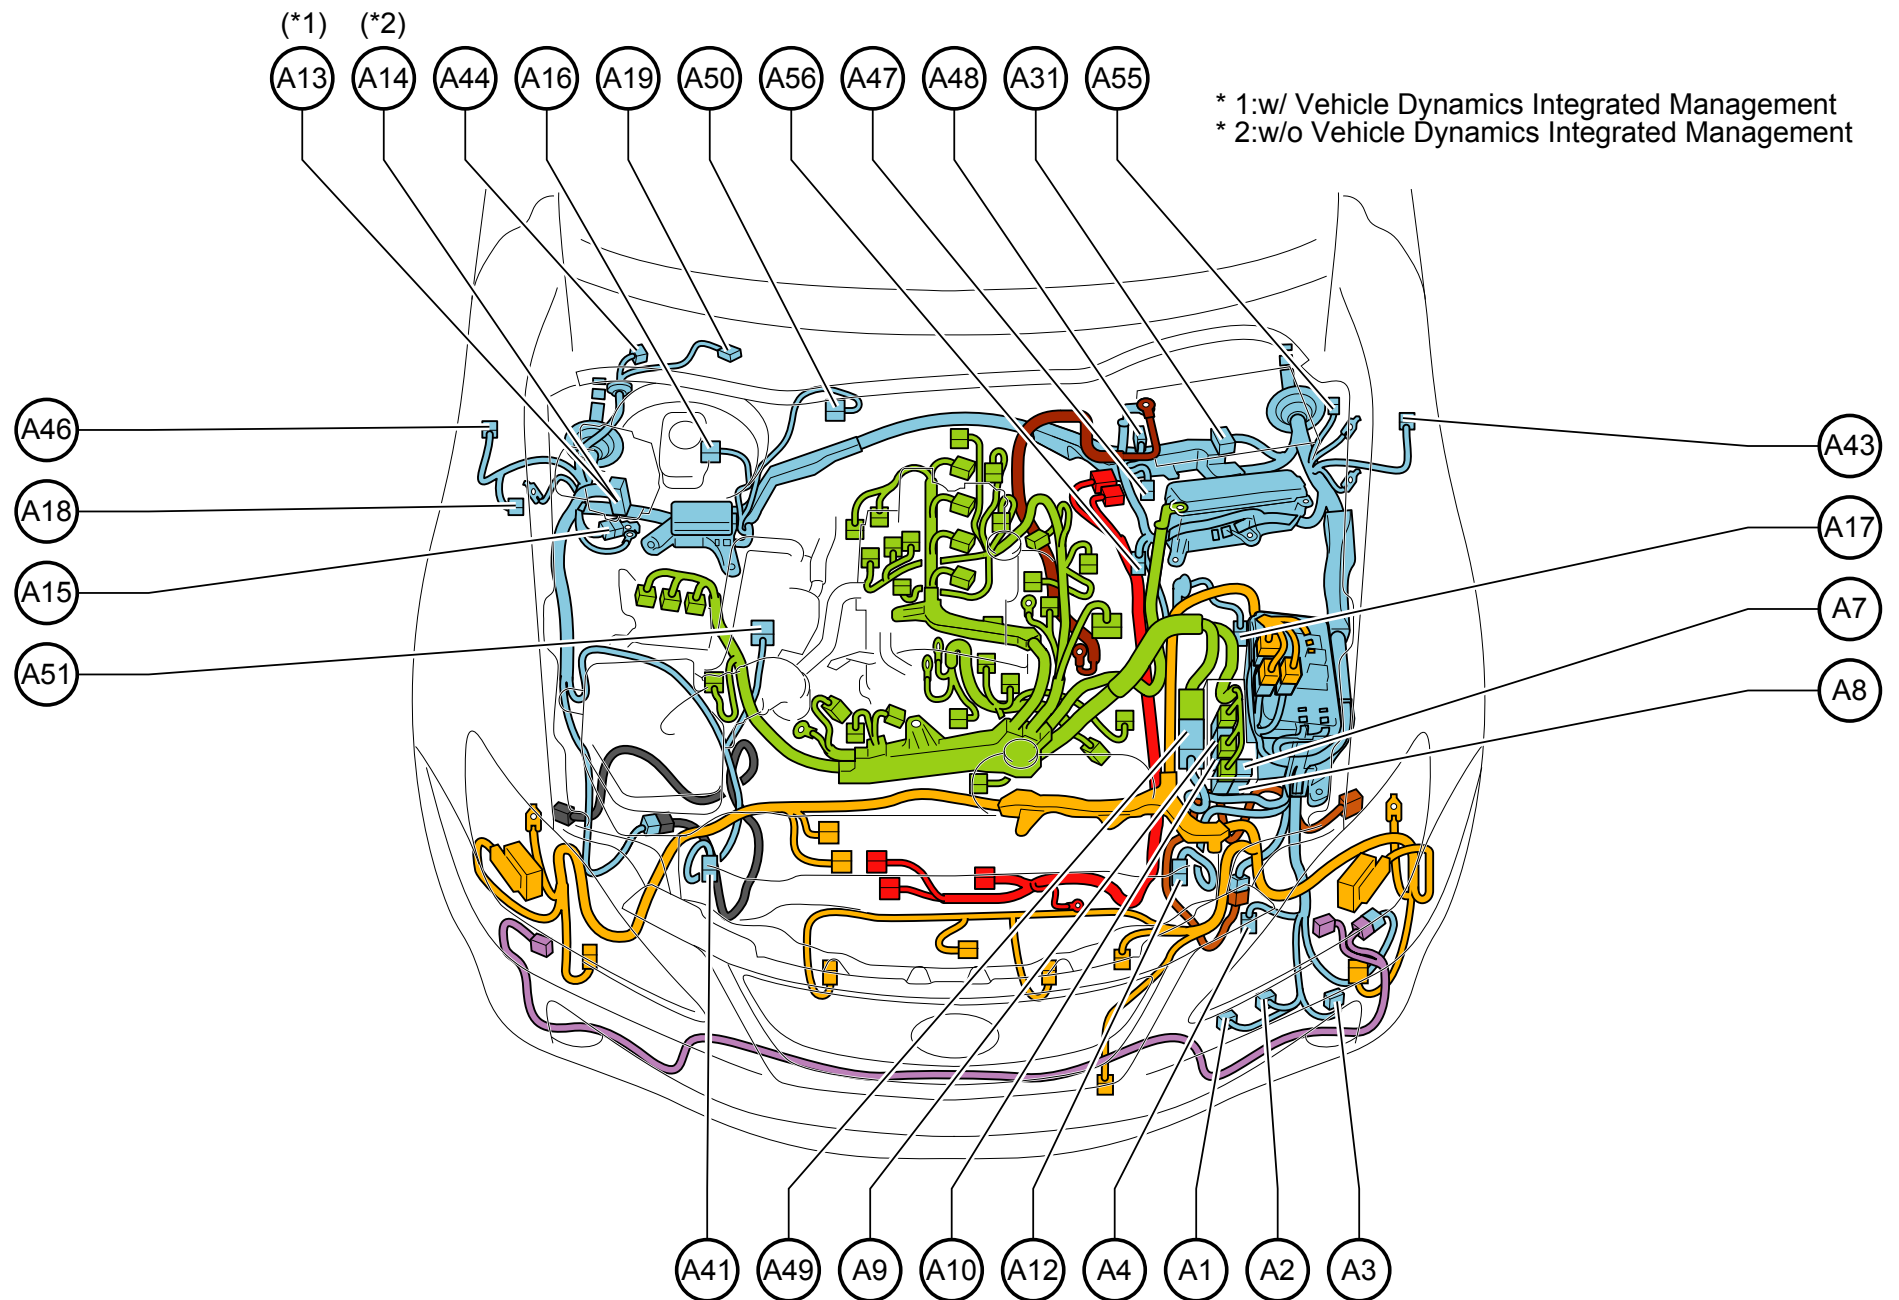
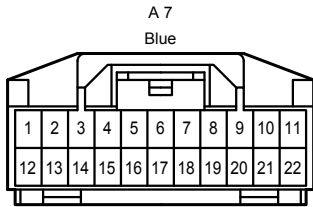


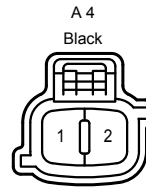


- A 1 Water Level Warning SW
- A 2 Headlamp Cleaner Motor
- A 3 Headlamp Cleaner Control Relay
- A 4 Windshield Washer Motor
- A 7 Junction Connector
- A 7 Junction Connector
- A 8 Junction Connector
- A 8 Junction Connector
- A 9 Junction Connector
- A 10 Junction Connector
- A 12 Airbag Sensor (Front LH)
- A 13 Brake Actuator
- A 14 Skid Control ECU with Actuator
- A 15 Junction Connector
- A 16 Brake Fluid Level Warning SW
- A 17 Height Control Sensor (Front)
- A 18 Wireless Door Lock Buzzer
- A 19 Windshield Wiper Motor
- A 31 Power Steering ECU
- A 41 Airbag Sensor (Front RH)
- A 43 Turn Signal Lamp (Front Side LH)
- A 44 Front Wiper Deicer
- A 46 Turn Signal Lamp (Front Side RH)
- A 47 Battery Thermometer Sensor
- A 48 Battery Current Sensor
- A 49 Engine ECU
- A 50 Differential Pressure Sensor
- A 51 Combustion Heater Assembly
- A 55 Glow Plug Relay
- A 56 A/C Pressure Sensor (Low)


Position of Parts in Engine Compartment <RHD 2AD-FHV>

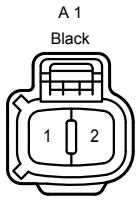


(4GR-FSE)

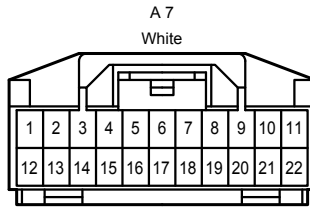



(2AD-FHV)

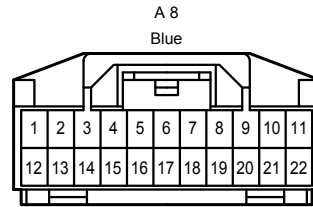





(4GR-FSE)

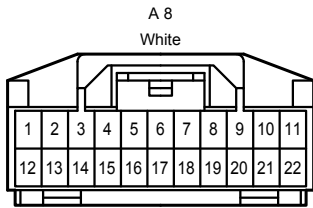

(2AD-FHV)

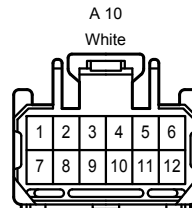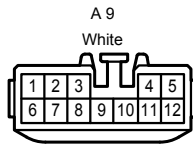

(2AD-FHV)

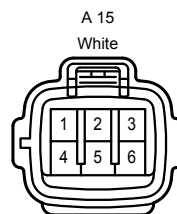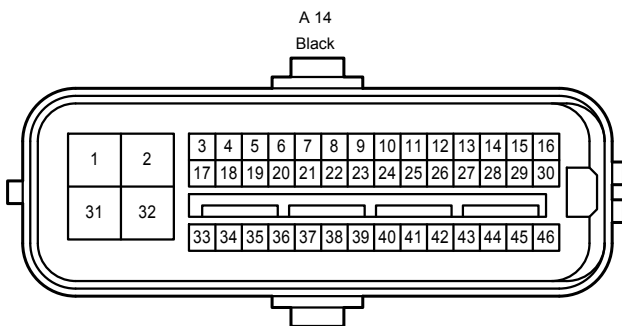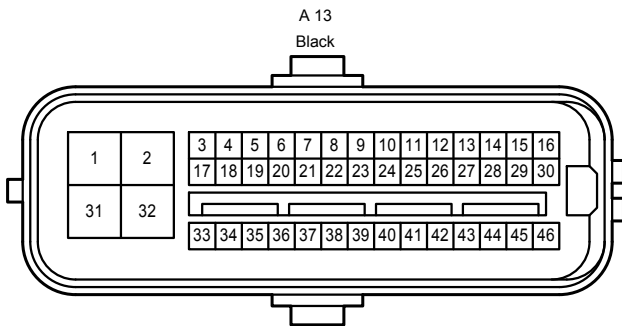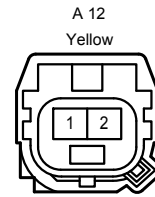

Position of Parts in Engine Compartment <RHD 2AD-FHV>

