


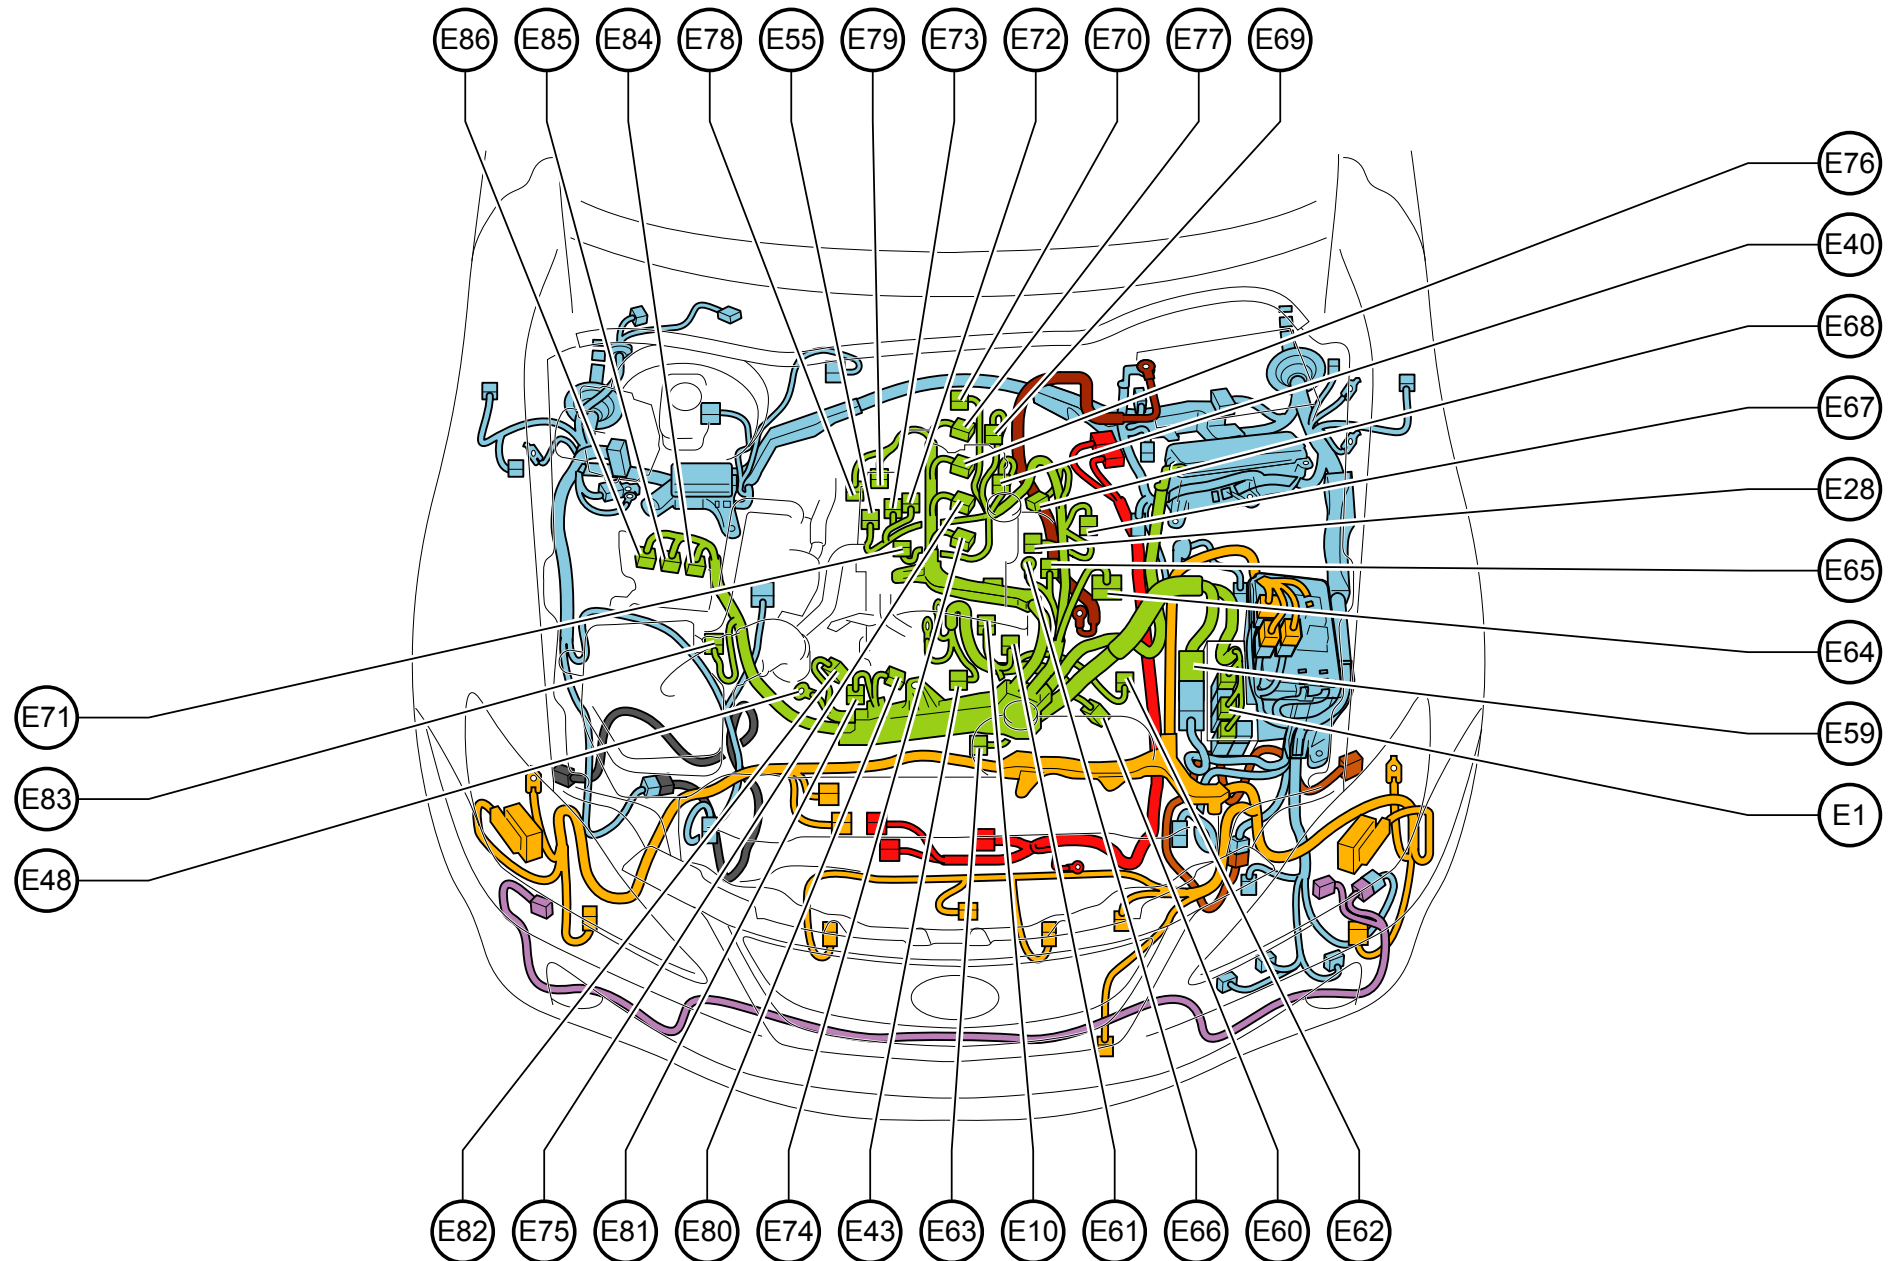

- E 1 Junction Connector
- E 10 Starter
- E 28 Engine Oil Pressure SW
- E 40 Water Temp. Sensor
- E 43 Engine Oil Level Sensor
- E 48 Alternator
- E 55 Back-Up Lamp SW
- E 59 Engine ECU
- E 60 Inlet Air Temp. Sensor
- E 61 Diesel Throttle Body Assembly
- E 62 Diesel Throttle Body Assembly
- E 63 A/C Compressor
- E 64 EGR Valve Position Sensor
- E 65 Fuel Pressure Sensor
- E 66 Glow Plug
- E 67 Turbo Pressure Sensor
- E 68 Pressure Discharge Valve
- E 69 Fuel Temp. Sensor
- E 70 Suction Control Valve
- E 71 Exhaust Fuel Addition Injector
- E 72 Exhaust Gas Temperature Sensor (Downstream)
- E 73 Exhaust Gas Temperature Sensor (Upstream)
- E 74 Fuel Injector (for Direct Injection No.1)
- E 75 Fuel Injector (for Direct Injection No.2)
- E 76 Fuel Injector (for Direct Injection No.3)
- E 77 Fuel Injector (for Direct Injection No.4)
- E 78 VSV (EGR)
- E 79 VRV (for Turbocharger Control)
- E 80 Camshaft Position Sensor
- E 81 Crankshaft Position Sensor
- E 82 Alternator
- E 83 Air Flow Meter
- E 84 Injector Driver (EDU)
- E 85 Injector Driver (EDU)
- E 86 Injector Driver (EDU)

Position of Parts in Engine Compartment <RHD 2AD-FHV>

