

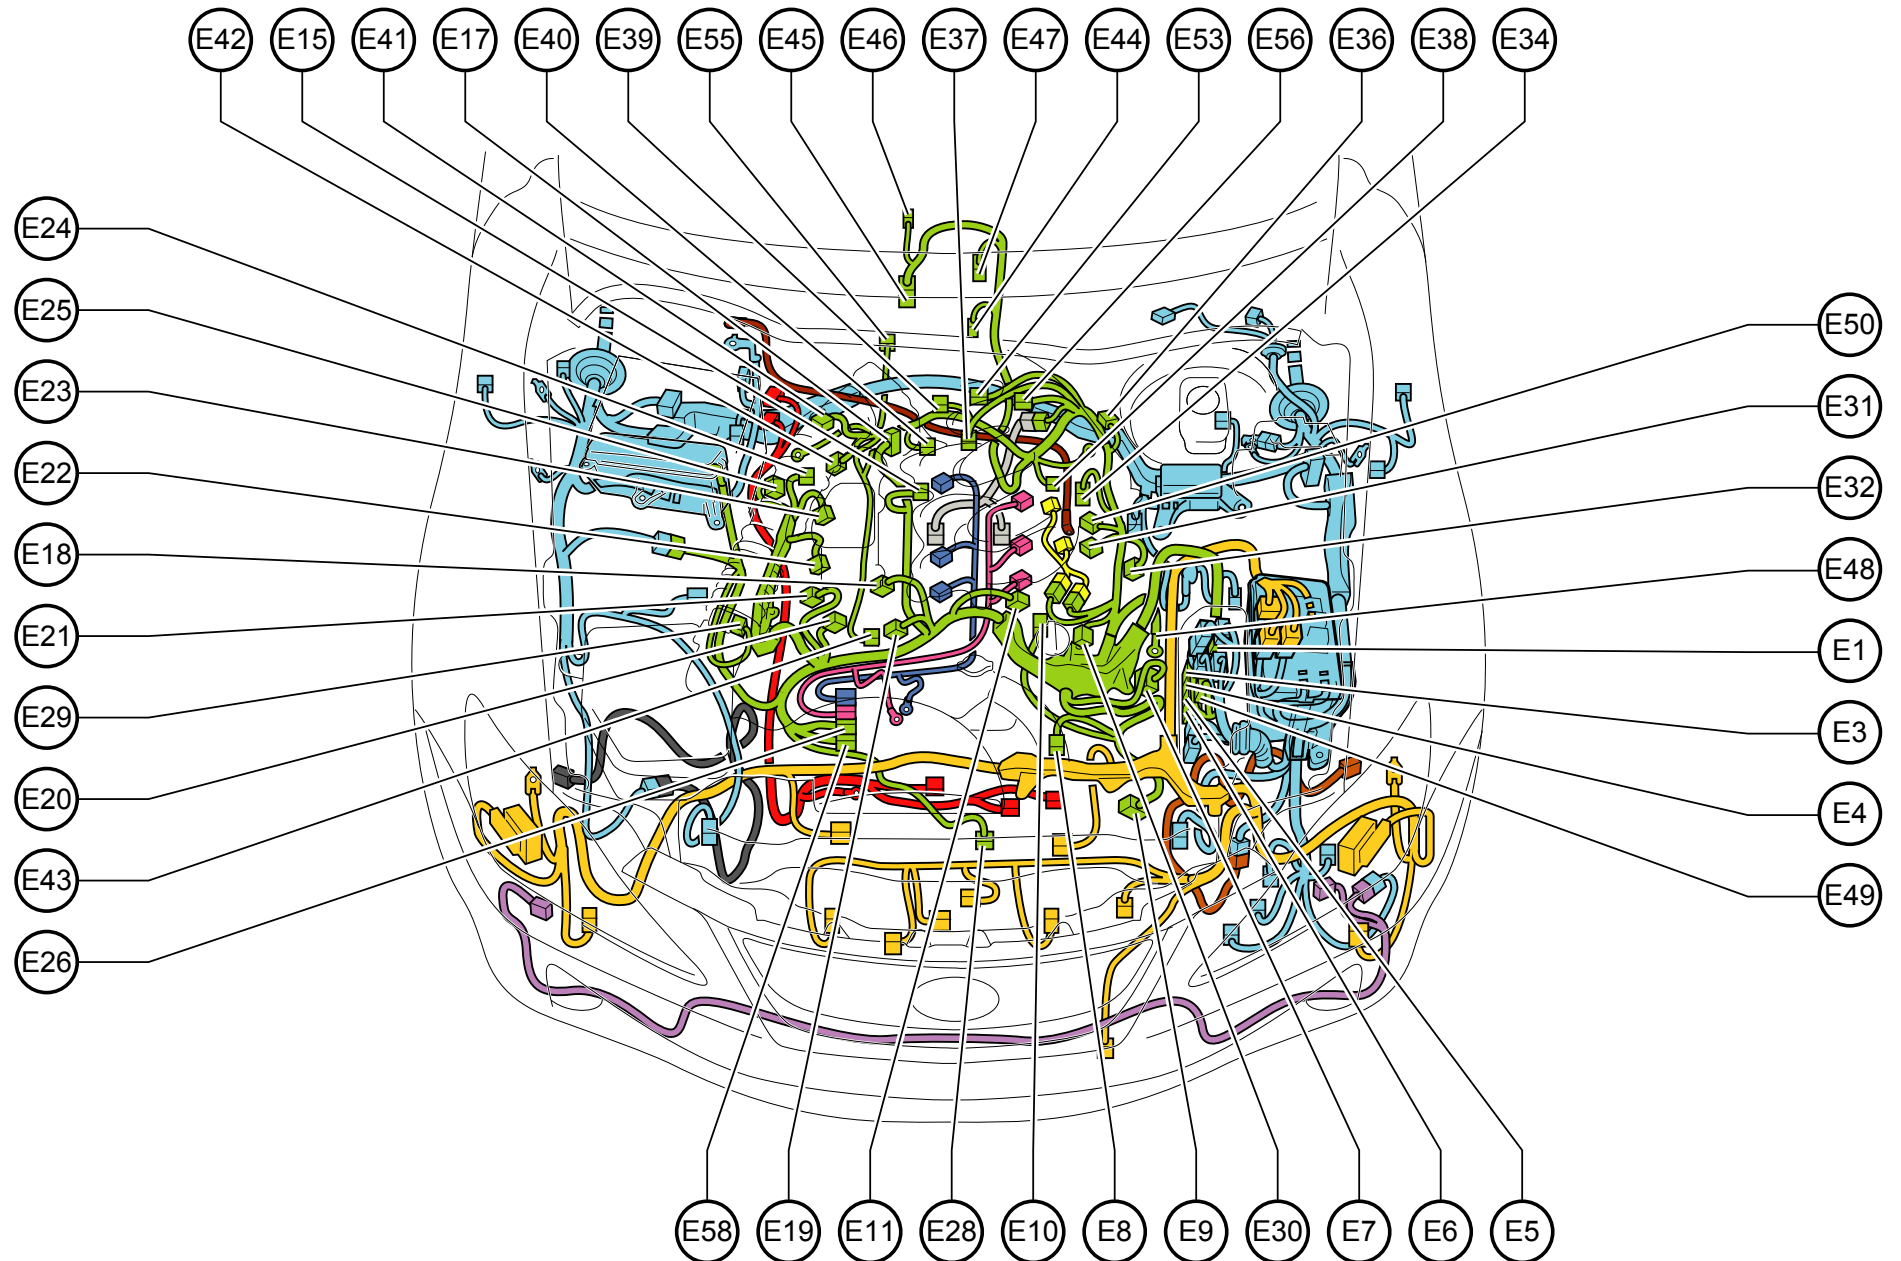
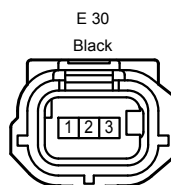
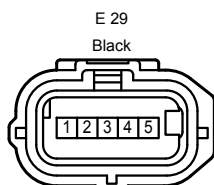
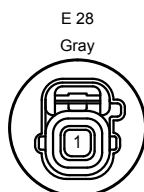
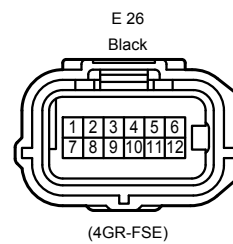
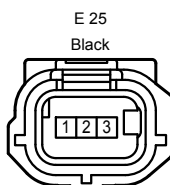
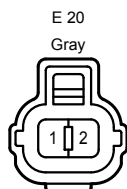
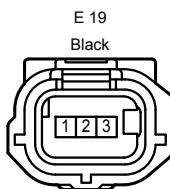
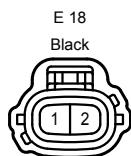
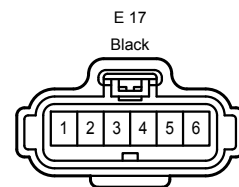
 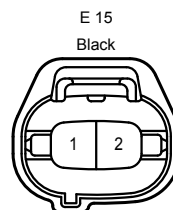
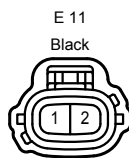

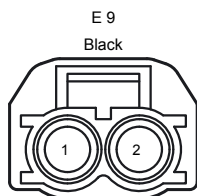
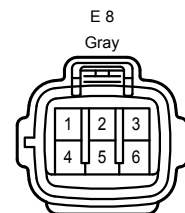
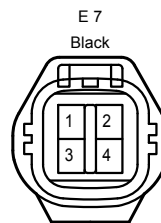
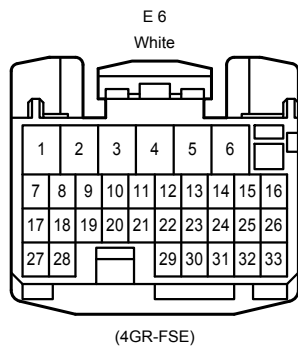
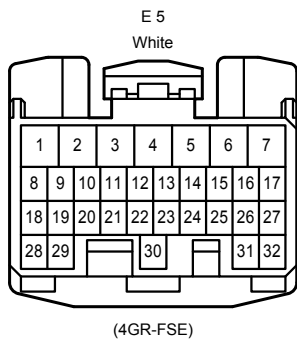
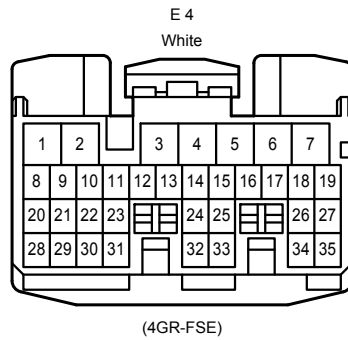


Position of Parts in Engine Compartment <LHD 4GR-FSE>

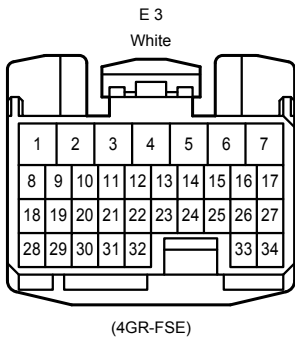

- E 1 Junction Connector
- E 3 Engine ECU
- E 4 Engine ECU
- E 5 Engine ECU
- E 6 Engine ECU
- E 7 Alternator
- E 8 A/C Compressor
- E 9 Crankshaft Position Sensor
- E 10 Starter
- E 11 Camshaft Timing Oil Control Valve (LH Intake Side)
- E 15 VSV (EVAP)
- E 17 Throttle Body Assembly
- E 18 Camshaft Timing Oil Control Valve (RH Intake Side)
- E 19 VVT Sensor (Bank 1 Intake Side)
- E 20 Noise Filter (Ignition RH)
- E 21 Camshaft Timing Oil Control Valve (RH Exhaust Side)
- E 22 Ignition Coil (No.1)
- E 23 Ignition Coil (No.3)
- E 24 Ignition Coil (No.5)
- E 25 VVT Sensor (Bank 1 Exhaust Side)
- E 26 Injector Driver (EDU)
- E 28 Engine Oil Pressure SW
- E 29 Air Flow Meter
- E 30 VVT Sensor (Bank 2 Intake Side)
- E 31 Camshaft Timing Oil Control Valve (LH Exhaust Side)
- E 32 Ignition Coil (No.2)
- E 34 VVT Sensor (Bank 2 Exhaust Side)
- E 36 Noise Filter (Ignition LH)
- E 37 Fuel Pressure Sensor
- E 38 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- E 39 Combustion Heater Glow Plug
- E 40 Water Temp. Sensor
- E 41 Spill Control Valve
- E 42 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- E 43 Engine Oil Level Sensor
- E 44 Transmission Revolution Sensor (Turbine)
- E 45 Park/Neutral Position SW
- E 46 Transmission Revolution Sensor (Counter Gear)
- E 47 ECT Solenoid
- E 48 Alternator
- E 49 Junction Connector
- E 50 VSV (ACIS)
- E 53 Swirl Control Valve Actuator
- E 55 Back-Up Lamp SW
- E 56 Swirl Control Valve Sensor
- E 58 Injector Driver (EDU)

Position of Parts in Engine Compartment <LHD 4GR-FSE>

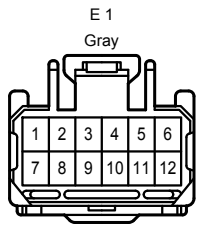

Position of Parts in Engine Compartment <LHD 4GR-FSE>

