


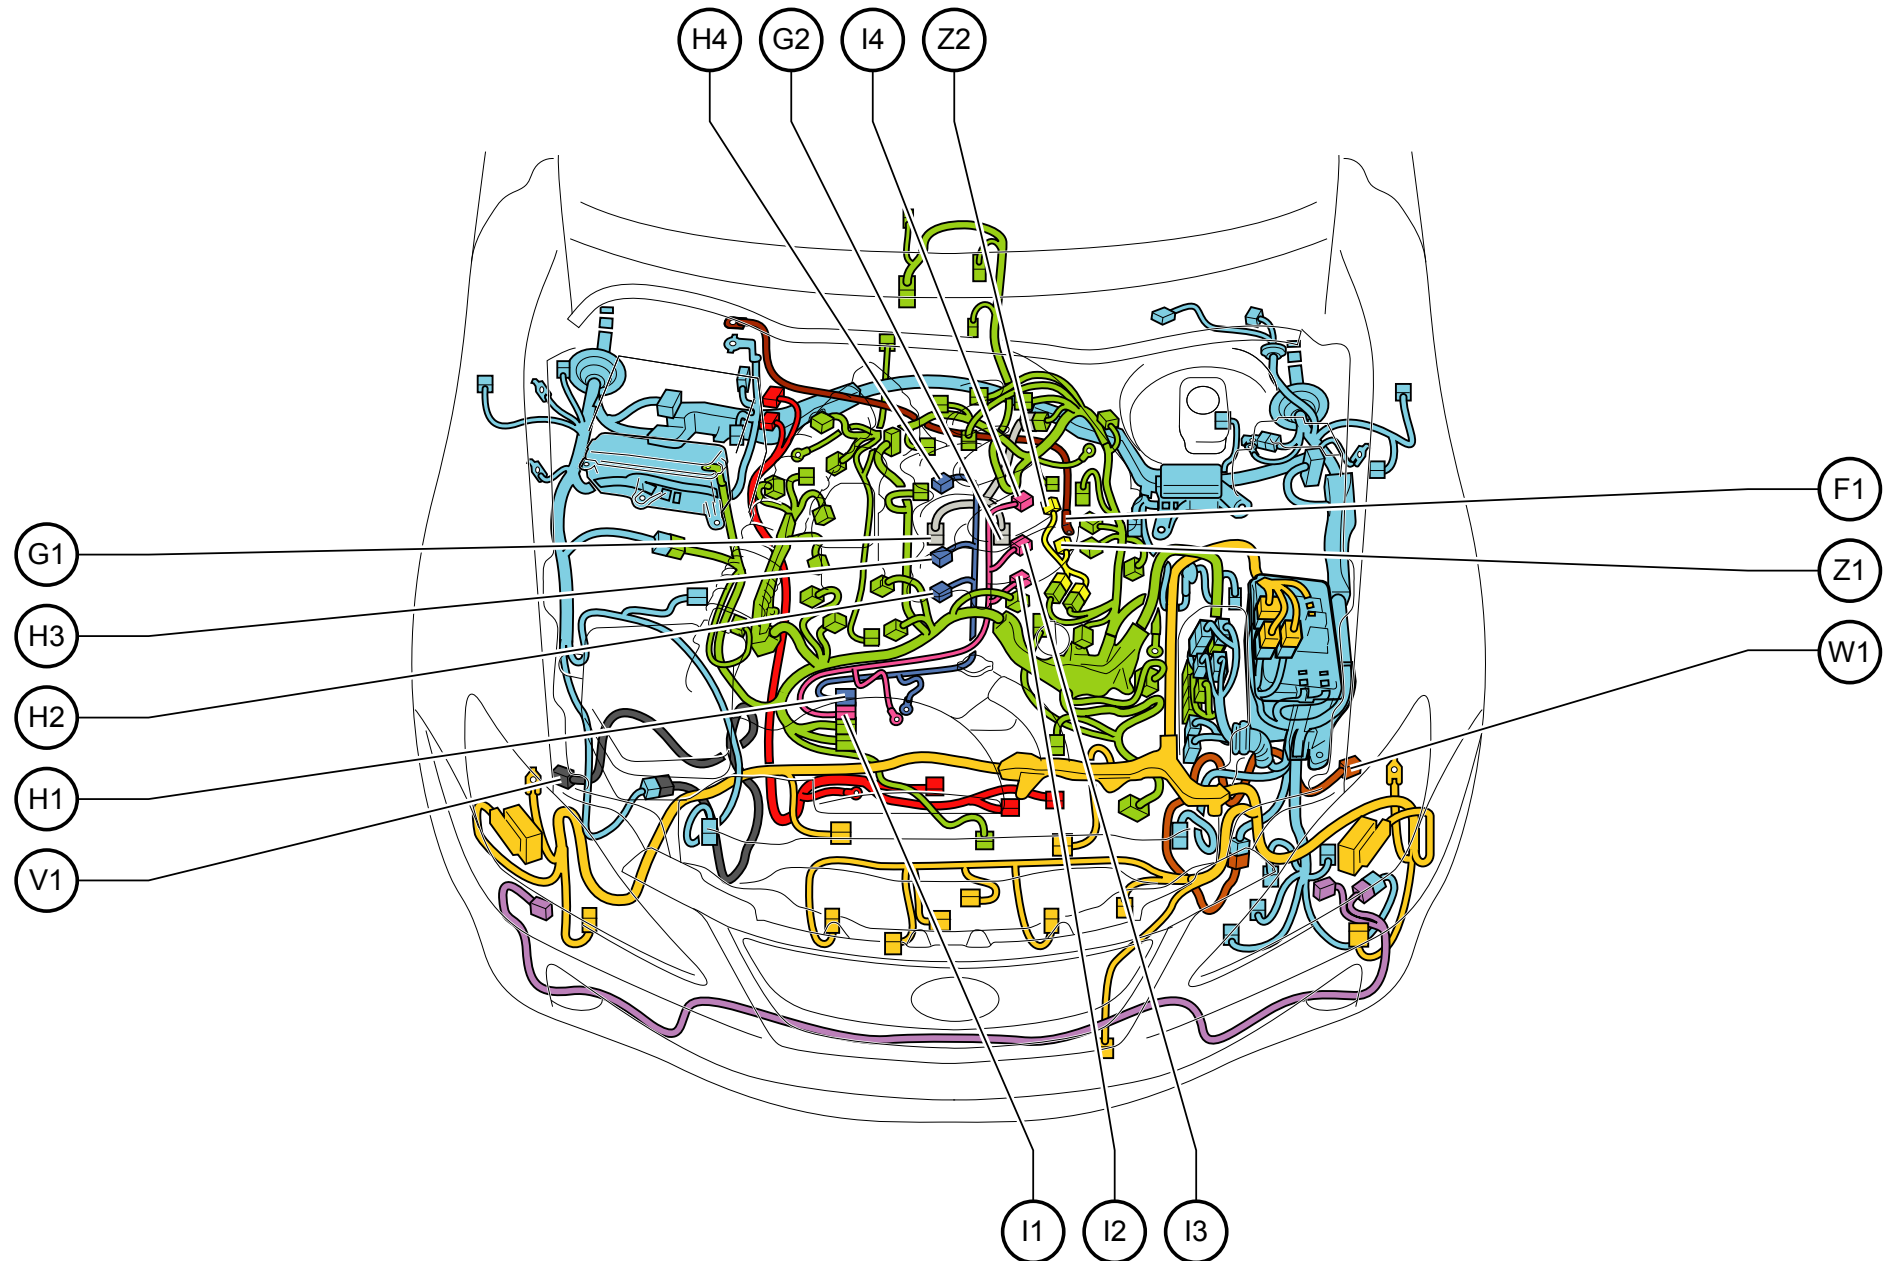

- F 1 Starter
  
- G 1 Knock Control Sensor (Bank 1)
- G 2 Knock Control Sensor (Bank 2)
  
- H 1 Injector Driver (EDU)
- H 2 Fuel Injector (for Direct Injection No.1)
- H 3 Fuel Injector (for Direct Injection No.3)
- H 4 Fuel Injector (for Direct Injection No.5)
  
- I 1 Injector Driver (EDU)
- I 2 Fuel Injector (for Direct Injection No.2)
- I 3 Fuel Injector (for Direct Injection No.4)
- I 4 Fuel Injector (for Direct Injection No.6)
  
- V 1 Speed Sensor (Front RH)
  
- W 1 Speed Sensor (Front LH)
  
- Z 1 Ignition Coil (No.4)
- Z 2 Ignition Coil (No.6)

