


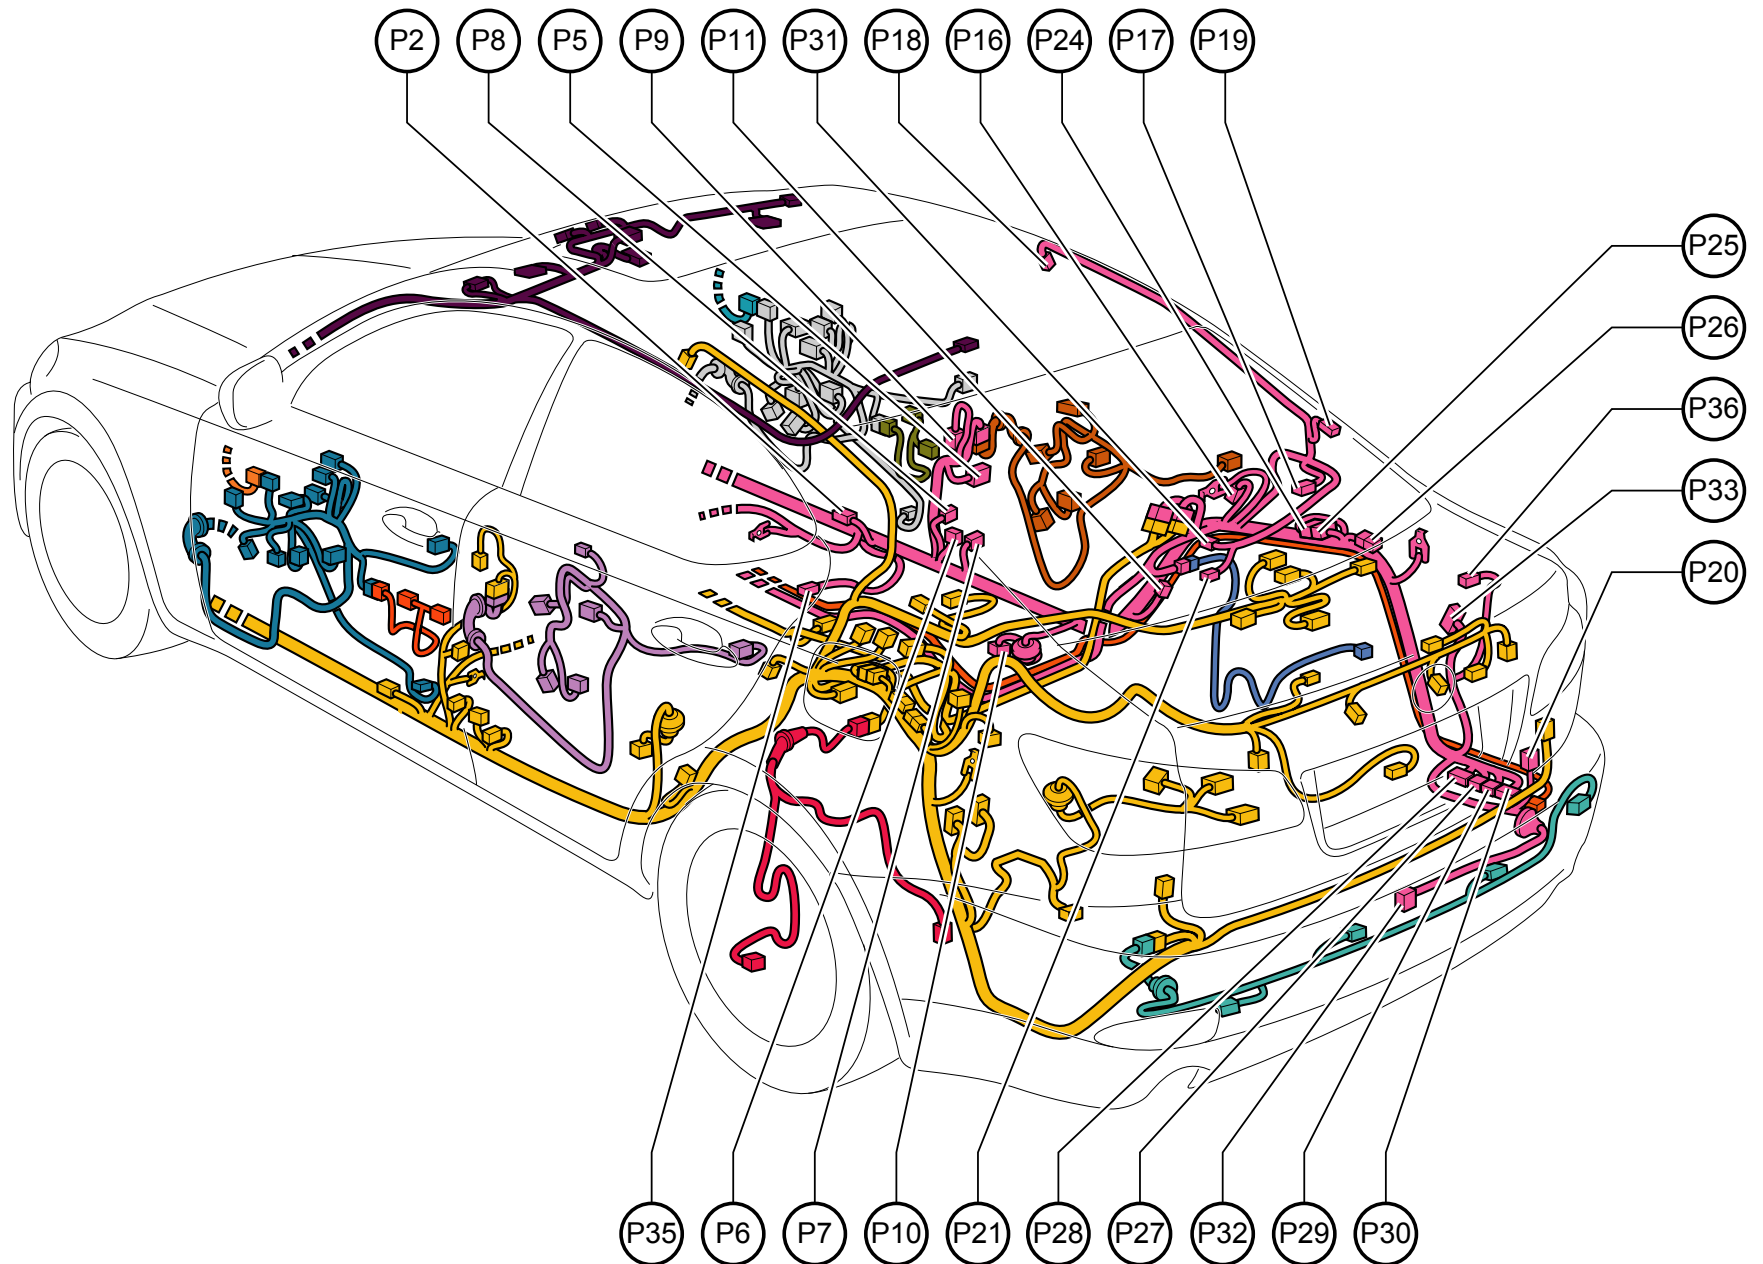

- P 2 Outer Scuff Lamp (RH)
- P 5 Side Airbag Sensor (Front RH)
- P 6 Pretensioner (Front RH)
- P 7 Front Seat Outer Belt (RH)
- P 8 Front Seat Outer Belt Motor (RH)
- P 9 Door Courtesy SW (Front RH)
- P 10 Fuel Sender Gage (Sub)
- P 11 Side Airbag Sensor (Rear RH)
- P 16 Door Courtesy SW (Rear RH)
- P 17 Pretensioner (Rear RH)
- P 18 Curtain Shield Airbag Squib (RH)
- P 19 Rear Window Defogger
- P 20 Electrical Key Antenna
- P 21 Speaker (Subwoofer)
- P 24 Junction Connector
- P 25 Junction Connector
- P 26 Junction Connector
- P 27 Stereo Component Amplifier
- P 28 Stereo Component Amplifier
- P 29 Stereo Component Amplifier
- P 30 Stereo Component Amplifier
- P 31 Door Control Receiver
- P 32 Electrical Key Oscillator (Outside Luggage Room)
- P 33 Certification ECU
- P 35 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- P 36 Theft Warning Siren

Position of Parts in Body <RHD>

