



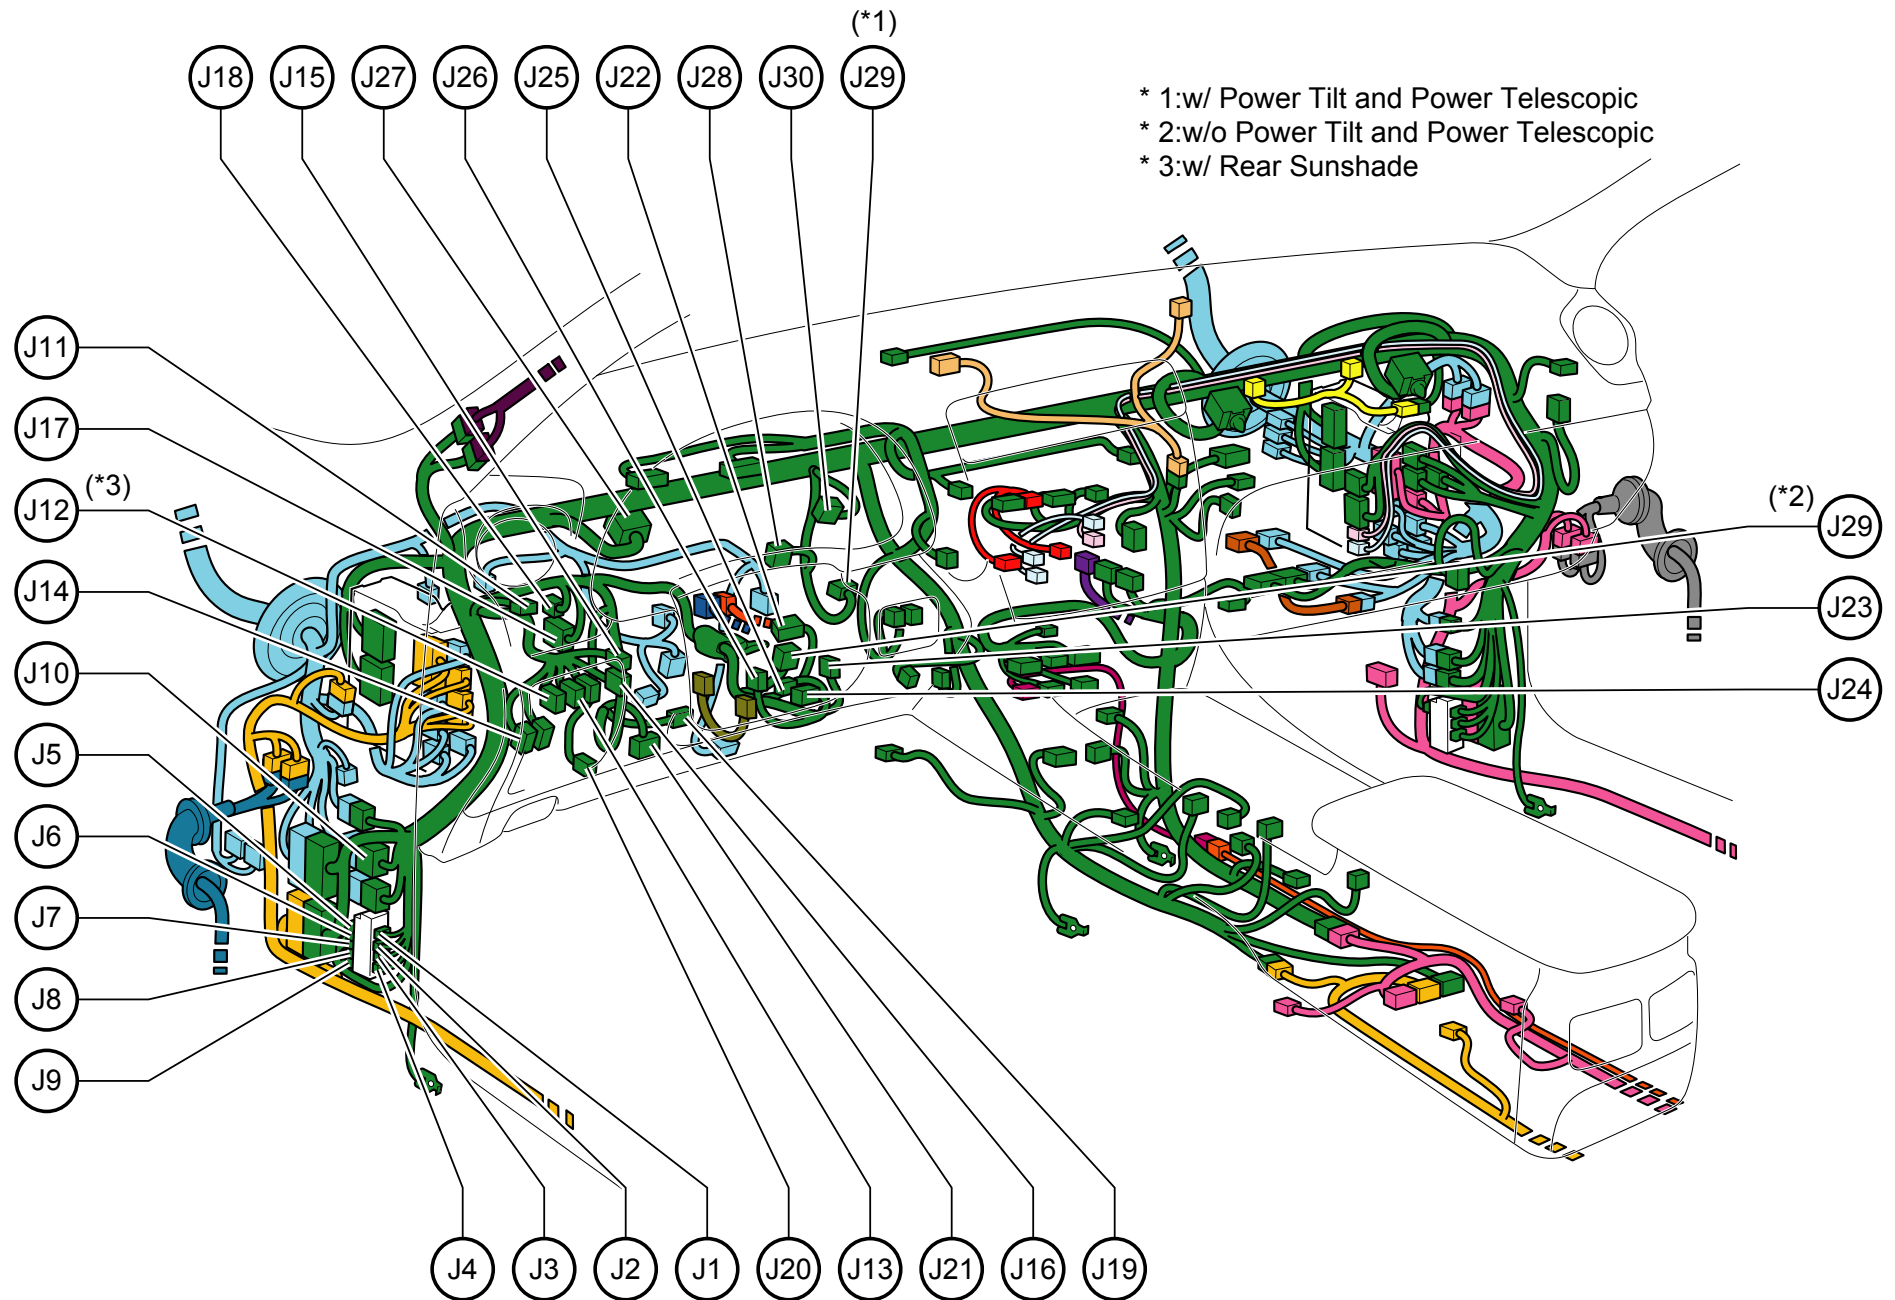


J	1	Junction Connector
J	2	Junction Connector
J	3	Junction Connector
J	4	Junction Connector
J	5	Junction Connector
J	6	Junction Connector
J	7	Junction Connector
J	8	Junction Connector
J	9	Junction Connector
J	10	Junction Connector
J	11	Register Illumination (LH)
J	12	Rear Sunshade SW
J	13	Headlamp Cleaner SW
J	14	Luggage Compartment Door Opener SW
J	15	Light Control Rheostat
J	16	Satellite SW
J	17	Distance Control ECU
J	18	VSC Warning Buzzer
J	19	Foot Lamp (LH)
J	20	Airbag Squib (Driver's Side Knee Airbag)
J	21	DLC3
J	22	Tilt Motor
J	23	Steering Sensor
J	24	Spiral Cable
J	25	Airbag Squib (Steering Wheel Pad)
J	26	Windshield Wiper SW Assembly
J	27	Junction Connector
J	28	Tilt and Telescopic ECU
J	29	Steering Lock ECU
J	30	Turn Signal Flasher

Position of Parts in Instrument Panel <LHD>

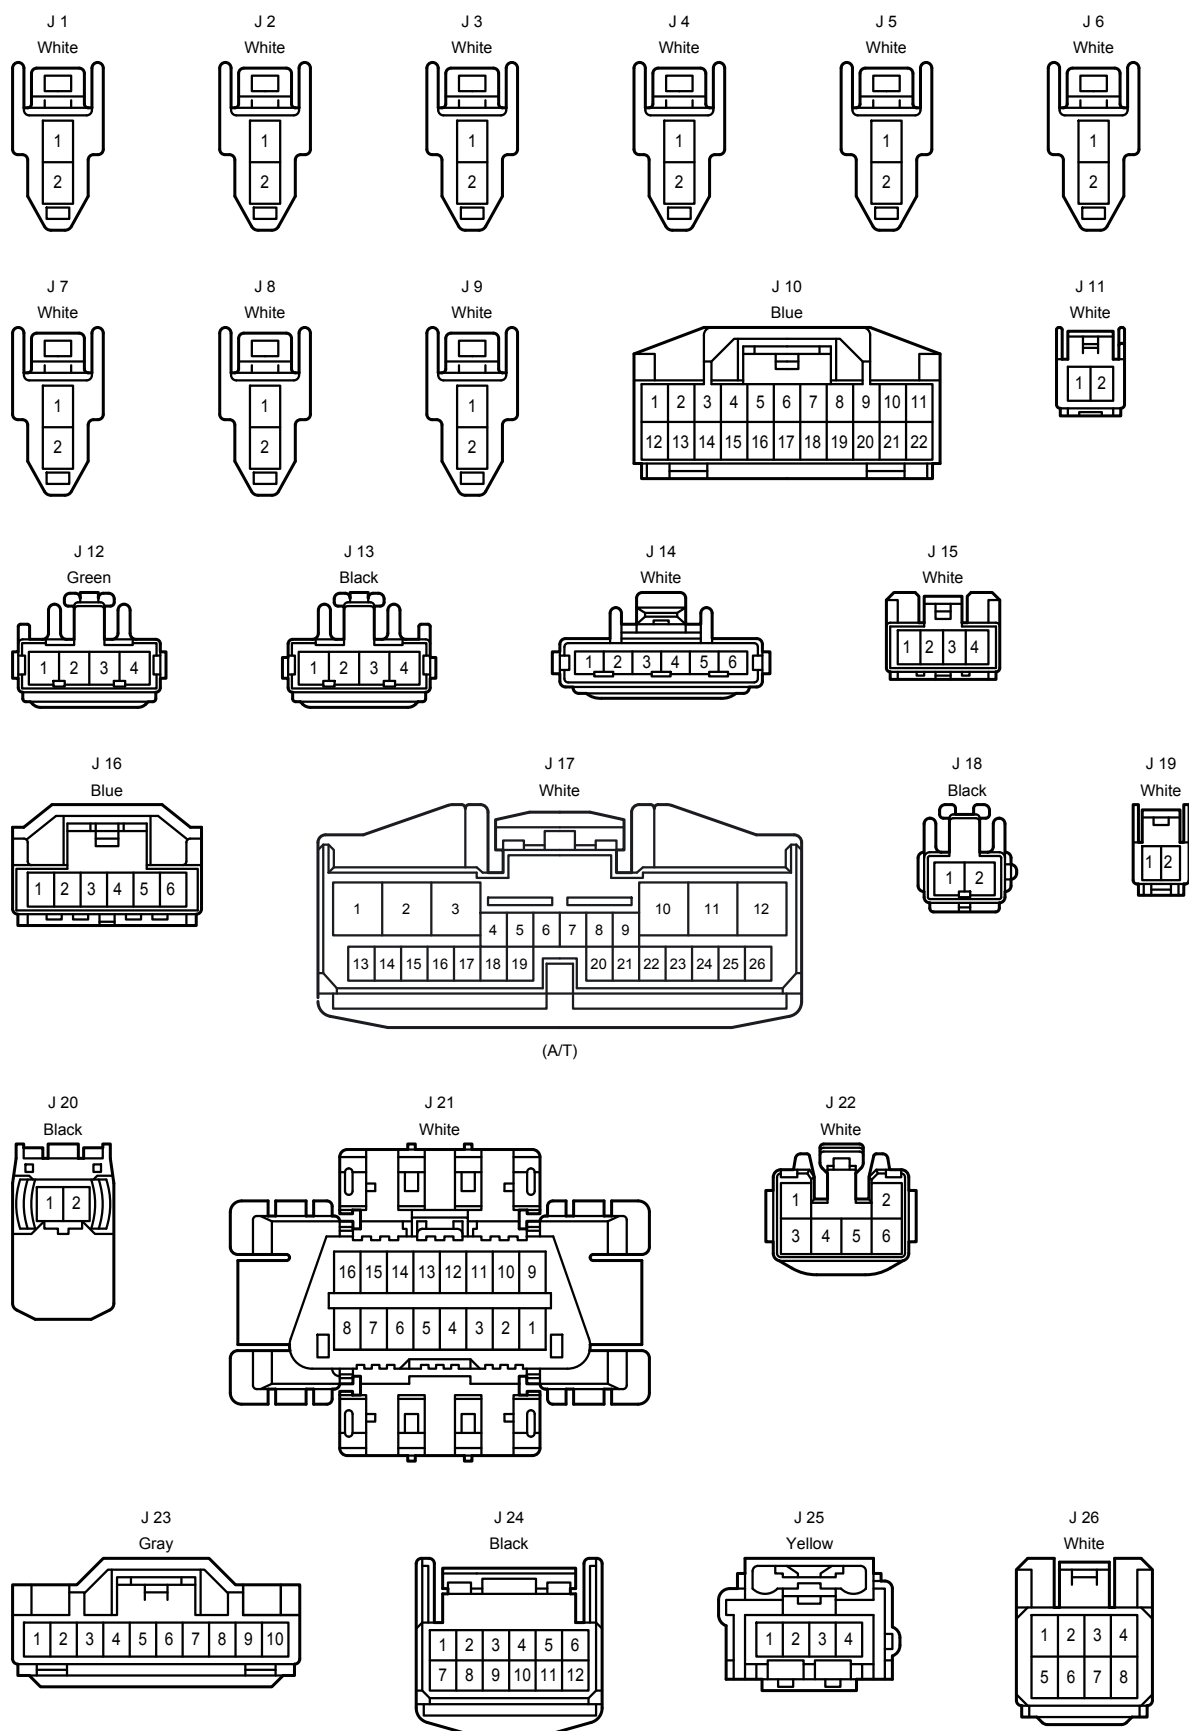


Position of Parts in Instrument Panel <LHD>


J 27
White

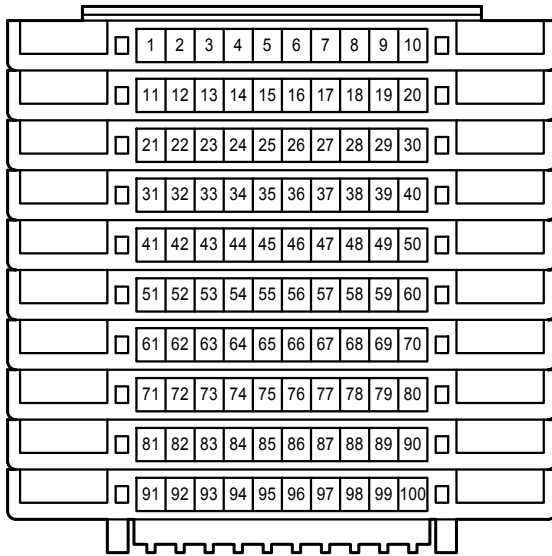

J 28
White

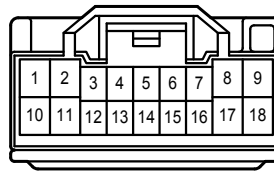

J 29
Black

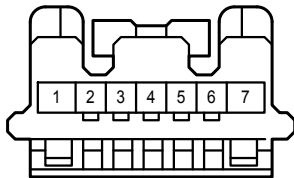

J 30
Blue

