


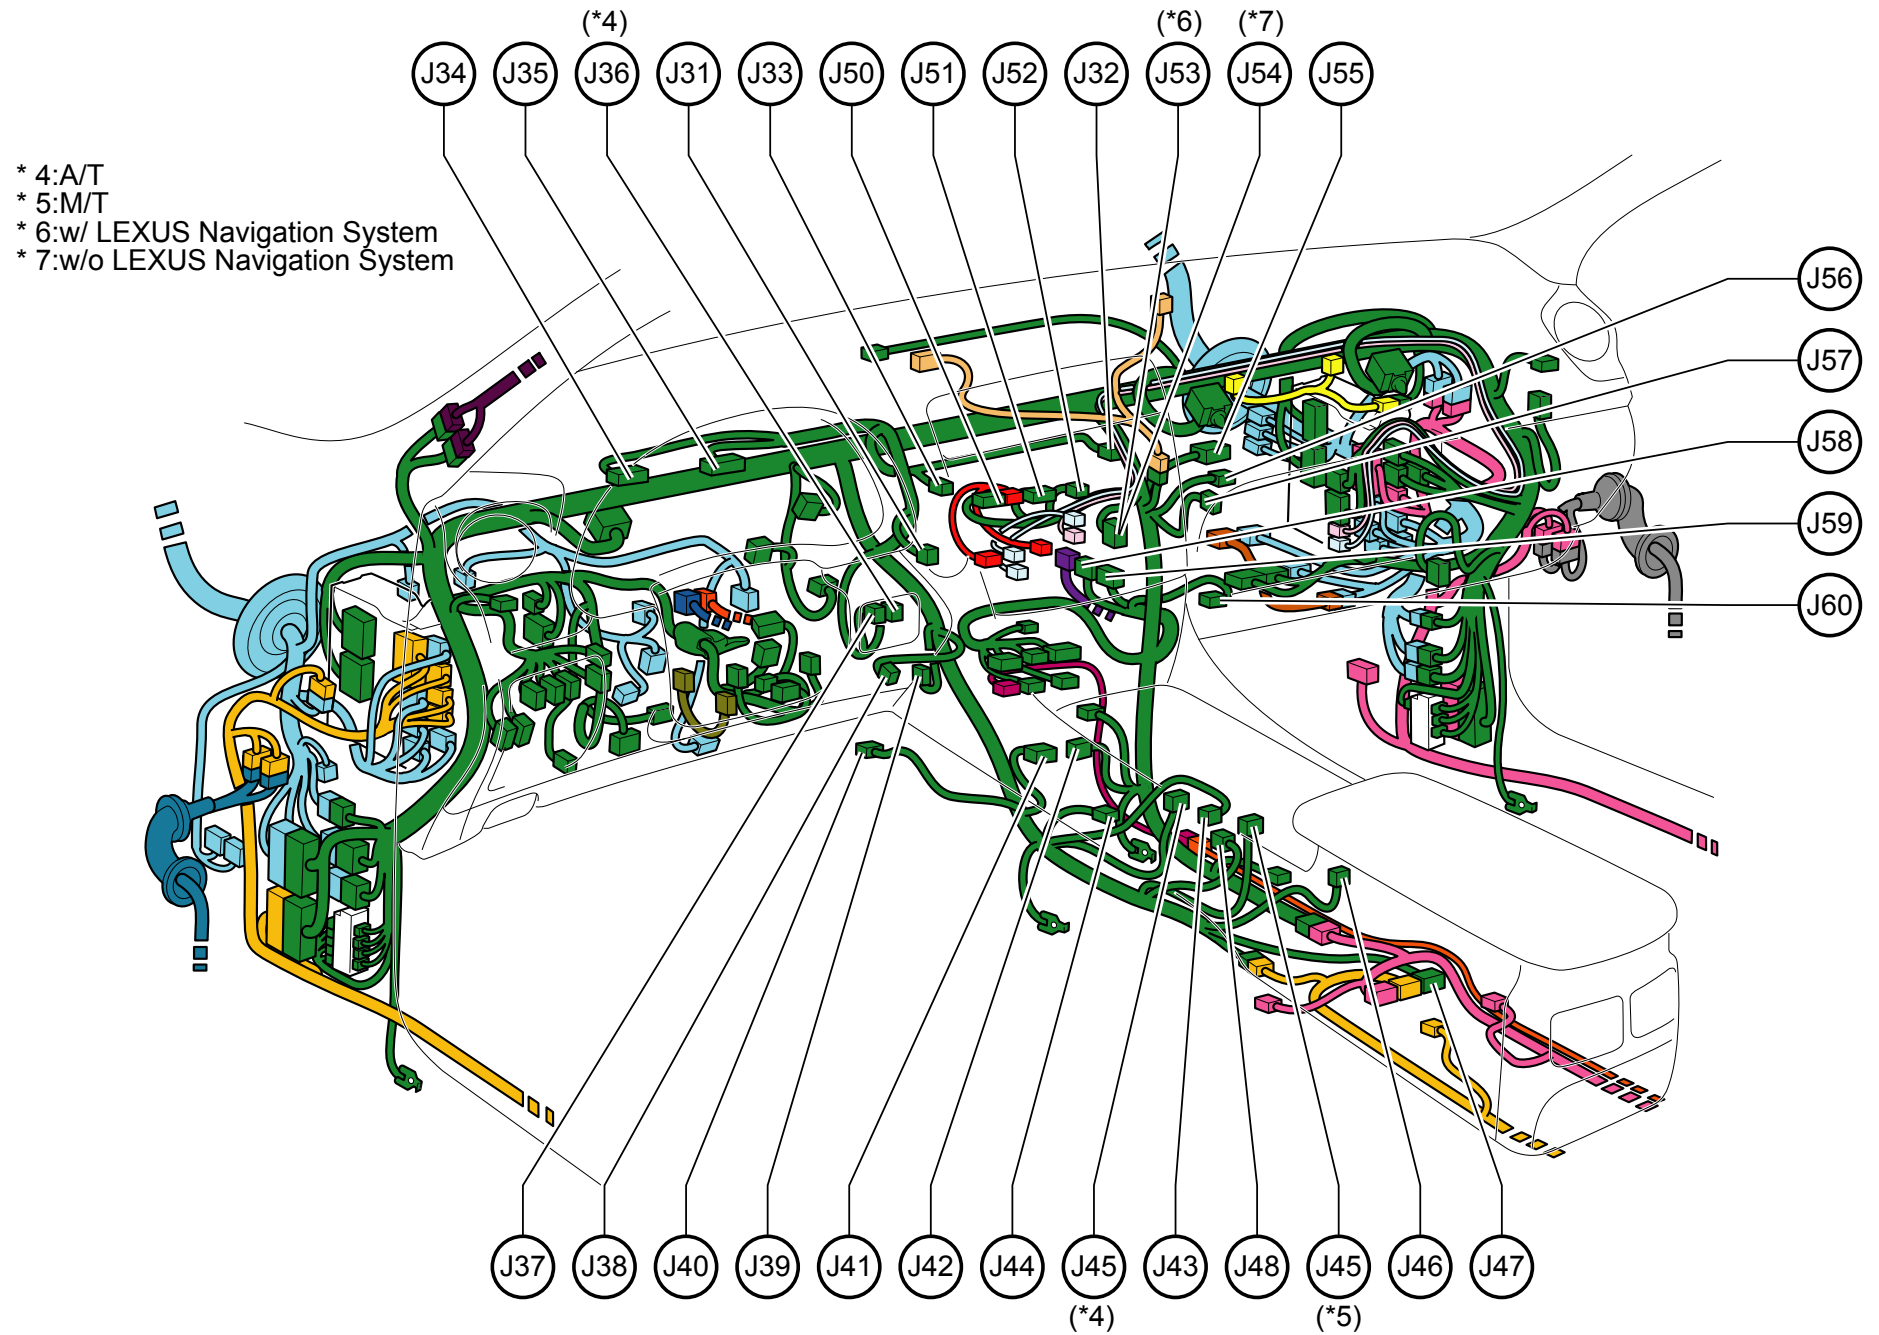

- J 31 Power SW
- J 32 Register Illumination (Center RH)
- J 33 Register Illumination (Center LH)
- J 34 Combination Meter
- J 35 Combination Meter
- J 36 ECT Pattern Select SW
- J 37 Traction Control SW
- J 38 A/C Room Temp. Sensor
- J 39 Clearance Warning Buzzer
- J 40 Heated Oxygen Sensor (Bank 2 Sensor 2)
- J 41 Yaw Rate Sensor
- J 42 Cigarette Lighter
- J 43 Transmission Control SW
- J 44 A/T Shift Lever Illumination
- J 45 Seat Heater SW
- J 46 Console Box Lamp
- J 47 Airbag Sensor Assembly Center
- J 48 Shift Lock Control ECU
- J 50 Multi-Display
- J 51 Multi-Display
- J 52 Multi-Display
- J 53 Clock Assembly
- J 54 Integration Control and Panel Assembly
- J 55 Power Source Control ECU
- J 56 Glove Box Lamp
- J 57 Luggage Compartment Door Opener SW (Main)
- J 58 A/C Amplifier
- J 59 A/C Amplifier
- J 60 Foot Lamp (RH)

Position of Parts in Instrument Panel <LHD>

