


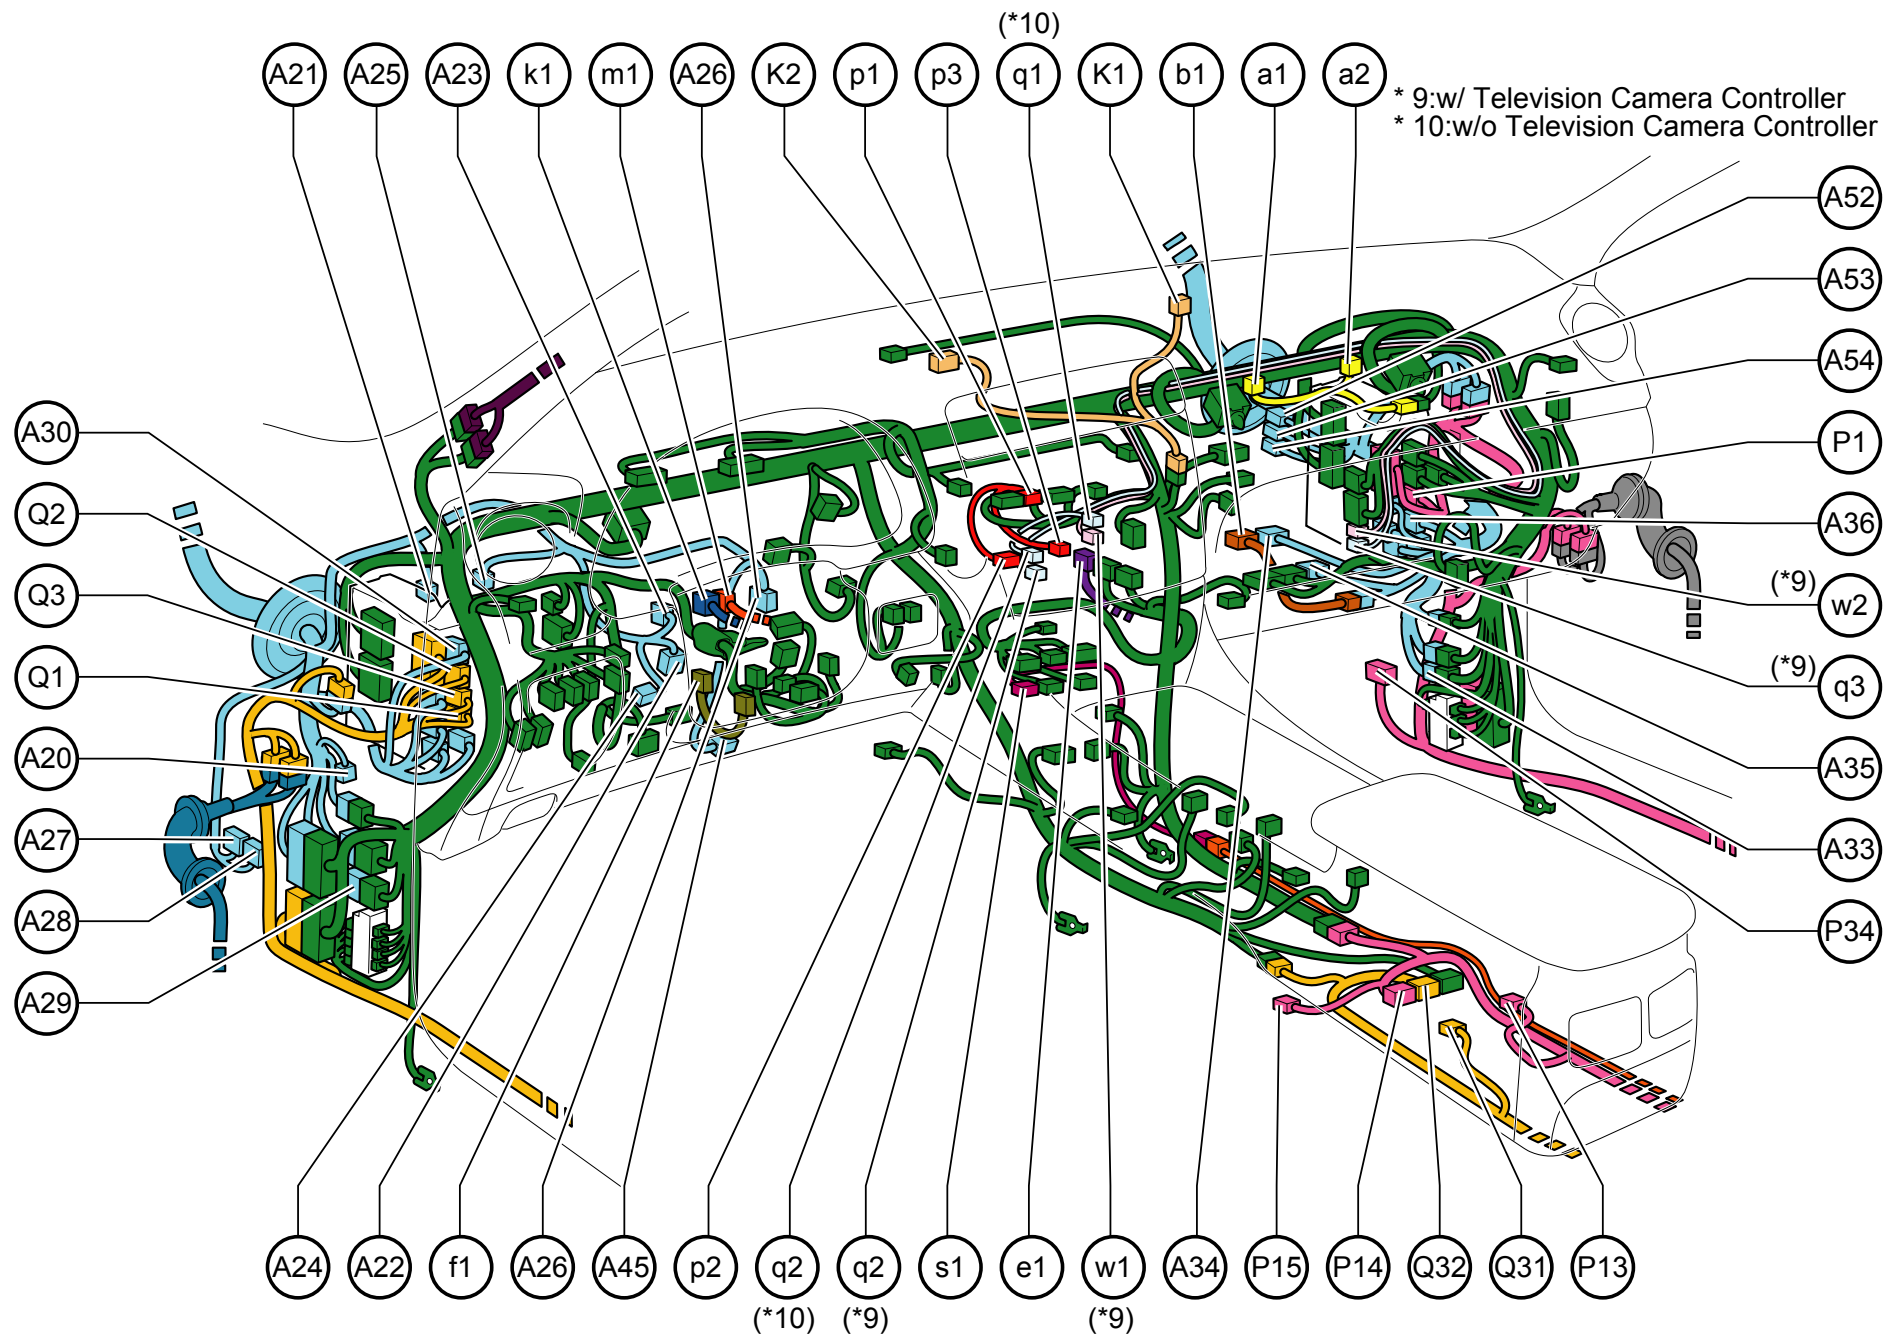

- A 20 Junction Connector
- A 21 Cruise Control Clutch SW
- A 22 Stop Lamp SW
- A 23 Brake Pedal Road Sensing SW
- A 24 Clutch Start SW
- A 25 Parking Brake SW
- A 26 Accelerator Position Sensor
- A 27 Headlamp Swivel ECU
- A 28 Headlamp Swivel ECU
- A 29 Junction Connector
- A 30 Body ECU (Cowl Side J/B LH)
- A 33 Junction Connector
- A 34 Blower Motor
- A 35 Skid Control ECU
- A 36 Body ECU (Cowl Side J/B RH)
- A 45 Kick Down SW
- A 52 Power Heater Resistor No.1
- A 53 Power Heater Resistor No.2
- A 54 Diode (Power Heater)

- K 1 Automatic Light Control Sensor
- K 2 Speaker (Center)

- P 1 Body ECU (Cowl Side J/B RH)
- P 13 Power Outlet Socket
- P 14 Airbag Sensor Assembly Center
- P 15 Electrical Key Oscillator (Console)
- P 34 Double Door Lock ECU

- Q 1 Body ECU (Cowl Side J/B LH)
- Q 2 Body ECU (Cowl Side J/B LH)
- Q 3 Body ECU (Cowl Side J/B LH)
- Q 31 Stereo Jack Adapter
- Q 32 Airbag Sensor Assembly Center

- a 1 Airbag Squib (Front Passenger's Airbag Assembly)
- a 2 Airbag Squib (Front Passenger's Airbag Assembly)

- b 1 Blower Motor

- e 1 A/C Amplifier , A/C Blower Assembly

- f 1 Windshield Wiper SW Assembly , Headlamp Dimmer SW Assembly

- k 1 Spiral Cable , Steering Pad SW

- m 1 Spiral Cable , Cruise Control SW

- p 1 Multi-Display
- p 2 Multi-Media Module Navigation Assembly
- p 3 Multi-Media Module Navigation Assembly


 
 
 
 
 










 
 

 
 
- q 1 Multi-Display
- q 2 Multi-Media Module Navigation Assembly
- q 3 Television Camera Controller

- s 1 Radio Receiver Assembly

- w 1 Multi-Display

w 2 Television Camera Controller

Position of Parts in Instrument Panel <LHD>

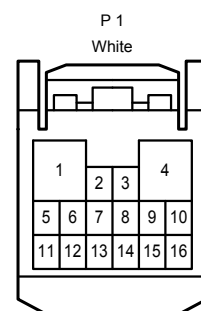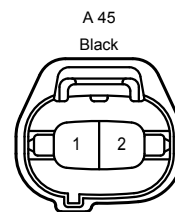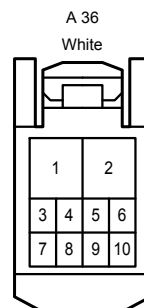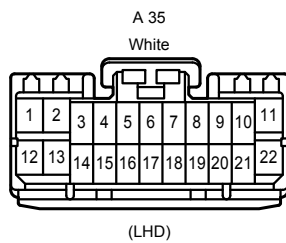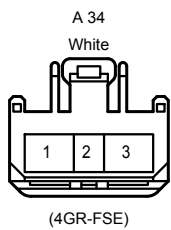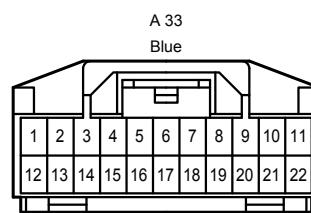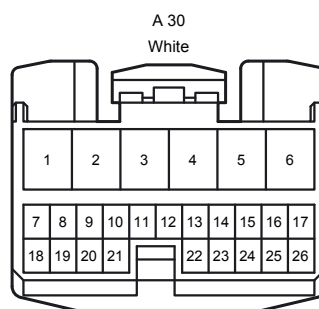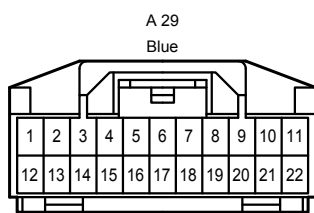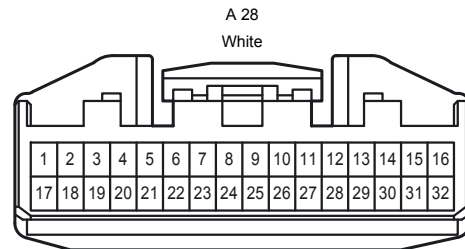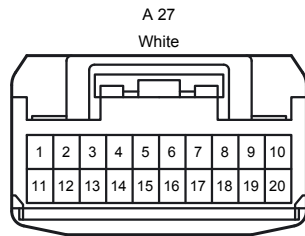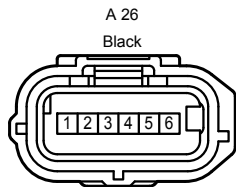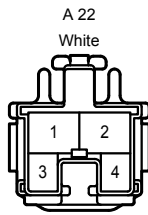

Position of Parts in Instrument Panel <LHD>

