



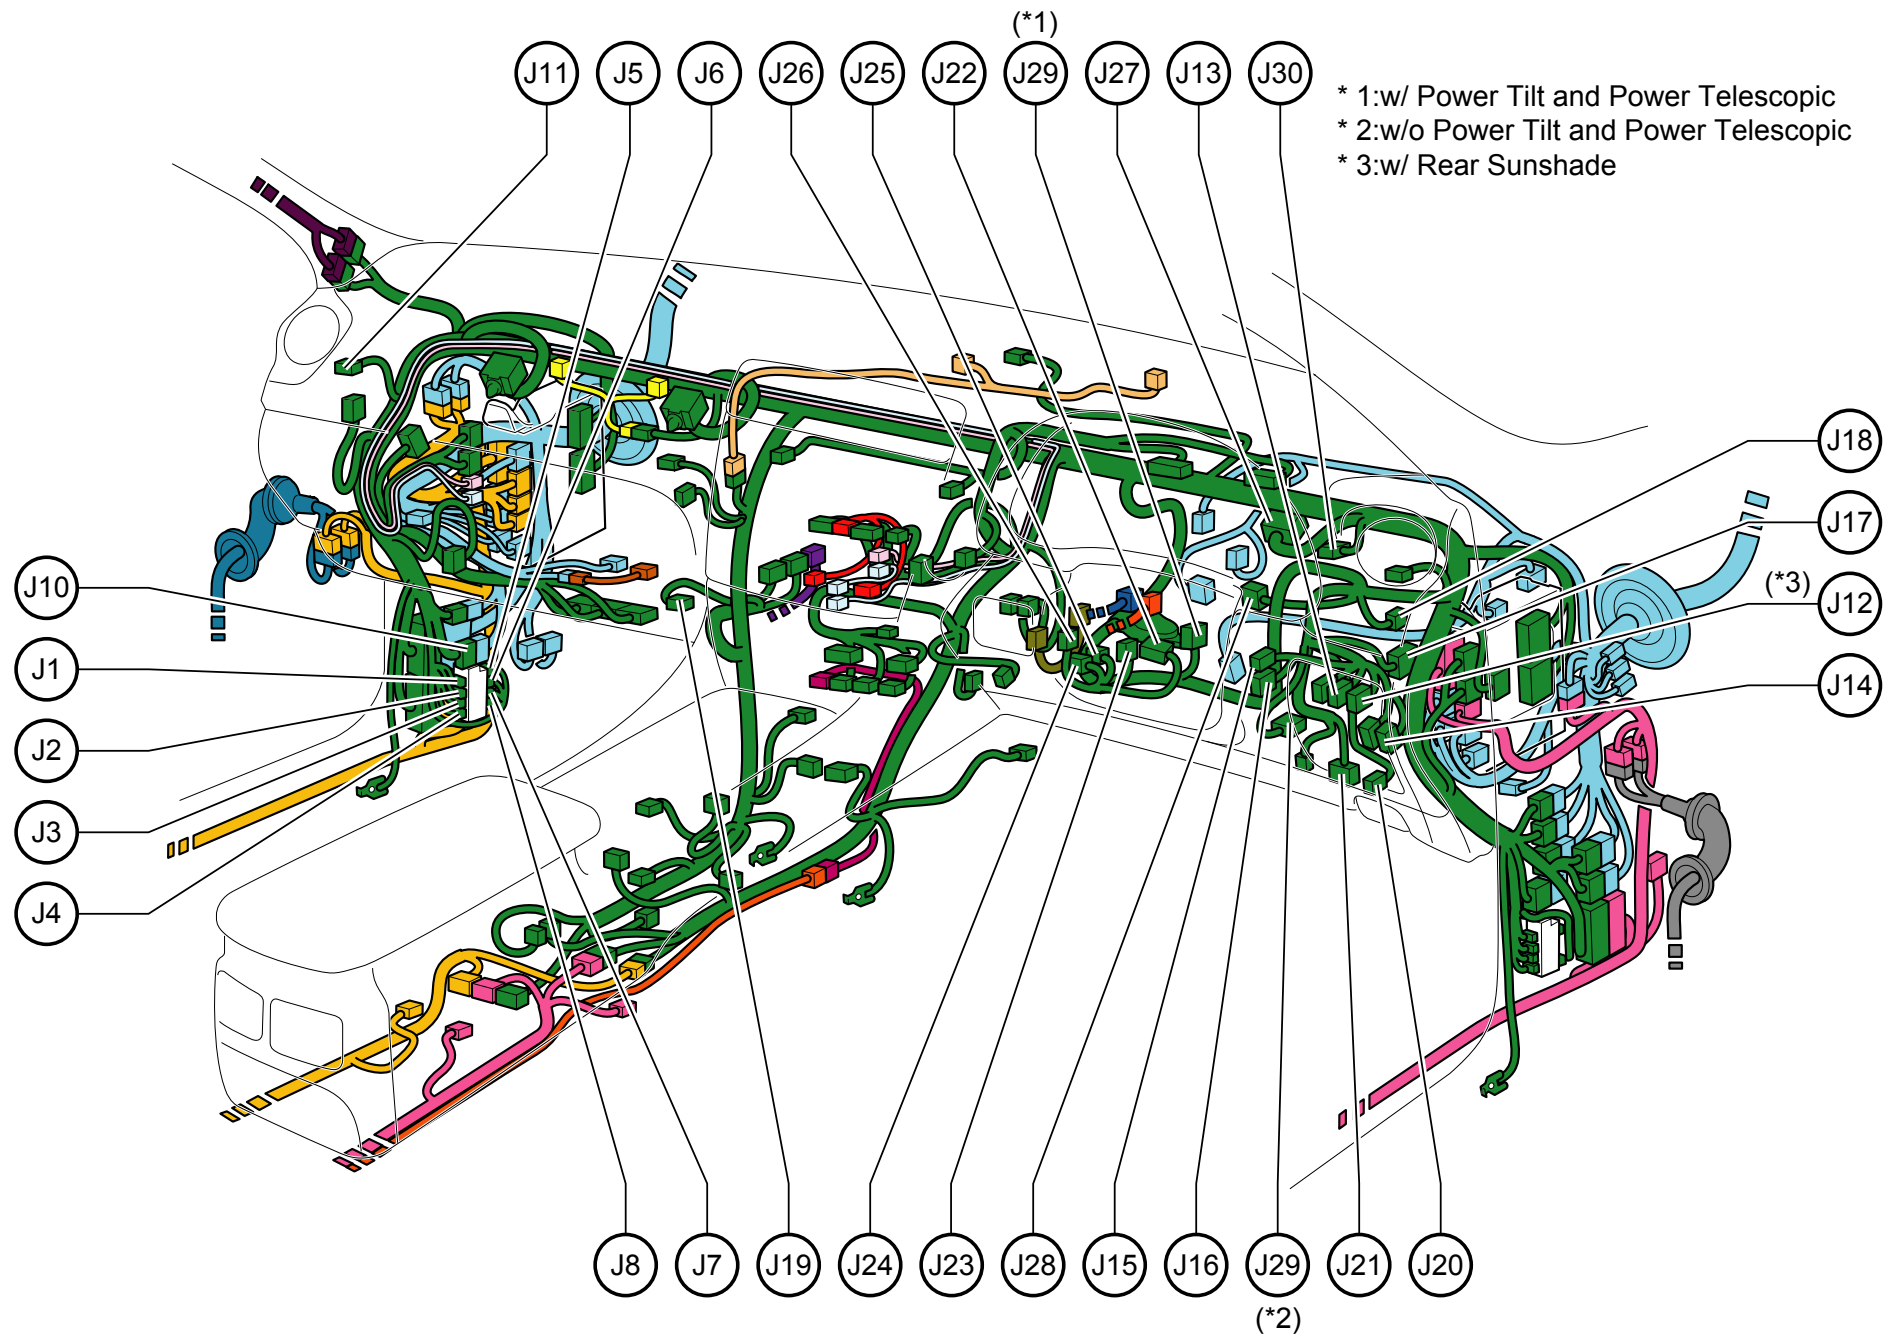


- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector
- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 10 Junction Connector
- J 11 Register Illumination (LH)
- J 12 Rear Sunshade SW
- J 13 Headlamp Cleaner SW
- J 14 Luggage Compartment Door Opener SW
- J 15 Light Control Rheostat
- J 16 Satellite SW
- J 17 Distance Control ECU
- J 18 VSC Warning Buzzer
- J 19 Foot Lamp (LH)
- J 20 Airbag Squib (Driver's Side Knee Airbag)
- J 21 DLC3
- J 22 Tilt Motor
- J 23 Steering Sensor
- J 24 Spiral Cable
- J 25 Airbag Squib (Steering Wheel Pad)
- J 26 Windshield Wiper SW Assembly
- J 27 Junction Connector
- J 28 Tilt and Telescopic ECU
- J 29 Steering Lock ECU
- J 30 Turn Signal Flasher

Position of Parts in Instrument Panel <RHD>

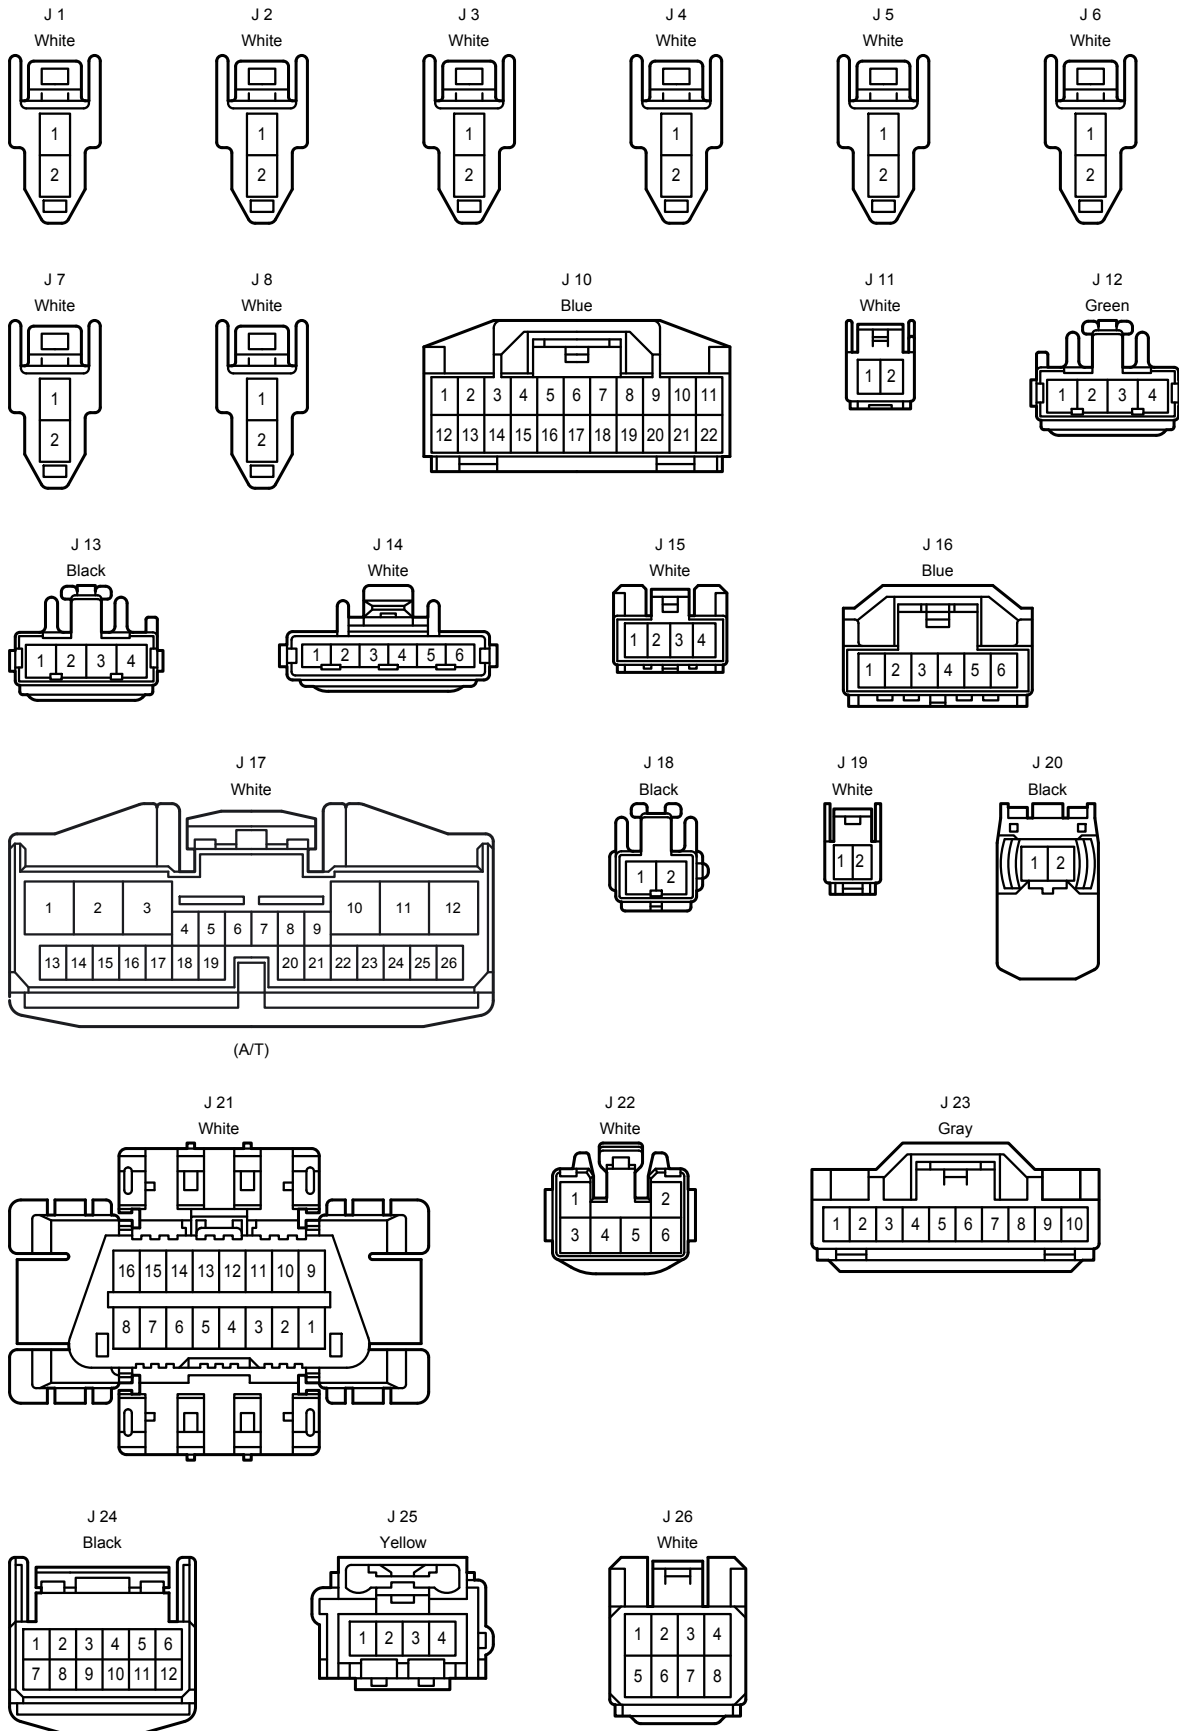


Position of Parts in Instrument Panel <RHD>


J 27
White

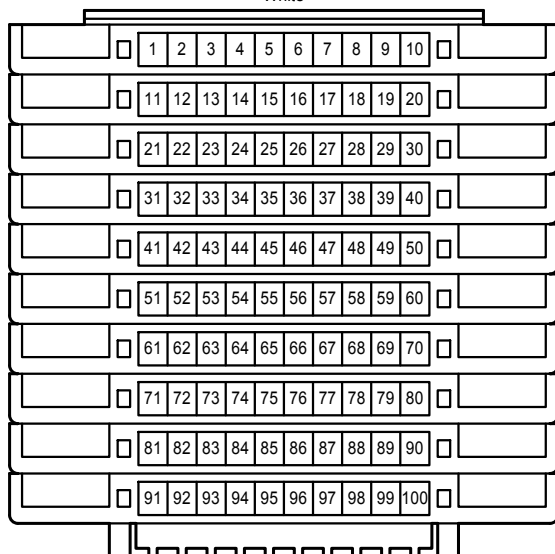

J 28
White

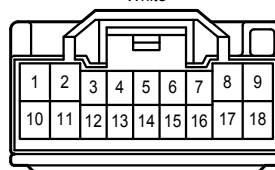

J 29
Black

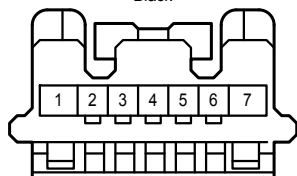

J 30
Blue

