

 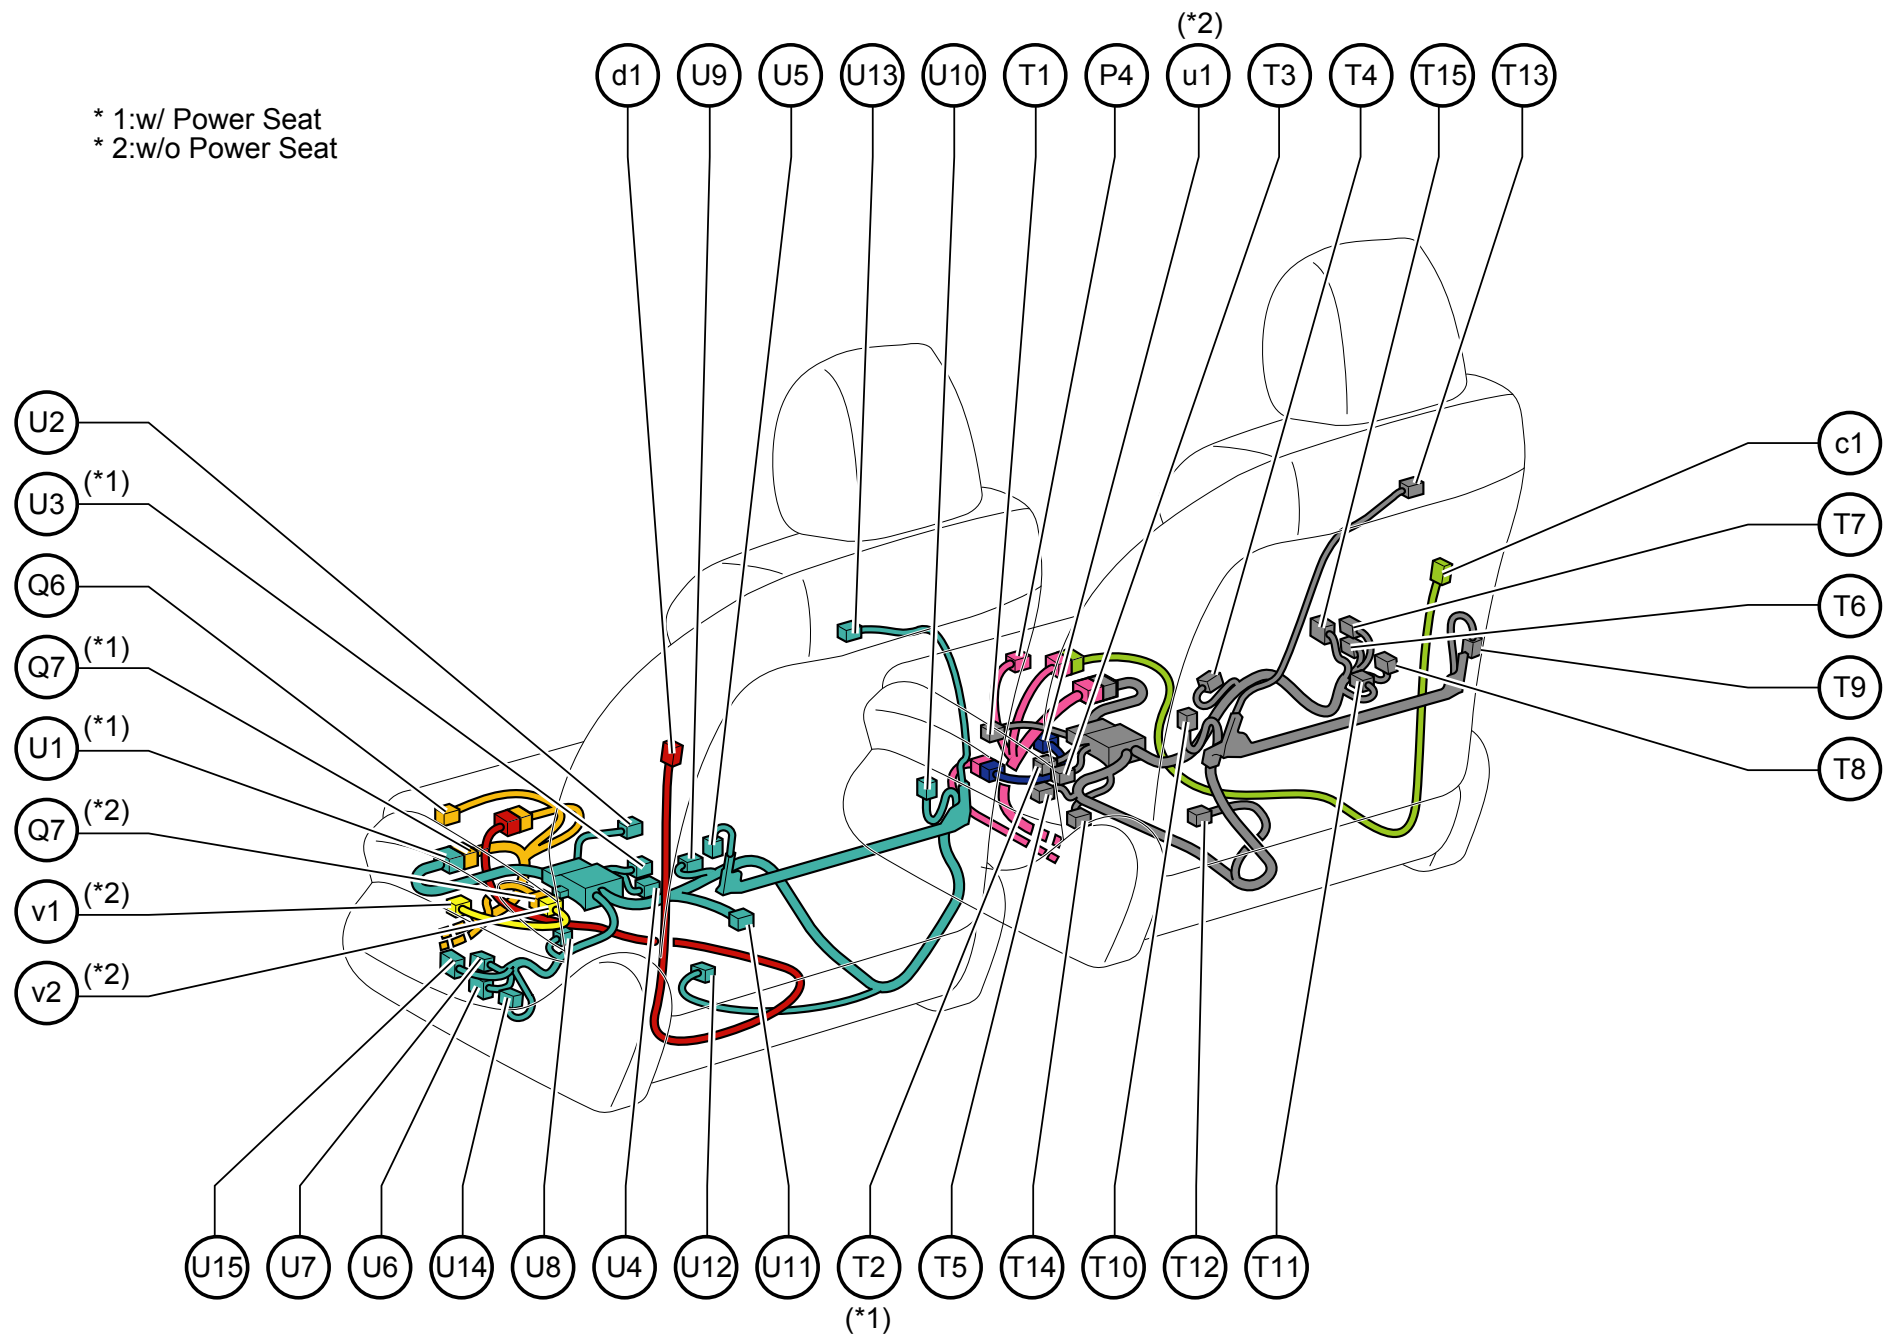
 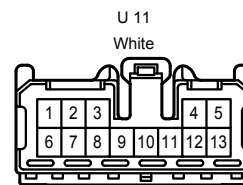
 


 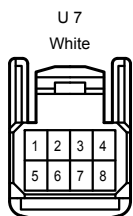
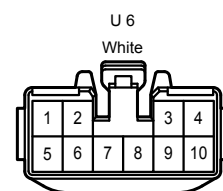

 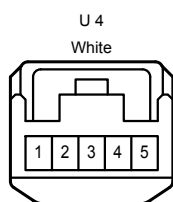
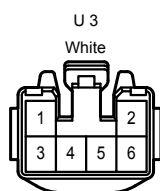

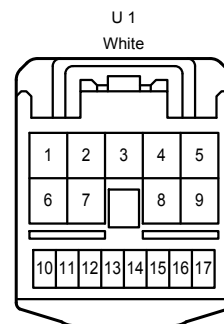
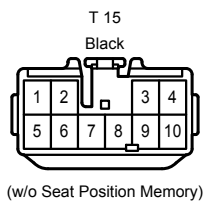
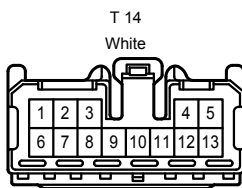
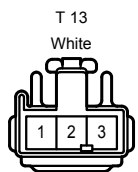
 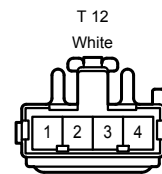
 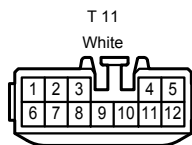


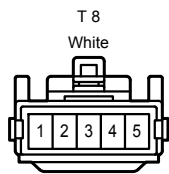
 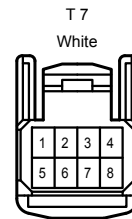
 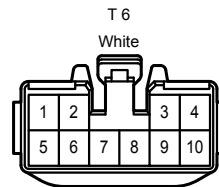


 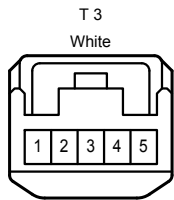
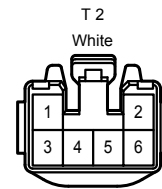




- P 4 Front Seat Inner Belt (RH)
  
- Q 6 Front Seat Inner Belt (LH)
- Q 7 Junction Connector
  
- T 1 Power Seat Motor (Front RH Seat Slide Control)
- T 2 Seat Heater (RH)
- T 3 Front Seat Inner Belt (RH)
- T 4 Power Seat Motor (Front RH Seat Front Vertical Control)
- T 5 Power Seat Motor (Front RH Seat Rear Vertical Control)
- T 6 Position Control ECU and SW (Front RH Seat)
- T 7 Position Control ECU and SW (Front RH Seat)
- T 8 Power Seat SW (Front RH Seat Lumbar Support Control)
- T 9 Power Seat Motor (Front RH Seat Reclining Control)
- T 10 Power Seat Motor (Front RH Seat Lumbar Support Control)
- T 11 Junction Connector
- T 12 Seat Climate Control Blower (Front RH Seat Cushion)
- T 13 Seat Climate Control Blower (Front RH Seat Back)
- T 14 Junction Connector
- T 15 Power Seat SW (Front RH Seat)
  
- U 1 Junction Connector
- U 2 Power Seat Motor (Front LH Seat Slide Control)
- U 3 Seat Heater (LH)
- U 4 Front Seat Inner Belt (LH)
- U 5 Power Seat Motor (Front LH Seat Reclining Control)
- U 6 Position Control ECU and SW (Front LH Seat)
- U 7 Position Control ECU and SW (Front LH Seat)
- U 8 Power Seat Motor (Front LH Seat Front Vertical Control)
- U 9 Power Seat Motor (Front LH Seat Rear Vertical Control)
- U 10 Power Seat Motor (Front LH Seat Lumbar Support Control)
- U 11 Junction Connector
- U 12 Seat Climate Control Blower (Front LH Seat Cushion)
- U 13 Seat Climate Control Blower (Front LH Seat Back)
- U 14 Power Seat SW (Front LH Seat Lumbar Support Control)
- U 15 Power Seat SW (Front LH Seat)
  
- c 1 Side Airbag Squib (Front RH)
  
- d 1 Side Airbag Squib (Front LH)
  
- u 1 Seat Heater (RH)
  
- v 1 Seat Heater (LH)
- v 2 Junction Connector

# Position of Parts in Seat <RHD>

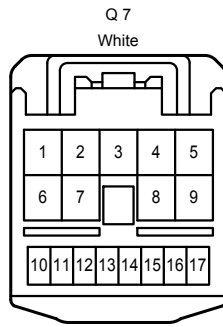

Position of Parts in Seat <RHD>

