


■ MANUAL HEADLIGHT BEAM LEVEL CONTROL SYSTEM

1. General

When the vehicle posture is changed in accordance with the number (weight) of passengers and volume of luggage, this system enable to adjust the Lo beam level (5-step) of the headlamps manually to the appropriate level controlled by headlight beam level control switch.


- The beam level of the headlamps can be adjusted with the headlight level actuators that are integrated in the headlight units.

► System Diagram ◀

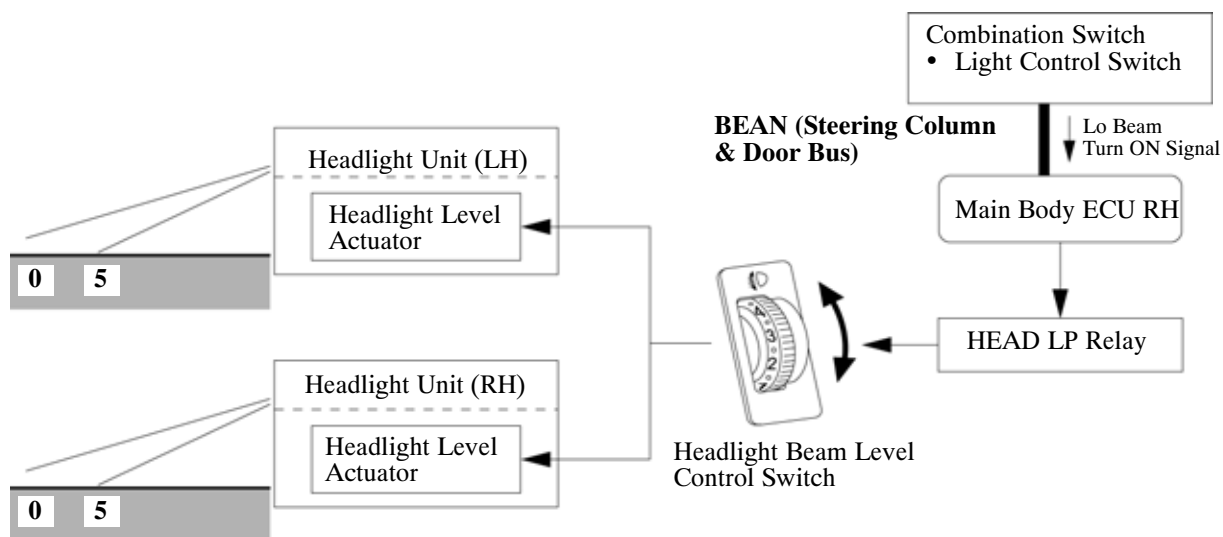

0150BE11C

2. Layout of Main Component

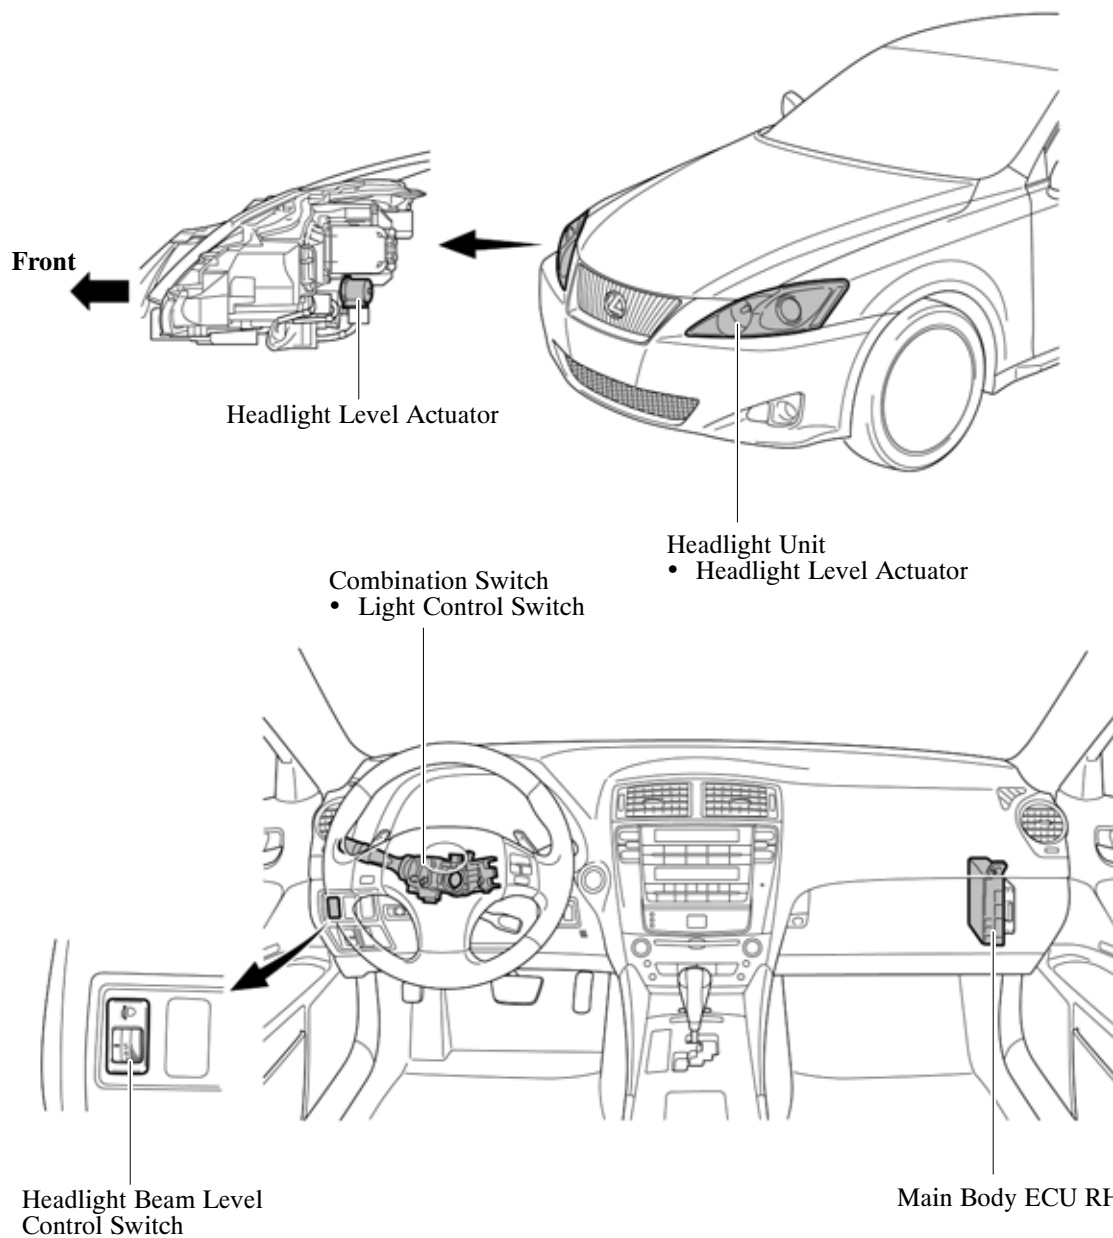

BE