

■ ILLUMINATED ENTRY SYSTEM

1. General

The illuminated entry system has the following seven control functions:


Control	Operation	Outline	Lights that Operate
Actuation Area-linked	Turn ON	When the key enters any actuation area around the doors, the front and rear seat illuminations turn on.	• Front Seat Illumination • Rear Seat Illumination • Foot Lights
Transmitter-linked	Turn ON	When the following condition is satisfied, the lights that operate turn on. • Any door is unlocked using the transmitter.	• Front Seat Illumination • Rear Seat Illumination • Foot Well Illumination • Foot Lights
Door Open-linked	Turn ON	The lights that operate turn on when the following condition is present. • Any door is opened.	• Engine Switch Illumination • Front Interior Light • Rear Interior Light • Scuff Plate Illumination • Door Courtesy Light • Foot Well Illumination*3
Door Close-linked	Turn OFF*1	When the following condition is satisfied, the lights that operate turn off. • All doors are closed.	• Front Seat Illumination • Rear Seat Illumination • Engine Switch Illumination • Front Interior Light • Rear Interior Light • Scuff Plate Illumination • Door Courtesy Light • Foot Well Illumination • Foot Lights
Door Lock-linked	Turn OFF*2	When the following condition is satisfied, the operation lights turn OFF. • All doors are locked.	
Power Source-linked	Turn ON	When the following condition is satisfied, the shift illumination turns on. • Power source is changed from OFF to ACC or IG-ON.	• Shift Illumination
	Turn OFF*2	When the following condition is satisfied, the lights that operate turn off. • Power source is changed from OFF to ACC or IG-ON.	• Front Seat Illumination • Rear Seat Illumination • Engine Switch Illumination • Front Interior Light • Rear Interior Light • Scuff Plate Illumination • Door Courtesy Light • Foot Lights
Battery Saving	Turn OFF	When the following two conditions have been met, these lights turn off. • A key is not in the actuation area. • There are no changes in the condition of the doors for 20 minutes.	

*1: Illuminates for approximately 15 seconds, fades out (approximately three seconds) and goes off.

*2: Stops the illumination, starts to fade out immediately (approximately three seconds) and goes off.

*3: The foot well illumination turns on only when the front interior light switch is off.

► System Diagram ◀

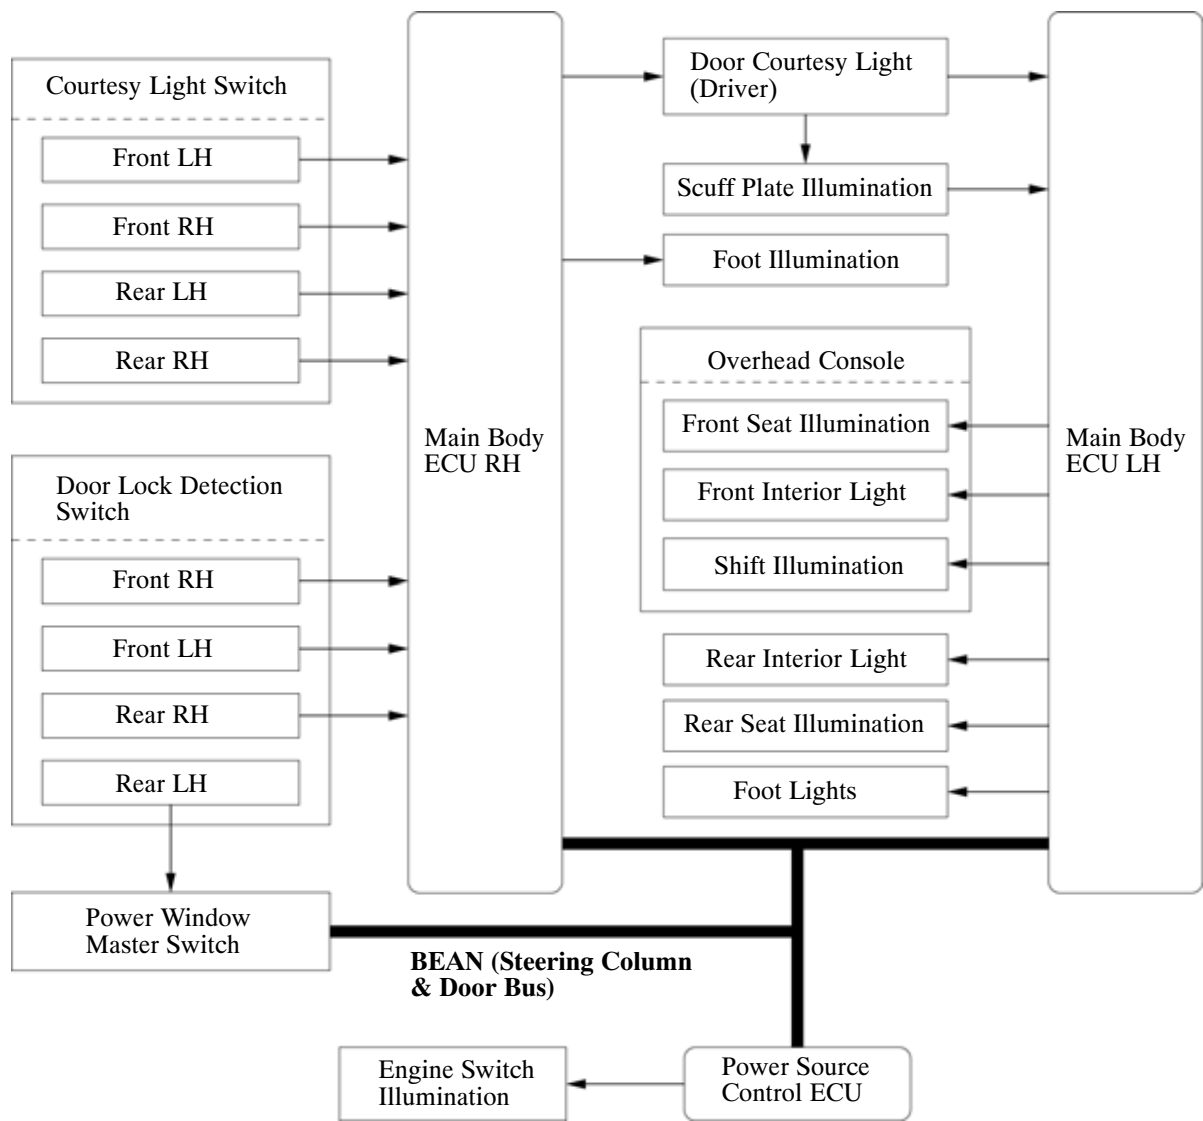

BE

2. Layout of Main Component

Overhead Console Module

