

■ HEADLIGHT CLEANER SYSTEM


1. General

The headlight cleaner system sprays washer fluid on the headlight lenses to wash the dirt off them.

- This system is optional equipment on the all models.
- The headlight cleaner relay controls this system.
- The headlight cleaner system operates as follows:

Headlight	Headlight Cleaner Switch	Washer Switch	
	ON	ON (First Time)	ON (Second Time or more)
Turn ON	Activated	Activated	Not Activated
Turn OFF	Not Activated	Not Activated	Not Activated
DRL Operation	Not Activated	Not Activated	Not Activated


► System Diagram ◀

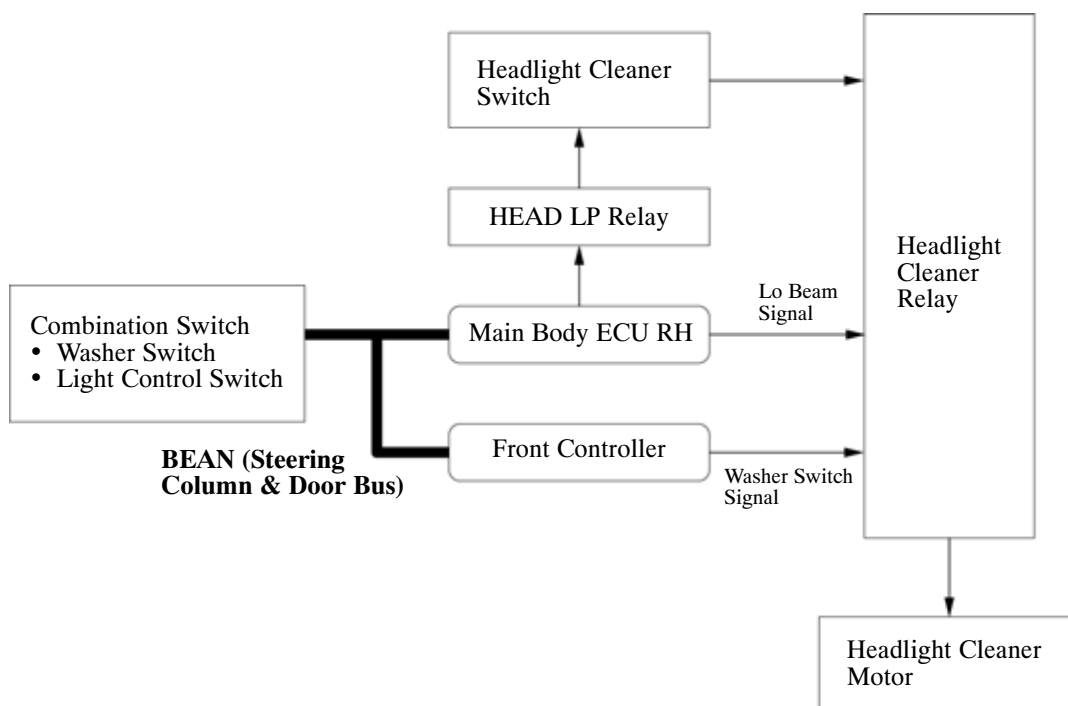

0140BE32C


2. Layout of Main Component

Engine Room R/B No. 1

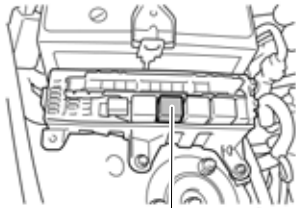

HEAD LP Relay

Engine Room R/B No. 2

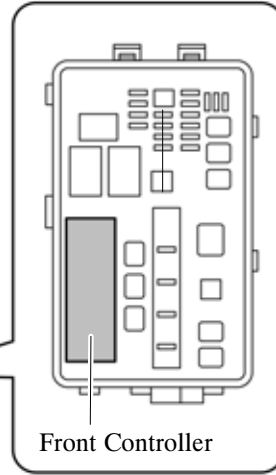

Front Controller

Headlight Cleaner
Nozzle




Headlight Cleaner Nozzle

Headlight Cleaner Relay

Headlight Cleaner Motor

Combination Switch
• Washer Switch
• Light Control Switch

0140BE33Z

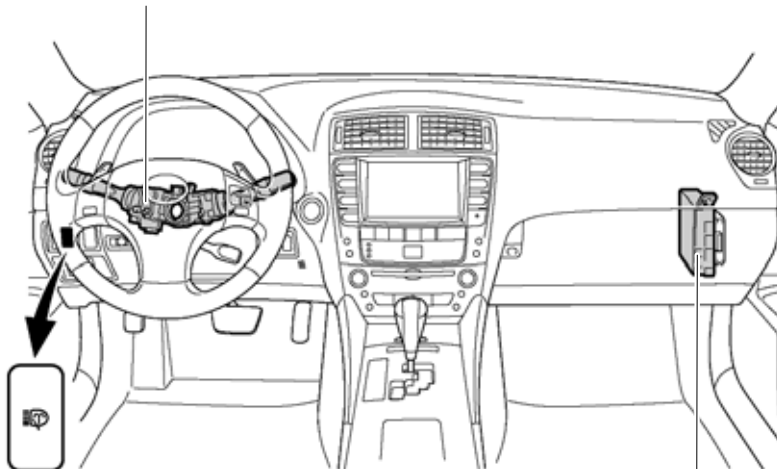

Headlight Cleaner Switch

Main Body ECU RH

0140BE34Z