


■ MODE POSITION AND DAMPER OPERATION

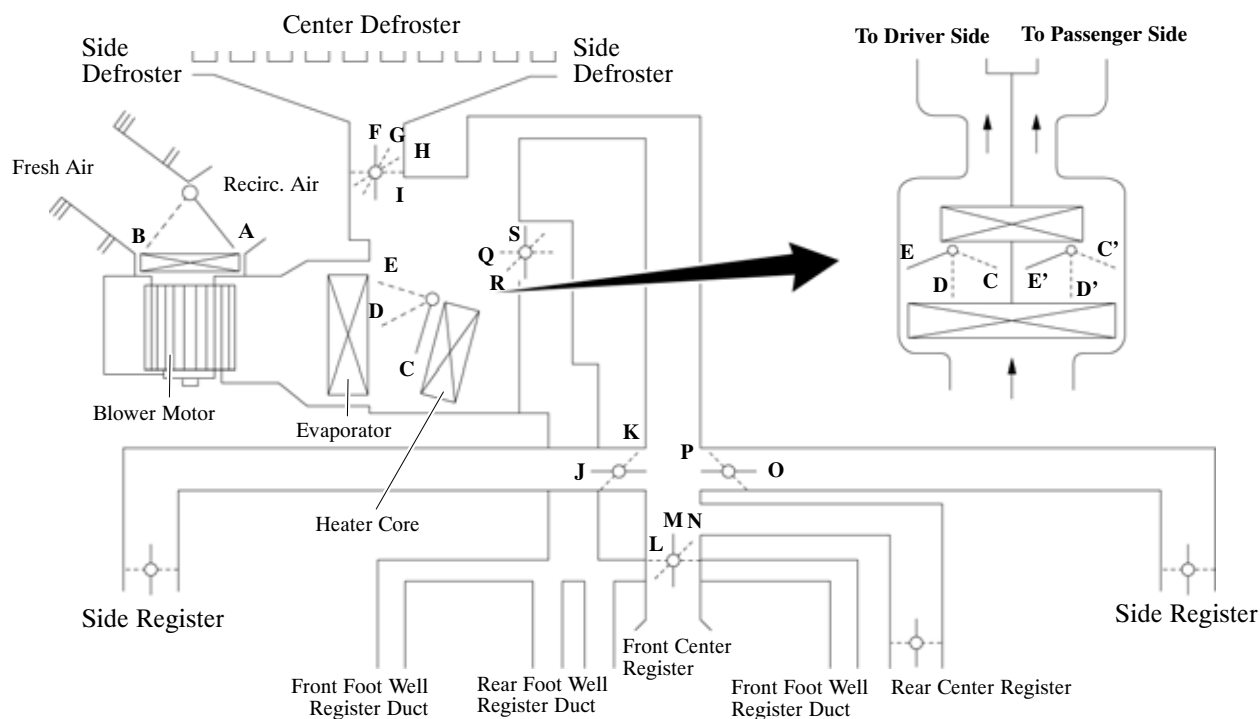

0140BE228C

► Function of Main Damper ◀

Control Damper	Operation Position	Damper Position	Operation
Air Inlet Control Damper	FRESH	A	Allows fresh air to enter.
	RECIRC	B	Causes internal air to recirculate.
Air Mix Control Damper	MAX COLD to MAX HOT Temperature Setting	C - D - E (C' - D' - E')	Varies the mixture ratio of the hot air and the cold air in order to regulate the temperature continuously between HOT and COLD.
Air Vent Control Damper	 DEF 187BE28	F, K, L, P, S	Defrosts the windshield through the center defroster, side defroster, side register, and rear center register.
	 FOOT/DEF 187BE27	G, K, L, P, Q	Defrosts the windshield through the center defroster, side defroster, side register, and rear center register, and also allows air to be blown out from the front and rear foot well register ducts.
	 FOOT 187BE26	H, K, L, P, Q	Air blows out of the foot well register duct, and side register. In addition, a small amount of air will blow out from the center defroster and side defroster.
	 BI-LEVEL 187BE25	I, K, N, P, R	Air blows out of the front and rear center registers, side register and front and rear foot well register ducts.
	 FACE 187BE24	I, J, M, O, S	Air blows out of the front and rear center registers, and side register.